

Isuzu truck fault codes list

Code	System	CE
01	Norm	-
11	Speed sensor-operation, breakage or short circuit in circuit	-
13	Limit switch idling-operation, breakage or short circuit in circuit	+
14	Coolant temperature sensor-operation, breakage or short circuit in circuit	+
15	Fuel temperature sensor is functioning, open circuit or short circuit in circuit	-
21	Throttle position sensor-open circuit or short circuit in circuit	+
22	Control valve of angle injection-operation, open circuit or short circuit in circuit	+
23	Intake air temperature sensor-operation, breakage or short circuit in circuit	-
24	Absolute pressure sensor in the intake manifold-functioning, open circuit or short circuit in circuit	+
25	Adjustment resistor-open circuit or short circuit in circuit	-
26	Barometric pressure Sensor-operation, breakage or short circuit in circuit	-
27	Fuel supply control valve (FCV)-short circuit on the weight	+
31	Regulator-functioning, open circuit or short circuit in circuit	+
32	Piston position sensor injection machine-operation, breakage or short circuit in circuit	+
33	Limit switch open circuit	+
34	Dosing position sensor coupling-operation, breakage or short circuit in circuit	+
41	Crankshaft rotation speed sensor-operation, breakage or short circuit in circuit	+
42	Backup speed sensor crankshaft	-
44	Electronic control unit-error in memory	+
54	Limit switch machine piston injection (start)-open circuit	+