

List of "equipment" codes

Key to appliances

| Code | Function name | Location |
|------|--|-----------------|
| A001 | Cab electrical distribution box | - |
| A002 | Chassis-cab connection box | - |
| A004 | Batteries | A01 / A20 |
| A006 | Electrically controlled master switch | A01 |
| A009 | Alternator | A01 / A20 |
| A011 | Voltage converter (24V / 12V) for information technology pack | I03 |
| A013 | Voltage converter (24V / 12V - 15A) for audio communication system | I20 |
| A014 | Power fuse box unit (FM1 to FM4) | A01 / A20 |
| A021 | Voltage converter (24 / 12V - 15A) | I03 |
| A200 | Available power supply (insulated cut wires) | J21 |
| A201 | Available power supply (vehicle earth) | H30 / J20 / J21 |
| A204 | Available power supply (after master switch) | J20 / J21 |
| A205 | Available power supply (after ignition) | J20 / J21 |
| A206 | Available power supply (CB +) | I20 |
| A212 | Available power supply (engine speed) | J21 |
| A213 | Available power supply (PTO N°1) | J20 |
| A219 | Available power supply (radio-telephone +) | I20 |
| A220 | Available power supply (radio-telephone -) | I20 |
| A230 | Available power supply (equipment in "road" position warning pictogram) | J20 |
| A231 | Available power supply (equipment in "working" position warning pictogram) | J20 |
| A240 | Available power supply (lighting) | H30 / J20 |
| A245 | Available power supply (lighting and side/parking lights) | H30 |
| A246 | Available power supply (PTO N°1 control) | J20 |
| A247 | Available power supply (alternator information, engine running) | J20 |
| A248 | Available power supply (alternator information, engine speed) | J20 |
| A249 | Available power supply (tachograph corrected speed information) | J20 |
| A250 | Available power supply (PTO 2 control) | J21 |
| A251 | Available power supply (PTO 2 warning light) | J21 |
| A252 | Available power supply (PTO 2 solenoid valve piloting) | J21 |

| | | |
|------|---|-----|
| A253 | Available power supply (reversing information) | J20 |
| A254 | Available power supply (parking brake information) | J20 |
| A255 | Available power supply (gearbox neutral information) | J20 |
| A256 | Available power supply (chassis-mounted engine speed control actuation demand) | J20 |
| A257 | Available power supply (selection of engine speed N°1) | J20 |
| A258 | Available power supply (selection of engine speed N°2) | J20 |
| A259 | Available power supply (engine speed acceleration demand) | J20 |
| A260 | Available power supply (engine speed deceleration demand) | J20 |
| A270 | Available power supply (main engine speed automatic return) | J20 |
| A280 | Available power supply (low speed) | J20 |
| A281 | Available power supply (engine stop control) | J20 |
| A282 | Available power supply (engine start control) | J21 |
| A283 | Available power supply (engine starting information) | J21 |
| A284 | Available power supply (engine alert) | J21 |
| A285 | Available power supply (parameter definable frequency-related output) | J21 |
| A286 | Available power supply (PLC 2 min. output) | J21 |
| A287 | Available power supply (PLC 1 min. output) | J21 |
| A288 | Available power supply (PLC 1 min. input) | J21 |
| A289 | Available power supply (PLC 2 min. input) | J21 |
| A290 | Available power supply (high level CAN bus J1939) | J21 |
| A291 | Available power supply (low level CAN bus J1939) | J21 |
| A294 | Available power supply (LH rear marker light(s)) | J21 |
| A295 | Available power supply (RH rear marker light(s)) | J21 |
| A297 | Available power supply (night lighting) | J21 |
| A303 | Pre-arrangement for onboard management (ECU) | B60 |
| A308 | Pre-arrangement for onboard management (screen and keyboard) | J21 |
| A311 | Available power supply (PTO 1 engaged information) | J20 |
| A312 | Available power supply (equipment in dangerous position) | J20 |
| A313 | Available power supply (CAN bus disabling) | J21 |
| A314 | Available power supply (engine speed set-point validation) | J21 |
| A319 | Available power supply (suspension level control) | J20 |
| A320 | Available power supply (suspension level actuation control) | J20 |
| A321 | Available power supply (6 km/h limitation) | J20 |
| A323 | Available power supply (alarm stop) | J20 |

| | | |
|------|---|-----------------|
| A324 | Available power supply (rigid perimetric protection module) | J21 |
| B001 | Air suspension remote control | F01 / F02 / F03 |
| B026 | Automatic transmission gear selector | D01 |
| B103 | Key switch unit | A01 / A20 |
| B105 | Engine stop control | C02 |
| B106 | Hazard lights control | H04 |
| B111 | Horn control | H06 |
| B113 | Side/parking lights control | H05 |
| B116 | Doors locking control | G01 |
| B117 | Sun-roof opening / closing control (on dashboard) | I01 |
| B118 | Swivelling rearview mirrors and alarm siren adjustment control | I02 |
| B119 | Rearview mirrors and windscreen defrosting control | I02 |
| B120 | Passenger's electric curtain motor control (passenger side) | I01 |
| B121 | Passenger's electric curtain motor control (driver side) | I01 |
| B122 | Front curtain motor control (driver side) | I01 |
| B125 | Radio set control | B20 |
| B126 | Driver's window winder motor control (driver side) | I01 |
| B127 | Front passenger window winder motor control (front passenger side) | I01 |
| B130 | Front passenger window winder motor control (driver side) | I01 |
| B131 | Air conditioner control | I70 |
| B136 | Cruise control and engine speed regulator adjustment control | B03 |
| B137 | Windscreen wash control | H05 |
| B138 | Windscreen wipers control | H05 |
| B139 | Windscreen / headlamps wash/wipe control | H05 |
| B140 | Dipped beam headlights control | H05 |
| B141 | Main beam headlights control | H05 |
| B142 | Headlamps ride corrector control | H04 |
| B143 | Steering wheel fingertip controls N° 1 | H04 / H05 / H06 |
| B144 | Long range driving lights control | H30 |
| B145 | Fog driving lights control | H05 |
| B146 | Fog lights control | H05 |
| B148 | Working lights control | H06 |
| B151 | Reversing buzzer inhibition control | H04 |
| B155 | Electric or hydraulic retarder control | B01 |
| B162 | Cab tilting control | B01 |

| | | |
|------|---|-----------|
| B163 | Alarm anti-panic control | G20 |
| B164 | Rear wheels diff lock control | E01 / E03 |
| B165 | Second rear axle lift-up control | F02 / F03 |
| B167 | Cab add-on heater control | I40 / I42 |
| B168 | Traction control enabling control | E01 / E03 |
| B169 | Trailer brake holding enabling control | E01 / E03 |
| B170 | Cab emergency stop control | A21 |
| B171 | Chassis emergency stop control | A21 |
| B172 | Alarm siren sound level reduction control | G20 |
| B175 | Pre-arrangement for bodybuilder N° 1 control | J20 |
| B176 | Pre-arrangement for bodybuilder N° 2 control | J20 |
| B177 | PTO 1 engagement request control (in cab) | B01 |
| B178 | Cab interior lighting control (on dashboard) | H06 |
| B179 | Cab interior lighting control (in cab) | H06 |
| B180 | Sun-roof opening / closing control (on cab rear control console) | I01 |
| B181 | Direction indicator control | H04 |
| B182 | Auto/manual selection control | B01 |
| B184 | Axle load-shedding activation control | F02 / F03 |
| B185 | PTO 2 engagement request control (in cab) | J01 |
| B186 | Brake holding enabling control | E01 |
| B194 | Overhead lighting control (ambience) | H06 |
| B199 | Fast idling adjustment control | B03 |
| B200 | Cruise control / engine speed adjustment controls | B03 |
| B207 | Emergency flashing lights control | B63 |
| B219 | Driver's side electric curtain motor control | I01 |
| B220 | Optiroll control | B01 |
| C001 | LH front wheel brake linings wear sensor | E01 / E03 |
| C002 | RH front wheel brake linings wear sensor | E01 / E03 |
| C003 | LH rear wheel brake linings wear sensor | E01 / E03 |
| C004 | RH rear wheel brake linings wear sensor | E01 / E03 |
| C005 | Lift-up axle or second rear axle LH wheel brake linings wear sensor | E01 |
| C006 | Lift-up axle or second rear axle RH wheel brake linings wear sensor | E01 |
| C007 | LH front wheel speed sensor | E01 / E03 |
| C008 | RH front wheel speed sensor | E01 / E03 |
| C009 | LH rear wheel speed sensor | E01 / E03 |

| | | |
|------|---|-----------------|
| C010 | RH rear wheel speed sensor | E01 / E03 |
| C011 | Lift-up axle or second rear axle LH wheel speed sensor | E01 |
| C012 | Lift-up axle or second rear axle RH wheel speed sensor | E01 |
| C013 | Driver's door open position information sensor | H05 |
| C014 | Passenger's front door open position information sensor | H05 |
| C019 | Boost air pressure and temperature sensor | C02 |
| C020 | Boost air temperature sensor | C02 |
| C021 | Boost air pressure sensor | C02 |
| C022 | Engine oil level sensor | C02 |
| C023 | Engine oil pressure sensor | C01 |
| C024 | Engine oil level and temperature sensor unit | C02 |
| C025 | 3-level air conditioning pressure sensor | I70 |
| C027 | Low level air conditioning pressure sensor | I70 |
| C028 | High level air conditioning pressure sensor | I70 |
| C029 | Intermediate level air conditioning pressure sensor | I70 |
| C030 | Rear inter-axle diff lock engaged sensor | E01 / E03 |
| C035 | PTO 1 engaged position information sensor | B03 |
| C036 | PTO 2 engaged position information sensor | J01 |
| C038 | Drive axle suspension RH position sensor | F01 / F02 / F03 |
| C039 | Drive axle suspension LH position sensor | F02 / F03 |
| C045 | Internal temperature sensor | I42 |
| C046 | External temperature sensor | B20 |
| C048 | Engine cooling circuit temperature sensor | C01 |
| C051 | Fuel level sensor | B20 |
| C053 | Stop lights switch | E01 / E03 |
| C054 | Air filter clogging sensor | B20 |
| C056 | Tachograph speed sensor | B40 |
| C057 | Neutral position sensor | B03 |
| C058 | Reverse gear engaged position sensor | B03 |
| C059 | Retarder oil temperature sensor | D01 / D31 |
| C060 | Retarder coolant temperature sensor | D30 / D31 |
| C061 | Front axle suspension position sensor | F03 |
| C062 | Clutch position sensor | D01 |
| C064 | Retarder air pressure sensor | D01 |
| C066 | Retarder coolant temperature sensor | D01 |

| | | |
|------|--|-----------------|
| C067 | Flywheel speed sensor | C02 |
| C068 | Camshaft engine speed sensor | C02 |
| C071 | Alarm ultra-sonic transmitter sensor | G20 |
| C072 | Alarm ultra-sonic receiver sensor | G20 |
| C075 | AdBlue tank temperature and level sensors | C30 |
| C076 | Exhaust gases temperature sensor | C30 |
| C077 | Nitrogen oxides gases concentration sensor | C30 |
| C078 | Exhaust gases after catalytic converter temperature sensor | C30 |
| C079 | Trailer braking assistance pressure system sensor | E01 / E03 |
| C084 | Engine oil temperature sensor | C02 |
| C086 | Steering lockover angle sensor | E01 / E03 |
| C087 | Chassis lateral acceleration sensor | E01 / E03 |
| C088 | Engine coolant level sensor | C01 |
| C090 | Add-on heater temperature sensor | I40 / I42 |
| C096 | Range change selector pressure sensor | C02 |
| C109 | Water in fuel sensor | C01 |
| C110 | Parking brake indicator pressure sensor | E01 / E03 |
| C111 | Accelerator pedal position sensor | B01 |
| C112 | Accelerator pedal "rest" position sensor N° 2 | B01 |
| C113 | Accelerator pedal rest position sensor | B01 |
| C114 | Accelerator pedal sensor unit | B01 |
| C115 | Lift-up air spring pressure sensor | F02 / F03 |
| C116 | Middle axle suspension air pressure sensor | F02 / F03 |
| C117 | Front air spring pressure sensor | F03 |
| C118 | Drive axle suspension LH pressure sensor | F02 / F03 |
| C119 | Drive axle suspension RH pressure sensor | F01 / F02 / F03 |
| C120 | Piloted axle oil level sensor | F20 |
| C121 | Piloted axle lockover angle sensor | F20 |
| C122 | Piloted axle lockover angle sensor | F20 |
| C130 | Clutch pedal position sensor | B01 |
| C132 | Engine boost pressure sensor | C01 |
| C133 | Engine cooling fan speed sensor | C02 |
| C134 | Brake pedal sensor unit | E01 / E03 |
| C135 | Brake pedal position copying sensor | E01 / E03 |
| C149 | Driver's seatbelt not buckled sensor | B20 |

| | | |
|------|--|-----------|
| C150 | Engine block inside pressure sensor | C01 |
| C172 | Fifth wheel position sensors | B20 |
| C227 | Pistons cooling oil pressure sensor | C01 |
| C250 | Blown air temperature sensor | I70 |
| C260 | Evaporator temperature sensor | I70 |
| C261 | Air conditioning outside air temperature sensor | I70 |
| C263 | AdBlue internal temperature sensor | C30 |
| C264 | AdBlue internal pressure sensor | C30 |
| C268 | Hydraulic retarder oil pressure sensor | D31 |
| C269 | Temperature sensor on the autonomous heating system | I40 / I42 |
| C270 | Flame presence detector | I42 |
| C271 | Overheating sensor | I42 |
| C273 | Exhaust backpressure sensor | C01 |
| D001 | Principal information display | B20 |
| D004 | Tachograph | B40 |
| E007 | Bunk lower RH overhead light | H06 |
| E008 | Driver's side single overhead light | H06 |
| E009 | Bunk lower LH overhead light | H06 |
| E010 | Front passenger's side single overhead light | H06 |
| E012 | RH upper overhead lighting (door) | H06 |
| E025 | Driver's reading spotlight | H06 |
| E026 | Front passenger's reading spotlight | H06 |
| E027 | Cigar lighter light | I03 |
| E033 | LH upper overhead lighting (door) | H06 |
| E034 | LH overhead lighting (ambience) | H06 |
| E035 | RH overhead lighting (ambience) | H06 |
| E038 | Row 1 lighting | H06 |
| E039 | Row 2 lighting | H06 |
| E040 | Row 3 lighting | H06 |
| E041 | Row 4 lighting | H06 |
| E042 | Upper left-hand side overhead lamp lighting | H06 |
| E043 | Upper right-hand side overhead lamp lighting | H06 |
| E100 | RH front direction change indicator lights | H04 |
| E101 | LH front direction change indicator lights | H04 |
| E102 | Driver's side stepwell lighting | H06 |

| | | |
|------|---|-----------|
| E103 | Front passenger's side stepwell lighting | H06 |
| E104 | Roof RH front direction change indicator lights | H04 |
| E105 | Roof LH front direction change indicator lights | H04 |
| E109 | RH rear direction change indicator lights | H04 |
| E110 | LH rear direction change indicator lights | H04 |
| E116 | RH rear fog light | H04 |
| E117 | LH rear fog light | H04 |
| E119 | LH stop lights | H04 |
| E120 | RH stop lights | H04 |
| E122 | RH clearance light N° 1 | H04 |
| E123 | RH clearance light N° 2 | H04 |
| E124 | LH front side/parking lights | H04 |
| E125 | RH front side/parking lights | H04 |
| E128 | LH clearance lights N° 3 | H04 |
| E129 | LH clearance lights N° 4 | H04 |
| E131 | RH clearance lights N° 3 | H04 |
| E132 | RH clearance lights N° 4 | H04 |
| E133 | LH clearance lights N° 1 | H04 |
| E134 | LH clearance lights N° 2 | H04 |
| E135 | LH tail lights unit | H04 |
| E136 | RH tail lights unit | H04 |
| E137 | RH rear side/parking lights | H04 |
| E138 | LH rear side/parking lights | H04 |
| E141 | LH reversing lights | H04 |
| E142 | RH reversing lights | H04 |
| E144 | Roof LH side/parking lights | H04 / H30 |
| E145 | Roof LH side/parking lights | H04 / H30 |
| E149 | Anti-glare strip-mounted LH marker lights | H30 |
| E150 | Anti-glare strip-mounted RH marker lights | H30 |
| E151 | Right-hand side marker lamp N° 5 | H04 |
| E152 | Left-hand side marker lamp N° 5 | H04 |
| E500 | RH dipped beam headlight | H04 |
| E501 | LH dipped beam headlight | H04 |
| E502 | RH main beam headlight | H04 |
| E503 | LH dipped beam headlight | H04 |

| | | |
|------|--|-----------------|
| E504 | RH headlamp insert | H04 |
| E505 | LH headlamp insert | H04 |
| E506 | LH fog driving light | H05 |
| E507 | RH fog driving light | H05 |
| E510 | Working spotlight | H06 |
| G001 | Vehicle management ECU | B01 / B03 |
| G002 | Engine management ECU | C01 / C02 |
| G003 | Bodybuilder pre-arrangement management ECU | J01 |
| G004 | Air suspension ECU | F01 / F02 / F03 |
| G005 | EBS braking management ECU | E01 / E03 |
| G006 | Vehicle power supply management ECU (ADR) | A21 |
| G007 | Front axle braking assistance modulator unit | E01 / E03 |
| G008 | Drive axle braking assistance modulator unit | E01 / E03 |
| G012 | Lighting and signalling management ECU | H04 / H05 / H06 |
| G016 | Second rear axle braking assistance modulator unit | E01 |
| G017 | Cab temperature regulation ECU | I42 |
| G018 | Onboard management interface ECU | B60 / B63 |
| G019 | Gear selector ECU | D01 |
| G020 | Automatic transmission ECU | D01 |
| G021 | Hydraulic retarder ECU | D30 / D31 |
| G025 | Engine immobilizer ECU | G01 |
| G026 | Alarm ECU | G20 |
| G027 | Piloted axle ECU | F20 |
| G028 | Doors central locking ECU | G01 |
| G030 | AdBlue supply management pump module | C30 |
| G051 | Air production management ECU | F40 |
| G053 | Air/air autonomous heating ECU | I40 |
| G100 | Datamax gateway ECU | B61 |
| G102 | Onboard management ECU | B61 / B63 |
| G103 | Positioning module ECU | B61 |
| G104 | Tyre pressures monitoring ECU | G60 |
| H001 | Engine immobilizer antenna | G01 |
| H005 | GPS satellite antenna | I20 |
| H011 | LH front loudspeaker | I20 |
| H012 | RH front loudspeaker | I20 |

| | | |
|------|--|-----------|
| H014 | Radio set | I20 |
| H019 | Microphone | I20 |
| H020 | Sharp loudspeaker, LH side | I20 |
| H021 | Sharp loudspeaker, RH side | I20 |
| J001 | Cigar lighter | I03 |
| J002 | RH heated seat unit | I03 |
| J003 | LH heated seat unit | I03 |
| J006 | Refrigerated compartment | I03 |
| J007 | Refrigerator | I03 |
| K001 | Air/water add-on heater | I42 |
| K002 | Air/air add-on heater | I40 |
| K003 | Air conditioning ECU | I70 |
| L004 | External horn | H04 |
| L006 | Horn - Alarm siren | G20 |
| L008 | Electric horn | H06 |
| M002 | Starter | A01 / A20 |
| M020 | Windscreen wipers drive motor | H05 |
| M021 | Windscreen wash pump motor | H05 |
| M022 | Headlamps wash pump motor | H05 |
| M023 | LH headlamp ride correction motor | H04 |
| M024 | RH headlamp ride correction motor | H04 |
| M027 | Windscreen wash motor / headlamps wash motor unit | H05 |
| M050 | Front passenger's sun visor motor | I01 |
| M051 | Driver's sun visor motor | I01 |
| M052 | Front sun visor motor | I01 |
| M056 | Driver's door window winder motor | I01 |
| M057 | Front passenger's door window winder motor | I01 |
| M060 | Electric roof air vent motor | I01 |
| M061 | Air recycling motor | I70 |
| M064 | Air mixing flap motor | I70 |
| M080 | RH rearview mirror horizontal swivelling motor | I02 |
| M081 | RH rearview mirror vertical swivelling motor | I02 |
| M082 | LH rearview mirror horizontal swivelling motor | I02 |
| M083 | LH rearview mirror vertical swivelling motor | I02 |
| M101 | Add-on heater fan motor | I40 / I42 |

| | | |
|------|---|-----------|
| M102 | Cab tilting motor | B01 |
| M107 | Air/water autonomous heating water pump | I42 |
| M200 | Air conditioning compressor electric clutch | I70 |
| M202 | Driving position fan-coil heater motor | I70 |
| M203 | Add-on heater fuel pump motor | I40 / I42 |
| M205 | Water pump electromagnetic clutch | C02 |
| N001 | Fuel heater resistor N° 2 | C01 |
| N004 | Air preheating resistor | C01 |
| N008 | LH defrosting rearview mirror resistor | I02 |
| N009 | RH defrosting rearview mirror resistor | I02 |
| N015 | AdBlue heating resistor (in tank to pump module circuit) | C30 |
| N016 | AdBlue heating resistor (in pump module to tank circuit) | C30 |
| N017 | AdBlue heating resistor (in pump module to metering solenoid valve circuit) | C30 |
| N018 | AdBlue heating resistor (in metering solenoid valve to pump module circuit) | C30 |
| N019 | AdBlue heating resistor (in filter on pump) | C30 |
| N027 | Fan/coil heater pilot-control resistors assembly | I70 |
| N034 | Autonomous heating system heating element | I40 / I42 |
| S001 | After ignition power supply relay N°1 | A40 |
| S002 | After ignition power supply relay N°2 | A41 |
| S003 | After ignition power supply relay N° 3 | A41 |
| S004 | Accessories power supply relay N° 1 | A42 |
| S005 | Accessories power supply relay N° 2 | A42 |
| S020 | Starting relay | A41 |
| S021 | Alternator circuit earthing relay (ADR) | A20 / A40 |
| S022 | Alternator controlled power supply relay (engine running) | A20 / A40 |
| S100 | Stop lights power supply relay | A40 |
| S101 | Rear fog lights power supply relay | A42 |
| S102 | Main beam headlights power supply relay | A42 |
| S103 | Fog driving lights power supply relay | A42 |
| S104 | Reversing lights power supply relay | A41 |
| S105 | RH and LH side/parking and marker lights power supply relay | A44 |
| S106 | Switches night lighting power supply relay | A45 |
| S107 | RH and LH side/parking and marker lights power supply relay (trailer and bodybuilder) | A44 |

| | | |
|------|--|-----------------|
| S109 | Long range driving lights power supply relay | H30 |
| S200 | Automatic transmission management ECU power supply relay | A42 |
| S201 | Vehicle and engine ECUs power supply relay | A41 |
| S202 | Air suspension power supply relay | A43 |
| S300 | Cab tilting safety and authorization relay | A40 |
| S400 | Windscreen wipers motor time-delay relay | A41 |
| S401 | Headlamps wash pump motor power supply relay | H05 |
| S451 | Air conditioning compressor clutch power supply relay | A43 |
| S452 | Air conditioning fan piloting relay | I70 |
| S453 | Add-on heater power supply relay | A43 |
| S500 | Heated and swivelling rearview mirror power supply relay | A41 |
| S501 | Air preheating relay | C01 |
| S600 | Cab tilting motor power supply relay | B01 |
| V002 | Rear wheels diff lock electrovalve | E01 / E03 |
| V003 | LH roadwheel ABS electrovalve | E01 / E03 |
| V004 | Front RH wheel ABS solenoid valve | E01 / E03 |
| V005 | Axle piloting solenoid valve unit | F20 |
| V006 | Locking solenoid valve | F20 |
| V007 | LH steer control solenoid valve | F20 |
| V008 | RH steer control solenoid valve | F20 |
| V010 | PTO engagement electrovalve N° 1 | B01 / D01 |
| V011 | High speed disengagement solenoid valve | D01 |
| V012 | High speed engagement solenoid valve | D01 |
| V013 | Low speed engagement solenoid valve | D01 |
| V014 | Low speed disengagement solenoid valve | D01 |
| V015 | Retarder proportional electrovalve | D01 / D30 |
| V016 | Retarder accumulation electrovalve | D30 |
| V018 | PTO engagement electrovalve N° 2 | D01 / J01 |
| V020 | Exhaust brake solenoid valve unit | C01 |
| V021 | Engine brake N° 1 solenoid valve | C01 |
| V023 | Exhaust brake solenoid valve | C01 |
| V030 | Drive axle suspension control solenoid valve unit | F01 / F02 / F03 |
| V031 | Drive axle rear suspension main electrovalve | F01 / F02 / F03 |
| V032 | Drive axle rear suspension (RH side) electrovalve | F01 / F02 / F03 |
| V033 | Drive axle rear suspension (LH side) electrovalve | F02 / F03 |

| | | |
|------|--|-----------------------------|
| V034 | Rear axle suspension control solenoid valve unit | F02 / F03 |
| V035 | Rear axle suspension main electrovalve | F02 / F03 |
| V036 | Rear axle suspension electrovalve | F02 / F03 |
| V037 | Lift-up air spring control electrovalve | F02 / F03 |
| V038 | Front suspension electrovalve | F03 |
| V050 | Braking auxiliary electrovalve | E01 / E03 |
| V051 | Trailer braking inlet/exhaust electrovalve | E01 / E03 |
| V052 | Range change electrovalve | C01 |
| V053 | Splitter control electrovalve | C01 |
| V054 | Splitter and range change control unit | C01 |
| V055 | Engine water circuit by-pass solenoid valve | C30 |
| V056 | AdBlue supply metering solenoid valve | C30 |
| V101 | Cylinder injector solenoid valve N° 1 | C02 |
| V102 | Cylinder injector solenoid valve N° 2 | C02 |
| V103 | Cylinder injector solenoid valve N° 3 | C02 |
| V104 | Cylinder injector solenoid valve N° 4 | C02 |
| V105 | Cylinder injector solenoid valve N° 5 | C02 |
| V106 | Cylinder injector solenoid valve N° 6 | C02 |
| V107 | Air horn | H06 |
| V108 | Air dryer bleeding solenoid valve | C01 |
| V109 | Engine cooling fan speed regulation solenoid valve | C01 |
| V126 | Pistons cooling solenoid valve | C01 |
| V127 | Engine oil cooling solenoid valve | C01 |
| V140 | Cab heating engine coolant circuit by-pass solenoid valve | I70 |
| V141 | AdBlue cooling electrovalve | C30 |
| V142 | Hydraulic retarder oil pump control solenoid valve | D31 |
| V143 | Hydraulic retarder main oil flow circuit control solenoid valve | D31 |
| W100 | Alternator circuit draw resistor | A40 |
| W500 | Diode(s) | A40 / A42 / A43 / A44 / H06 |
| W502 | Diode on after ignition information circuit for vehicle management box | A40 / B03 |
| W503 | Diode on engine running information relay power supply circuit | A01 / A20 / A40 / B20 |
| W504 | Diode on alternator earthing relay power supply circuit | A40 |
| W505 | Diode on alternator earthing relay power supply circuit | A40 |
| W506 | Doors central locking diode | A43 |
| W507 | Vehicle alarm sounding diode | G20 |

| | | |
|------|--|-----------|
| X001 | Electrical connection terminal | A01 / A20 |
| X200 | Available power supplies connector | J20 / J21 |
| X203 | CAN bus grouping connector | K21 |
| X207 | Audio auxiliary connector | I20 |
| X208 | Audio USB connector | I20 |
| X900 | 15-pin trailer socket | J40 |
| X902 | 24 Volts power supply socket | I03 |
| X906 | ABS/EBS trailer socket | J40 |
| X907 | Ground receptacle | A01 |
| X908 | 12 Volts power supply socket | I03 |
| X909 | Extra 24 Volts power supply socket | I03 |
| X913 | Vehicle diagnostic socket | K01 |
| Z001 | Fuel heating unit | C01 |
| Z003 | Fan speed regulator unit | C01 / C02 |
| Z004 | Retarder unit | D01 |
| Z005 | Automatic transmission unit | D01 |
| Z008 | Driver's swivelling defrosting rearview mirror | I02 |
| Z009 | Passenger's swivelling defrosting rearview mirror | I02 |
| Z010 | Front passenger's door locking striker unit | G01 |
| Z011 | Driver's door locking striker unit | G01 |
| Z014 | Trailer brake control EBS modulator unit | E01 / E03 |
| Z021 | Adblue pump module assembly | C30 |

Summary of diagrams

Energy production (except ADR)

Diagram plate: **A01**

See page

Energy production ADR

Diagram plate: **A20**

See page

Control ECU ADR

Diagram plate: **A21**

See page

Electrical distribution (1/6)

Diagram plate: **A40**

See page

Electrical distribution (2/6)

Diagram plate: **A41**

See page

Electrical distribution (3/6)

Diagram plate: **A42**

See page

Electrical distribution (4/6)

Diagram plate: **A43**

See page

Electrical distribution (5/6)

Diagram plate: **A44**

See page

Electrical distribution (6/6)

Diagram plate: **A45**

See page

Vehicle electronic management (1/2)

Diagram plate: **B01**

See page

Vehicle electronic management (2/2)

Diagram plate: **B03**

See page

Principal information display

Diagram plate: **B20**

See page

Tachograph

Diagram plate: **B40**

See page

Onboard management FMS

Diagram plate: **B60**

See page

Onboard management DATAMAX

Diagram plate: **B61**

See page

Onboard management OPTIFLEET

Diagram plate: **B63**

See page

Engine electronic management (1/2)

Diagram plate: **C01**

See page

Engine electronic management (2/2)

Diagram plate: **C02**

See page

Urea inflow management

Diagram plate: **C30**

See page

Automatic gearbox

Diagram plate: **D01**

See page

Hydraulic retarder ECOSPLIT 2

Diagram plate: **D30**

See page

Hydraulic retarder ECOSPLIT 4

Diagram plate: **D31**

See page

EBS 6x2 equipment

Diagram plate: **E01**

See page

EBS 4x2 equipment

Diagram plate: **E03**

See page

Electronic air suspension - Tractors4x2 (1 sensor)

Diagram plate: **F01**

See page

Rear air suspension - 4x2 / 6x2 (2 sensors)

Diagram plate: **F02**

See page

Integral electronic air suspension - 4x2 / 6x2 (2 sensors)

Diagram plate: **F03**

See page

Steered axle

Diagram plate: **F20**

See page

Air production management

Diagram plate: **F40**

See page

Doors / engine immobilizer controls

Diagram plate: **G01**

See page

Alarm

Diagram plate: **G20**

See page

Checking tyre pressures

Diagram plate: **G60**

See page

Lighting and signalling management (1/3)

Diagram plate: **H04**

See page

Lighting and signalling management (2/3)

Diagram plate: **H05**

See page

Lighting and signalling management (3/3)

Diagram plate: **H06**

See page

Side, marker, identification and parking lights

Diagram plate: **H30**

See page

Electric window winder, sun-roof

Diagram plate: **I01**

See page

Swivelling defrosting rearview mirrors

Diagram plate: **I02**

See page

Comfort accessories

Diagram plate: **I03**

See page

Radio

Diagram plate: **I20**

See page

Independent (add-on) heating AT2000 ST

Diagram plate: **I40**

See page

Independent (add-on) heating THERMO 90ST

Diagram plate: **I42**

See page

Air conditioning

Diagram plate: **I70**

See page

Bodybuilder pre-arrangement management

Diagram plate: **J01**

See page

Available power supplies (1/2)

Diagram plate: **J20**

See page

Available power supplies (2/2)

Diagram plate: **J21**

See page

Trailer sockets

Diagram plate: **J40**

See page

Diagnostic socket

Diagram plate: **K01**

See page

BUS J1587-1 transfer zone

Diagram plate: **K20**

See page

CAN BUS transfer zone J1939-1

Diagram plate: **K21**

See page


CAN BUS transfer zone J1939-2

Diagram plate: **K22**

See page

CAN BUS transfer zone J1939-ENG

Diagram plate: **K23**

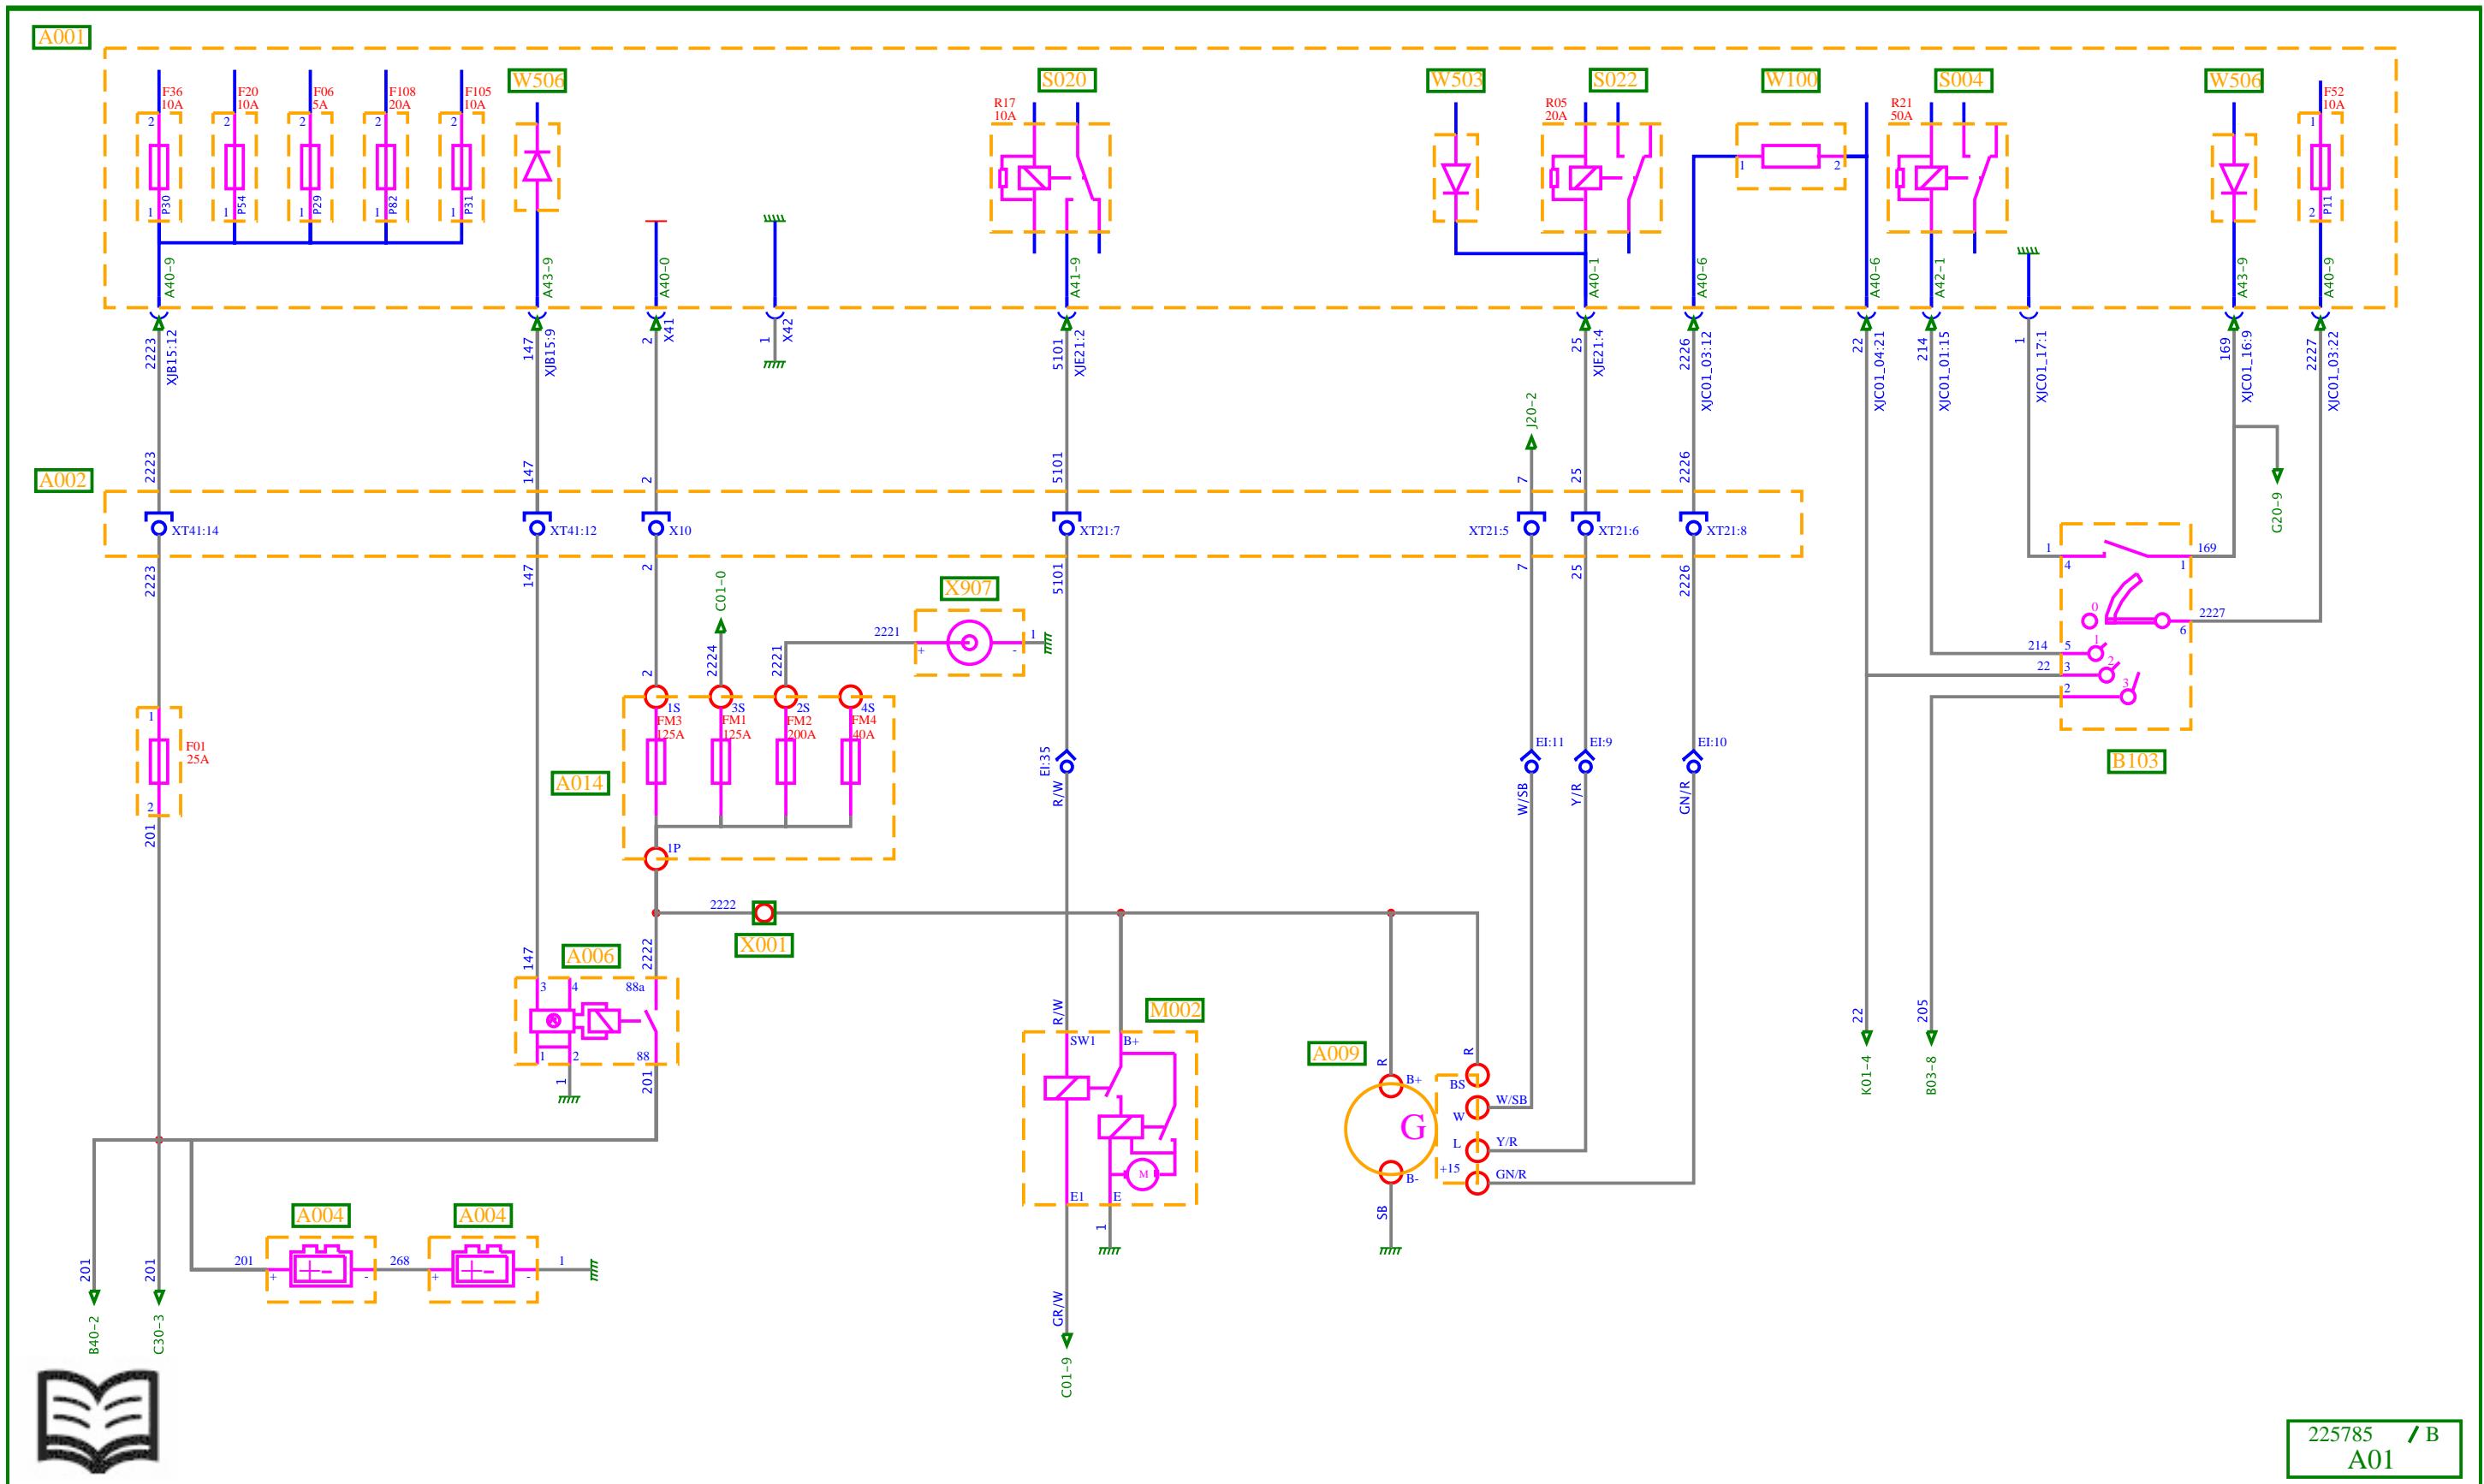


Energy production (except ADR)


Key to appliances

| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| A004 | Batteries | C4d |
| A006 | Electrically controlled master switch | C4d |
| A009 | Alternator | B3c |
| A014 | Power fuse box unit (FM1 to FM4) | C4d |
| B103 | Key switch unit | C2c |
| M002 | Starter | A3c |
| S004 | Accessories power supply relay N° 1 | B2c |
| S020 | Starting relay | B2c |
| S022 | Alternator controlled power supply relay (engine running) | B2c |
| W100 | Alternator circuit draw resistor | B2c |
| W503 | Diode on engine running information relay power supply circuit | B2c |
| W506 | Doors central locking diode | B2c |
| X001 | Electrical connection terminal | B4d |
| X907 | Ground receptacle | C5d |

Energy production (except ADR)

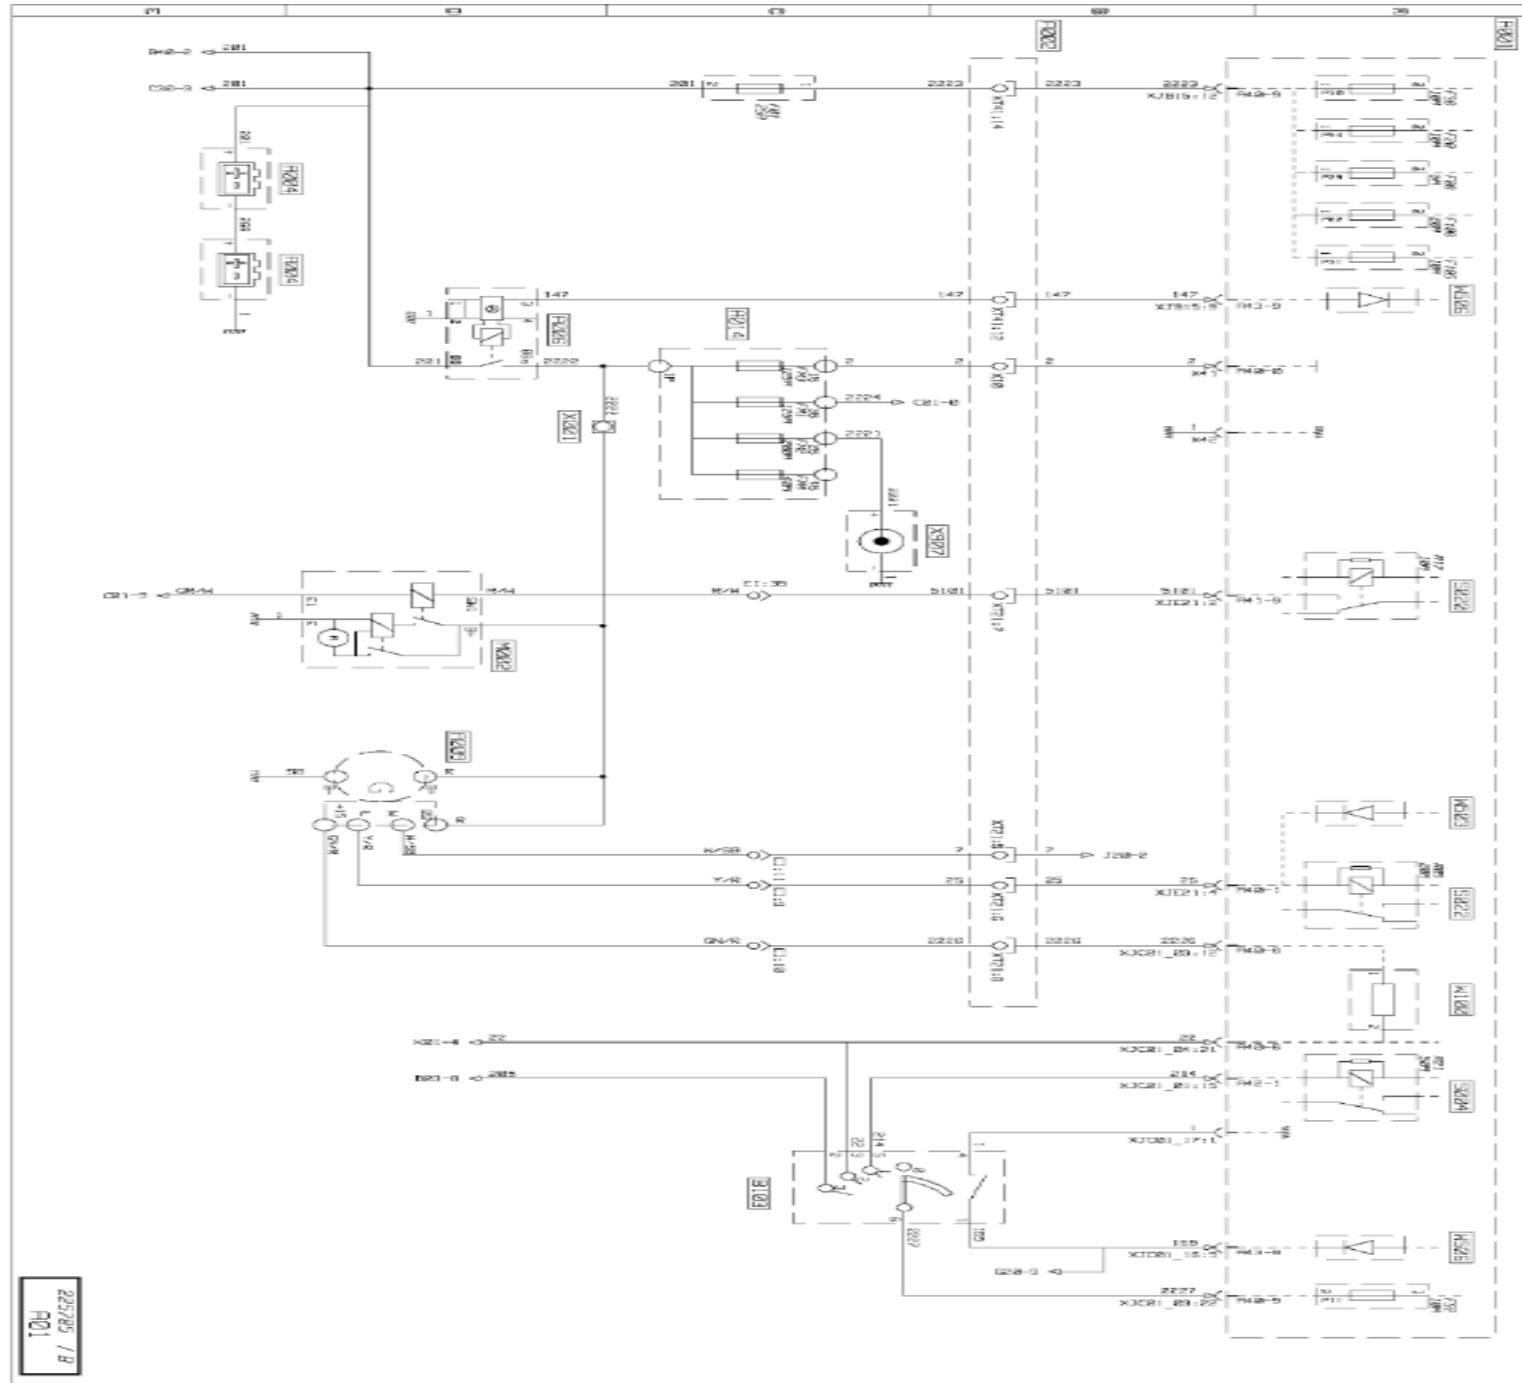

22553C / B
R01

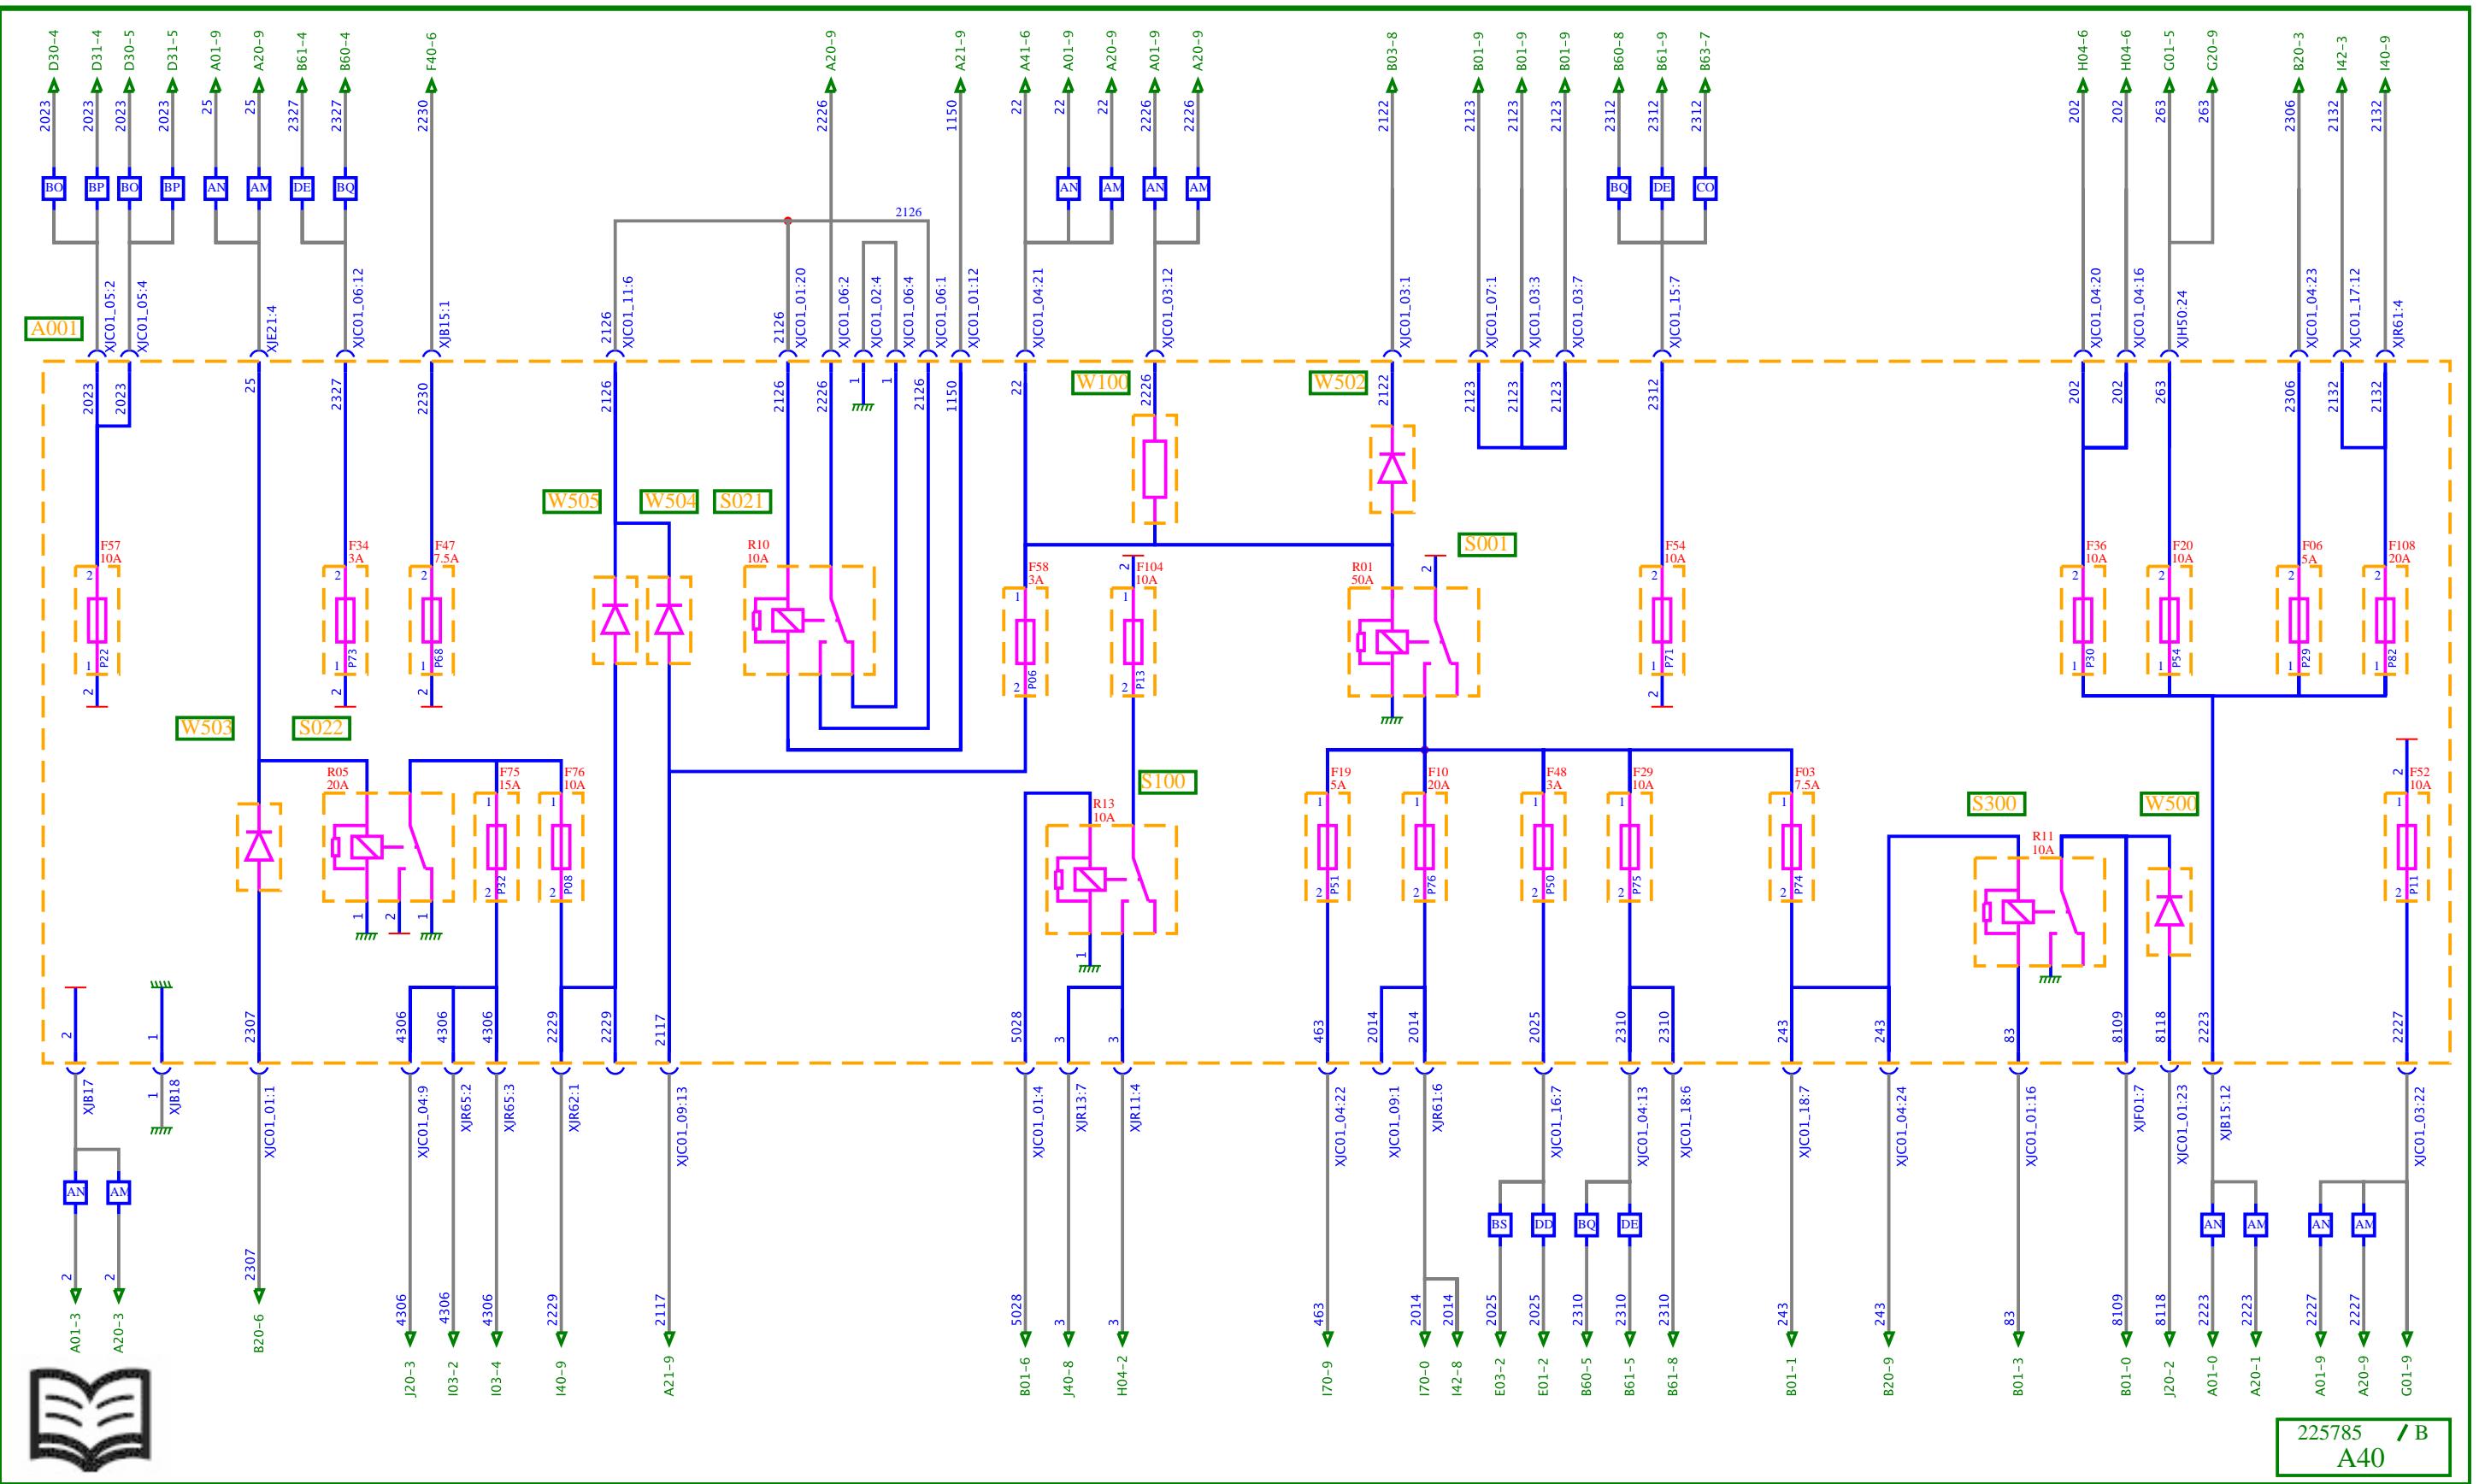

Electrical distribution (1/6)

Key to appliances

| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| S001 | After ignition power supply relay N°1 | B2c |
| S021 | Alternator circuit earthing relay (ADR) | B2c |
| S022 | Alternator controlled power supply relay (engine running) | B2c |
| S100 | Stop lights power supply relay | B2c |
| S300 | Cab tilting safety and authorization relay | B2c |
| W100 | Alternator circuit draw resistor | B2c |
| W500 | Diode(s) | B2c |
| W502 | Diode on after ignition information circuit for vehicle management box | B2c |
| W503 | Diode on engine running information relay power supply circuit | B2c |
| W504 | Diode on alternator earthing relay power supply circuit | B2c |
| W505 | Diode on alternator earthing relay power supply circuit | B2c |

AM: with ADR equipment

AN: without ADR equipment

BO: with **ECOSPLIT 2** hydraulic retarder

BP: with **ECOSPLIT 4** hydraulic retarder

BS: 4x2 vehicles


DD: 6x2 vehicles


BQ: with **FMS** equipment

CO: with **OPTIFLEET** equipment

DE: with **DATAMAX** equipment

Electrical distribution (1/6)

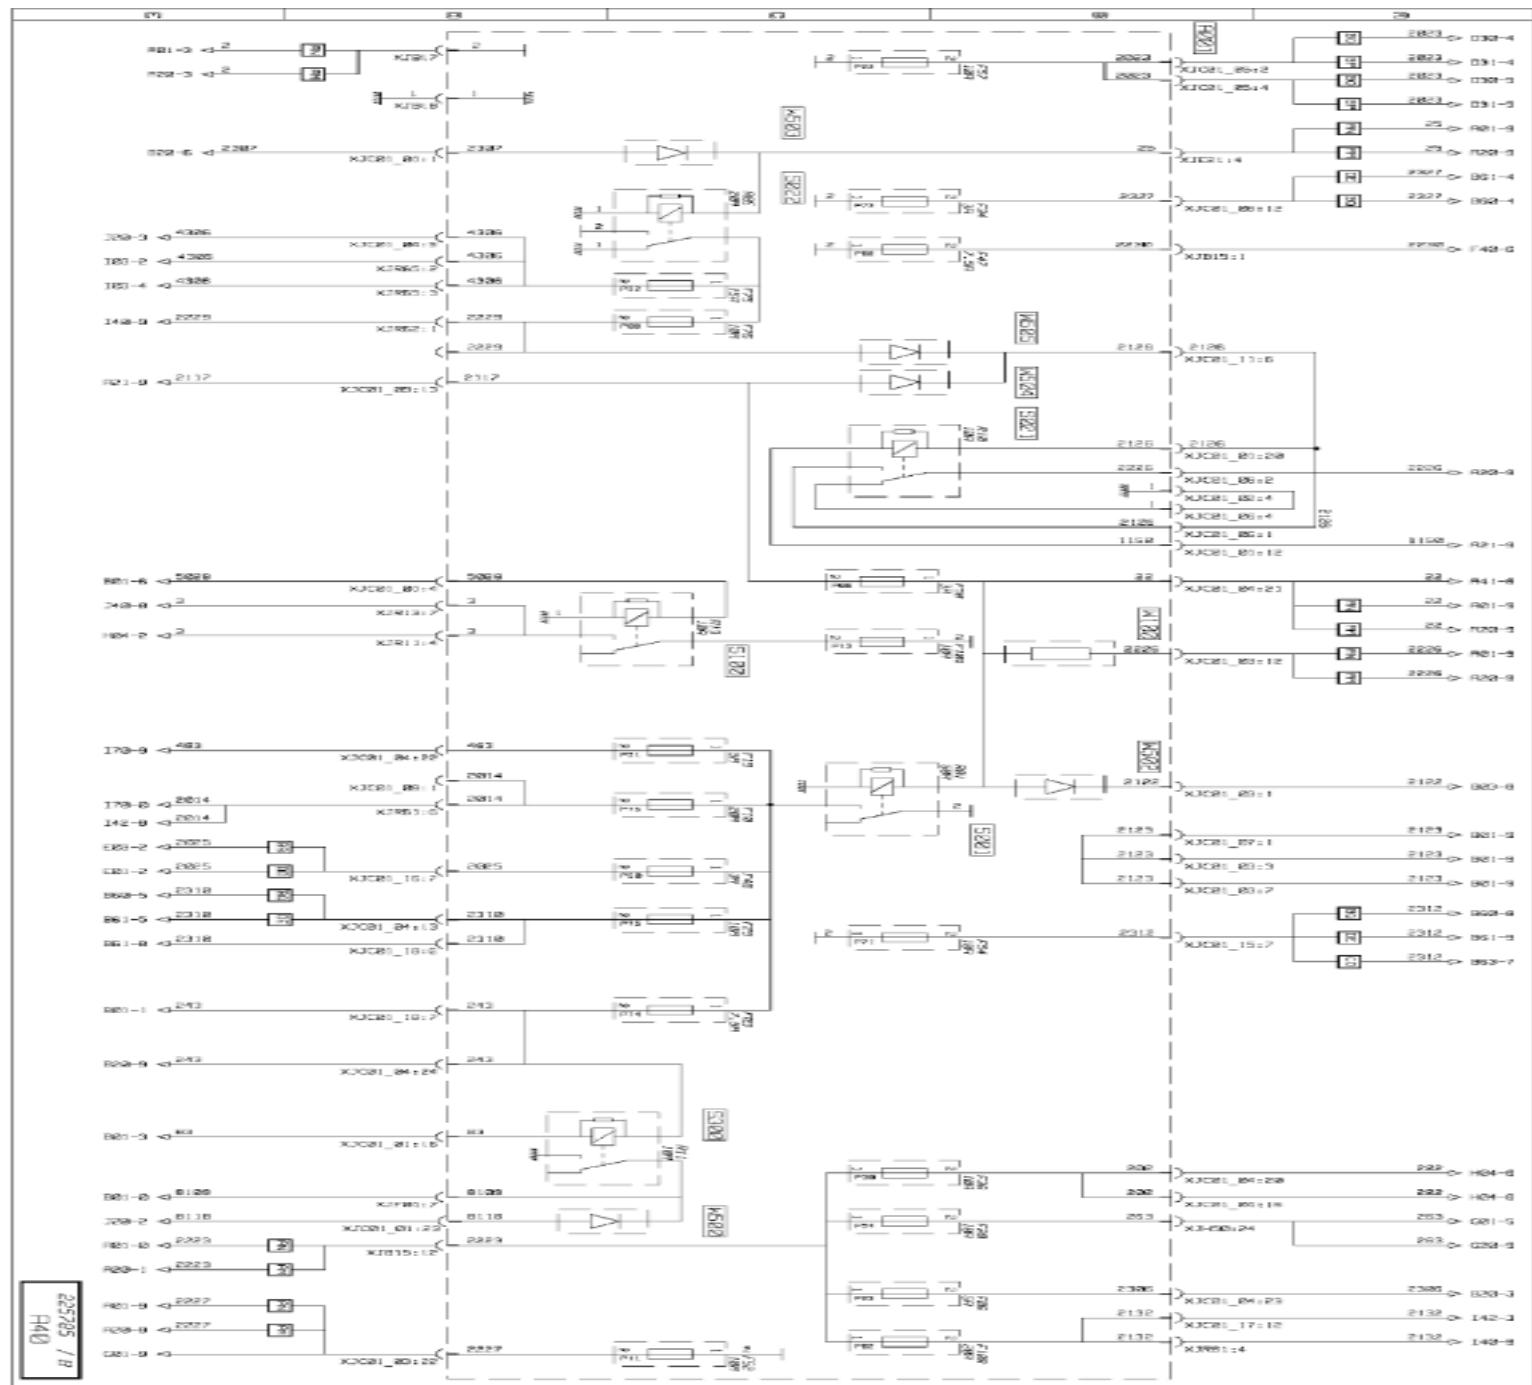

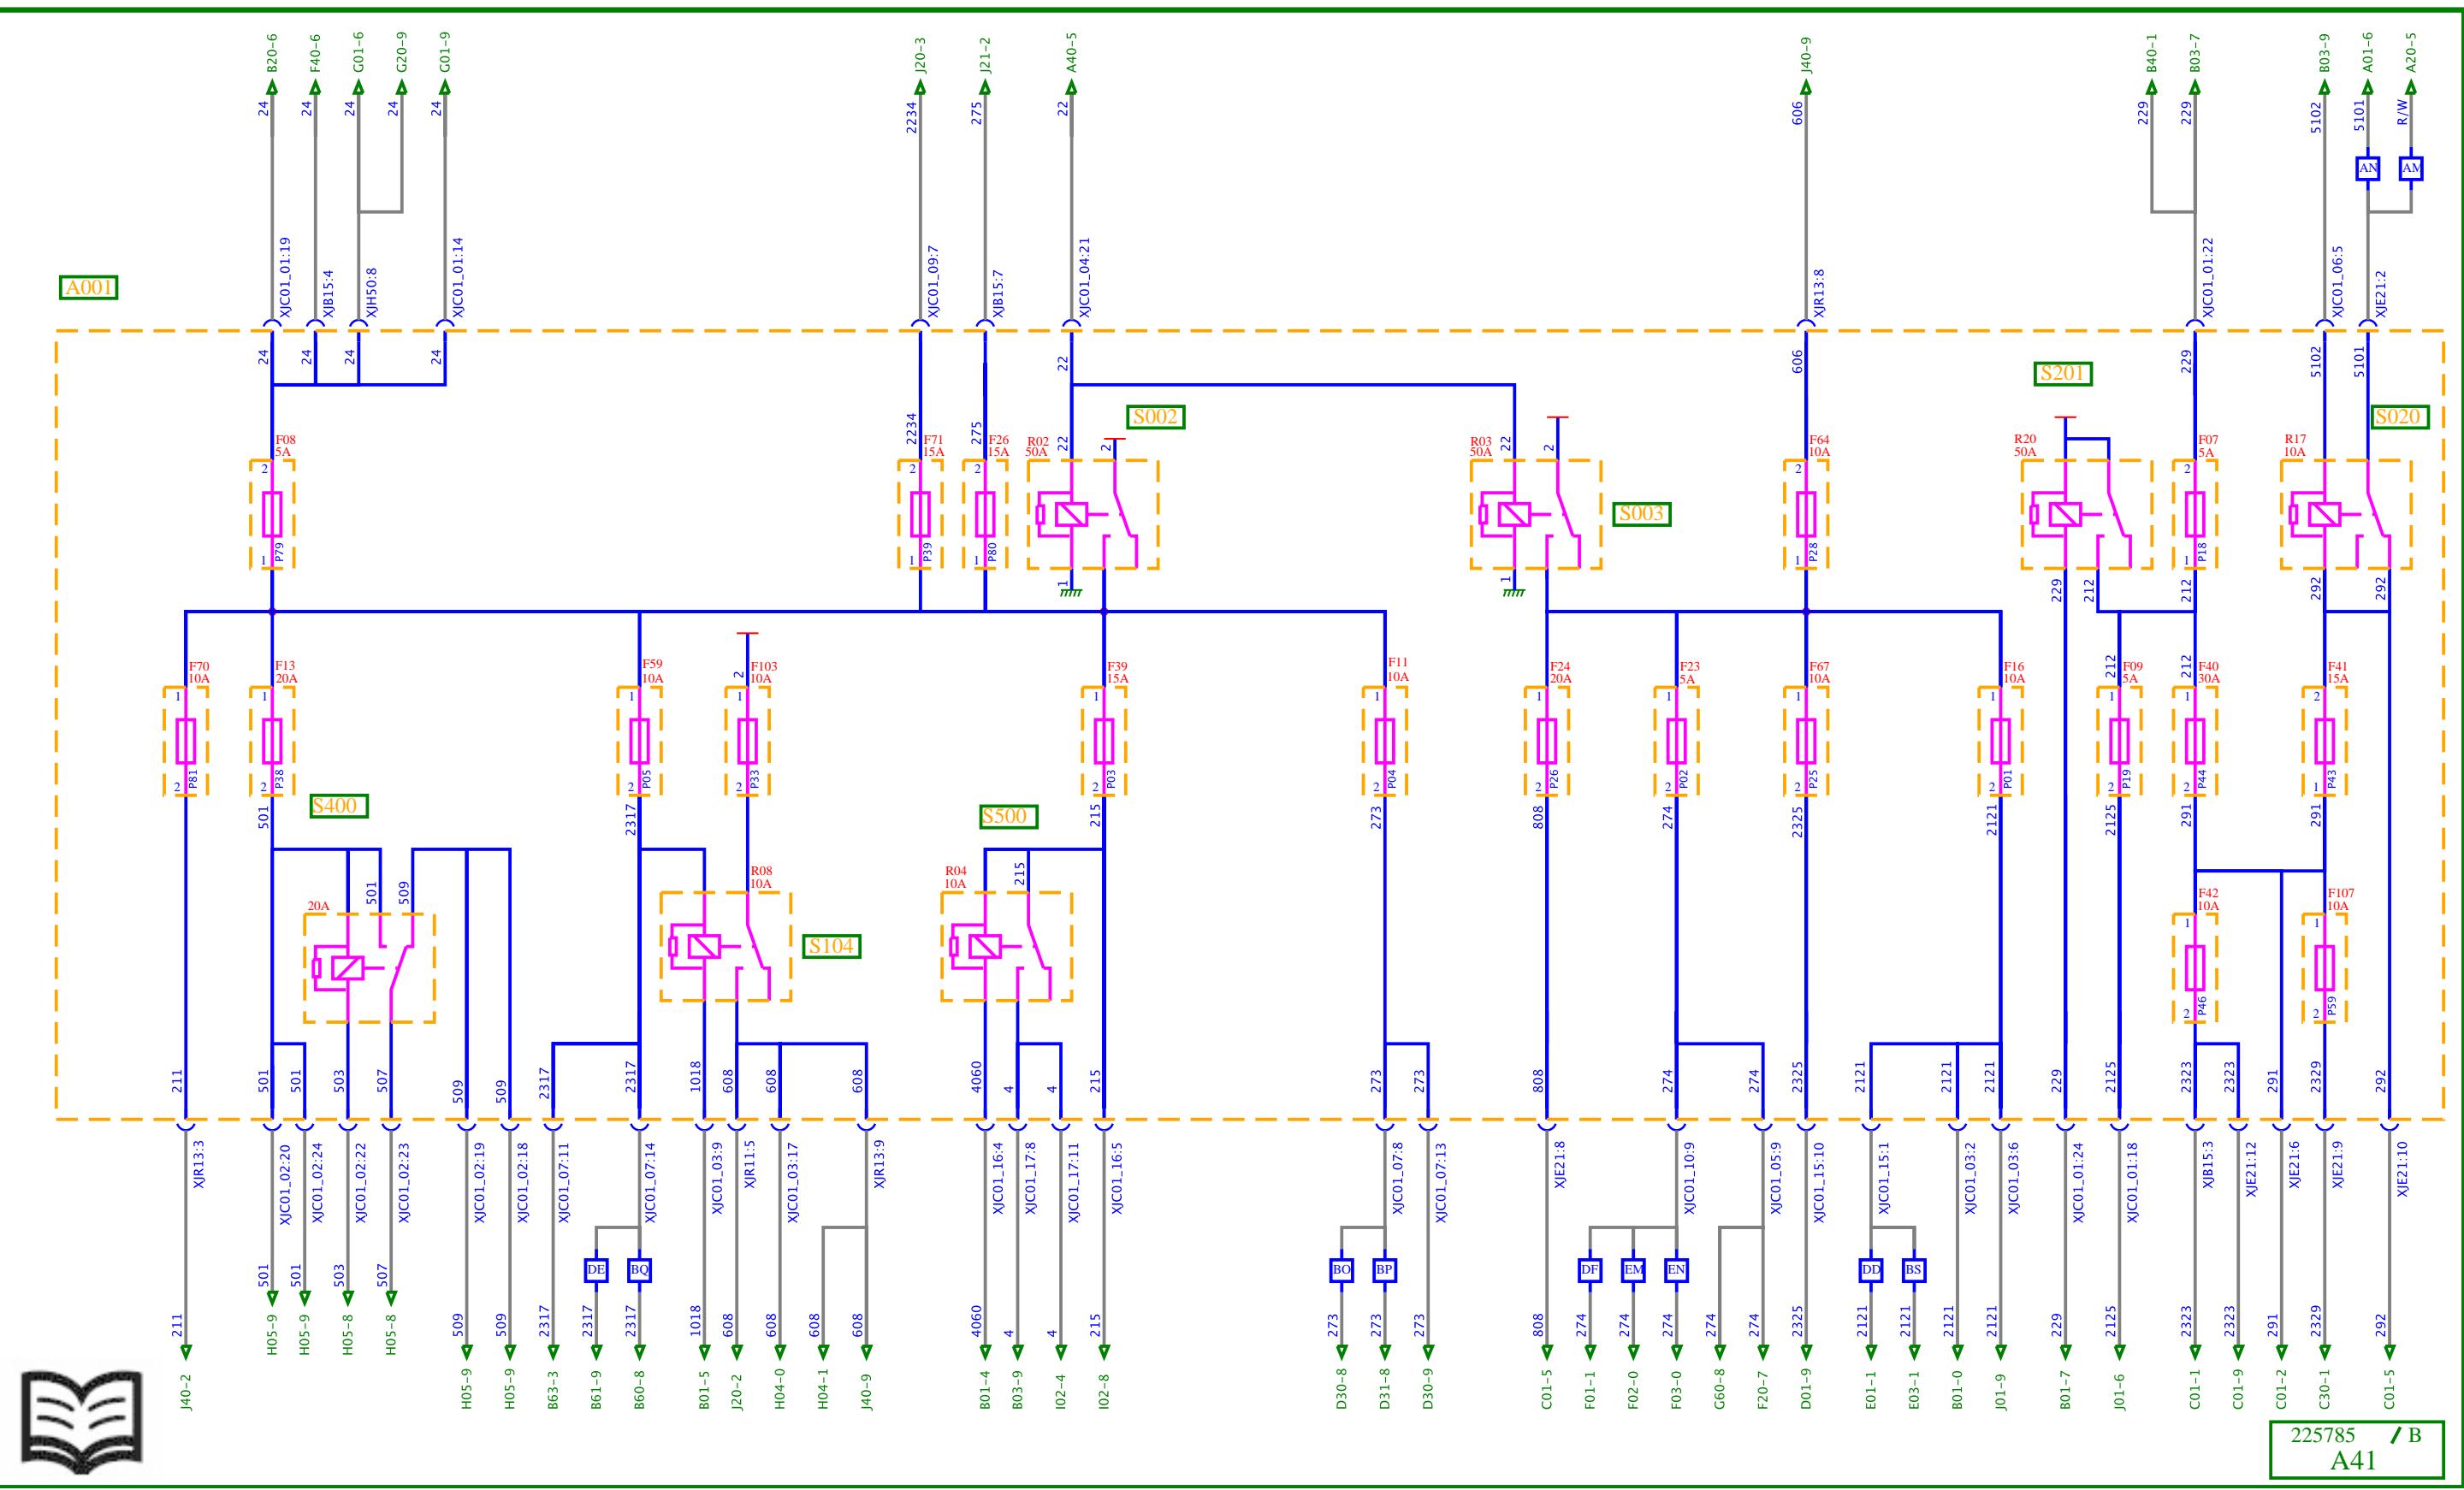

Electrical distribution (2/6)

Key to appliances

| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| S002 | After ignition power supply relay N°2 | B2c |
| S003 | After ignition power supply relay N° 3 | B2c |
| S020 | Starting relay | B2c |
| S104 | Reversing lights power supply relay | B2c |
| S201 | Vehicle and engine ECUs power supply relay | B2c |
| S400 | Windscreen wipers motor time-delay relay | B2c |
| S500 | Heated and swivelling rearview mirror power supply relay | B2c |

AM: with ADR equipment

AN: without ADR equipment

BO: with **ECOSPLIT 2** hydraulic retarder

BP: with **ECOSPLIT 4** hydraulic retarder

BS: **4x2** vehicles

DD: **6x2** vehicles

BQ: with **FMS** equipment


DE: with **DATAMAX** equipment


DF: with electronic air suspension tractor vehicle **4x2**

EM: with **4x2 - 6x2** vehicle rear electronic air suspension

EN: with **4x2 - 6x2** vehicle integral electronic air suspension

Electrical distribution (2/6)

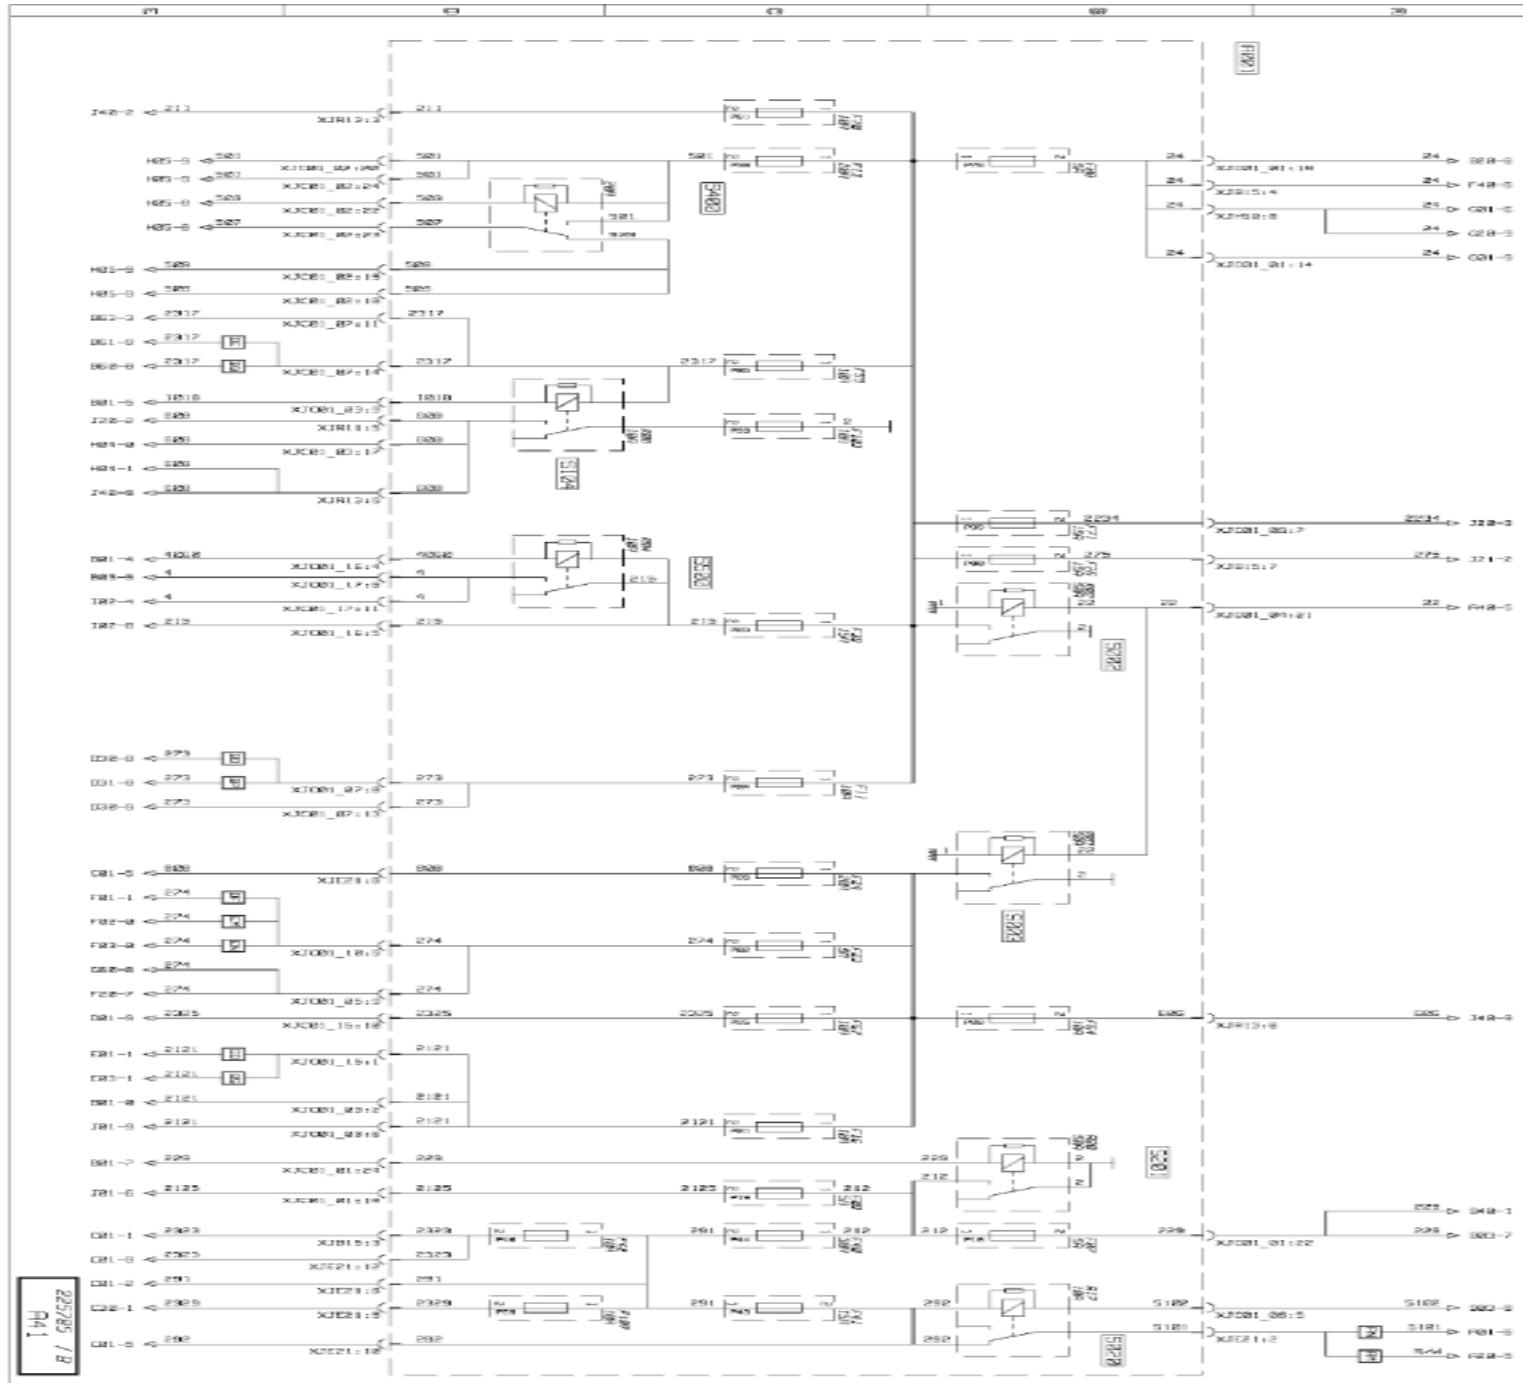

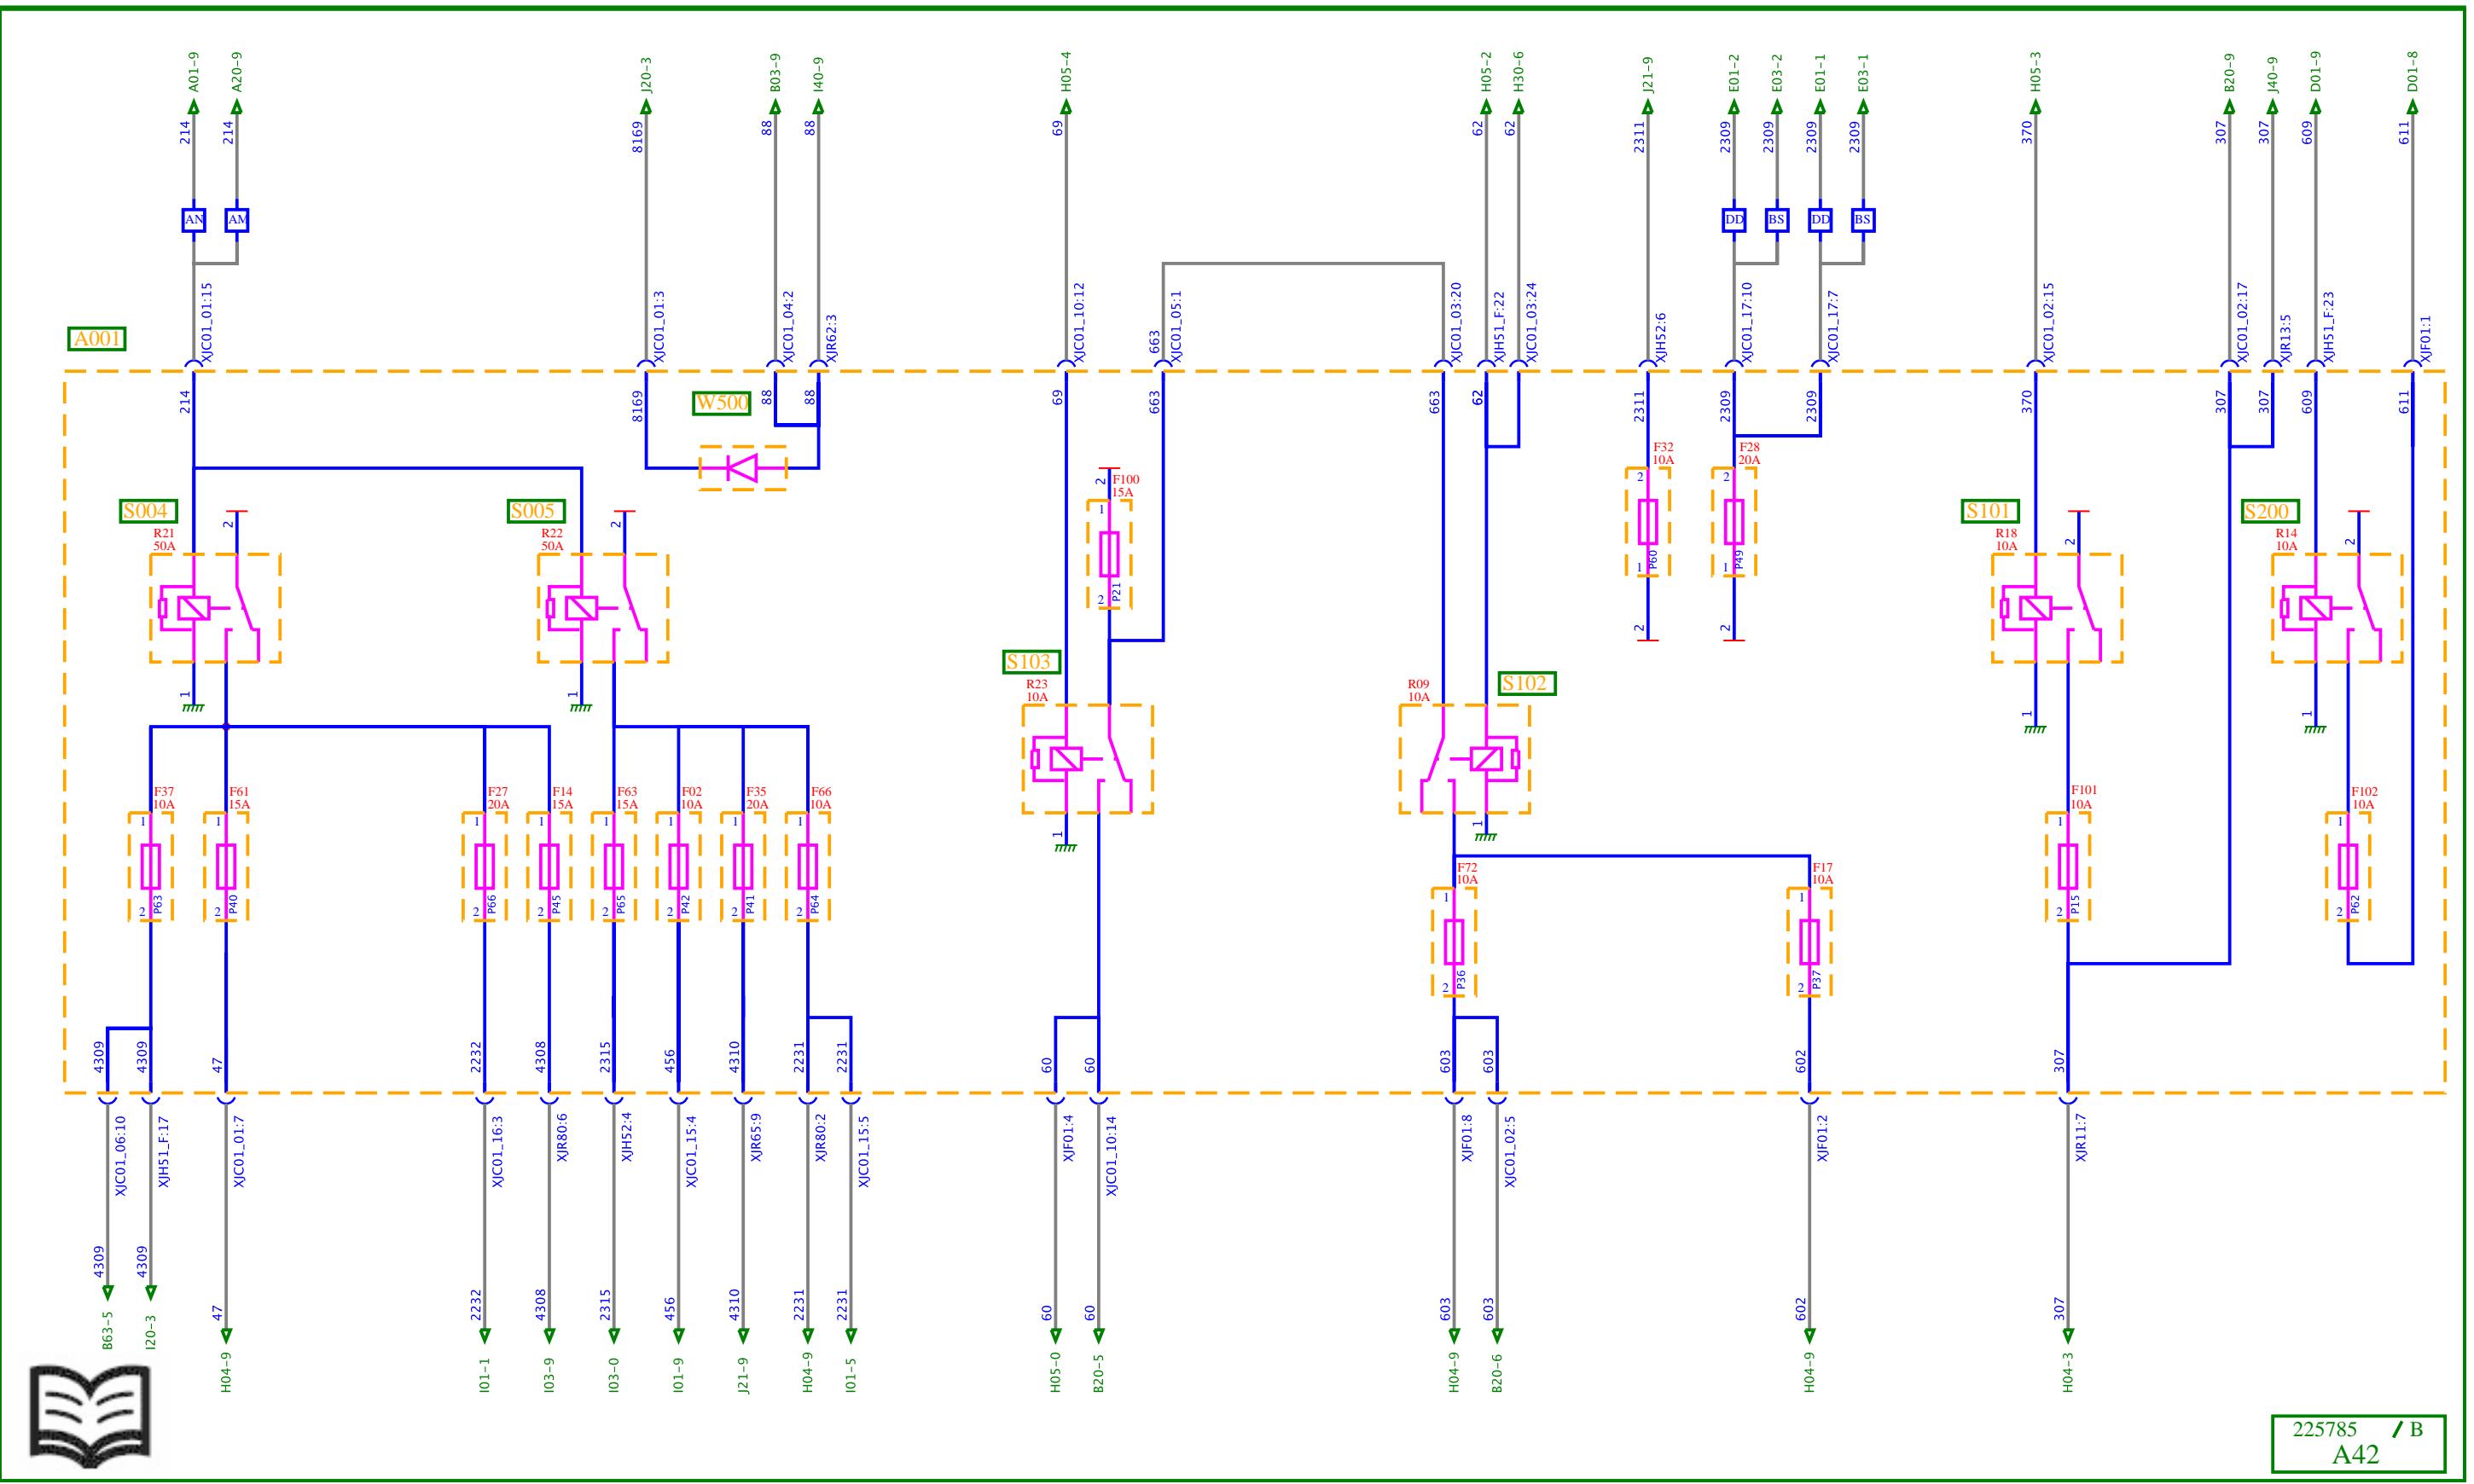

Electrical distribution (3/6)

Key to appliances

| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| S004 | Accessories power supply relay N° 1 | B2c |
| S005 | Accessories power supply relay N° 2 | B2c |
| S101 | Rear fog lights power supply relay | B2c |
| S102 | Main beam headlights power supply relay | B2c |
| S103 | Fog driving lights power supply relay | B2c |
| S200 | Automatic transmission management ECU power supply relay | B2c |
| W500 | Diode(s) | B2c |


AM: with ADR equipment


AN: without ADR equipment

BS: 4x2 vehicles

DD: 6x2 vehicles

Electrical distribution (3/6)

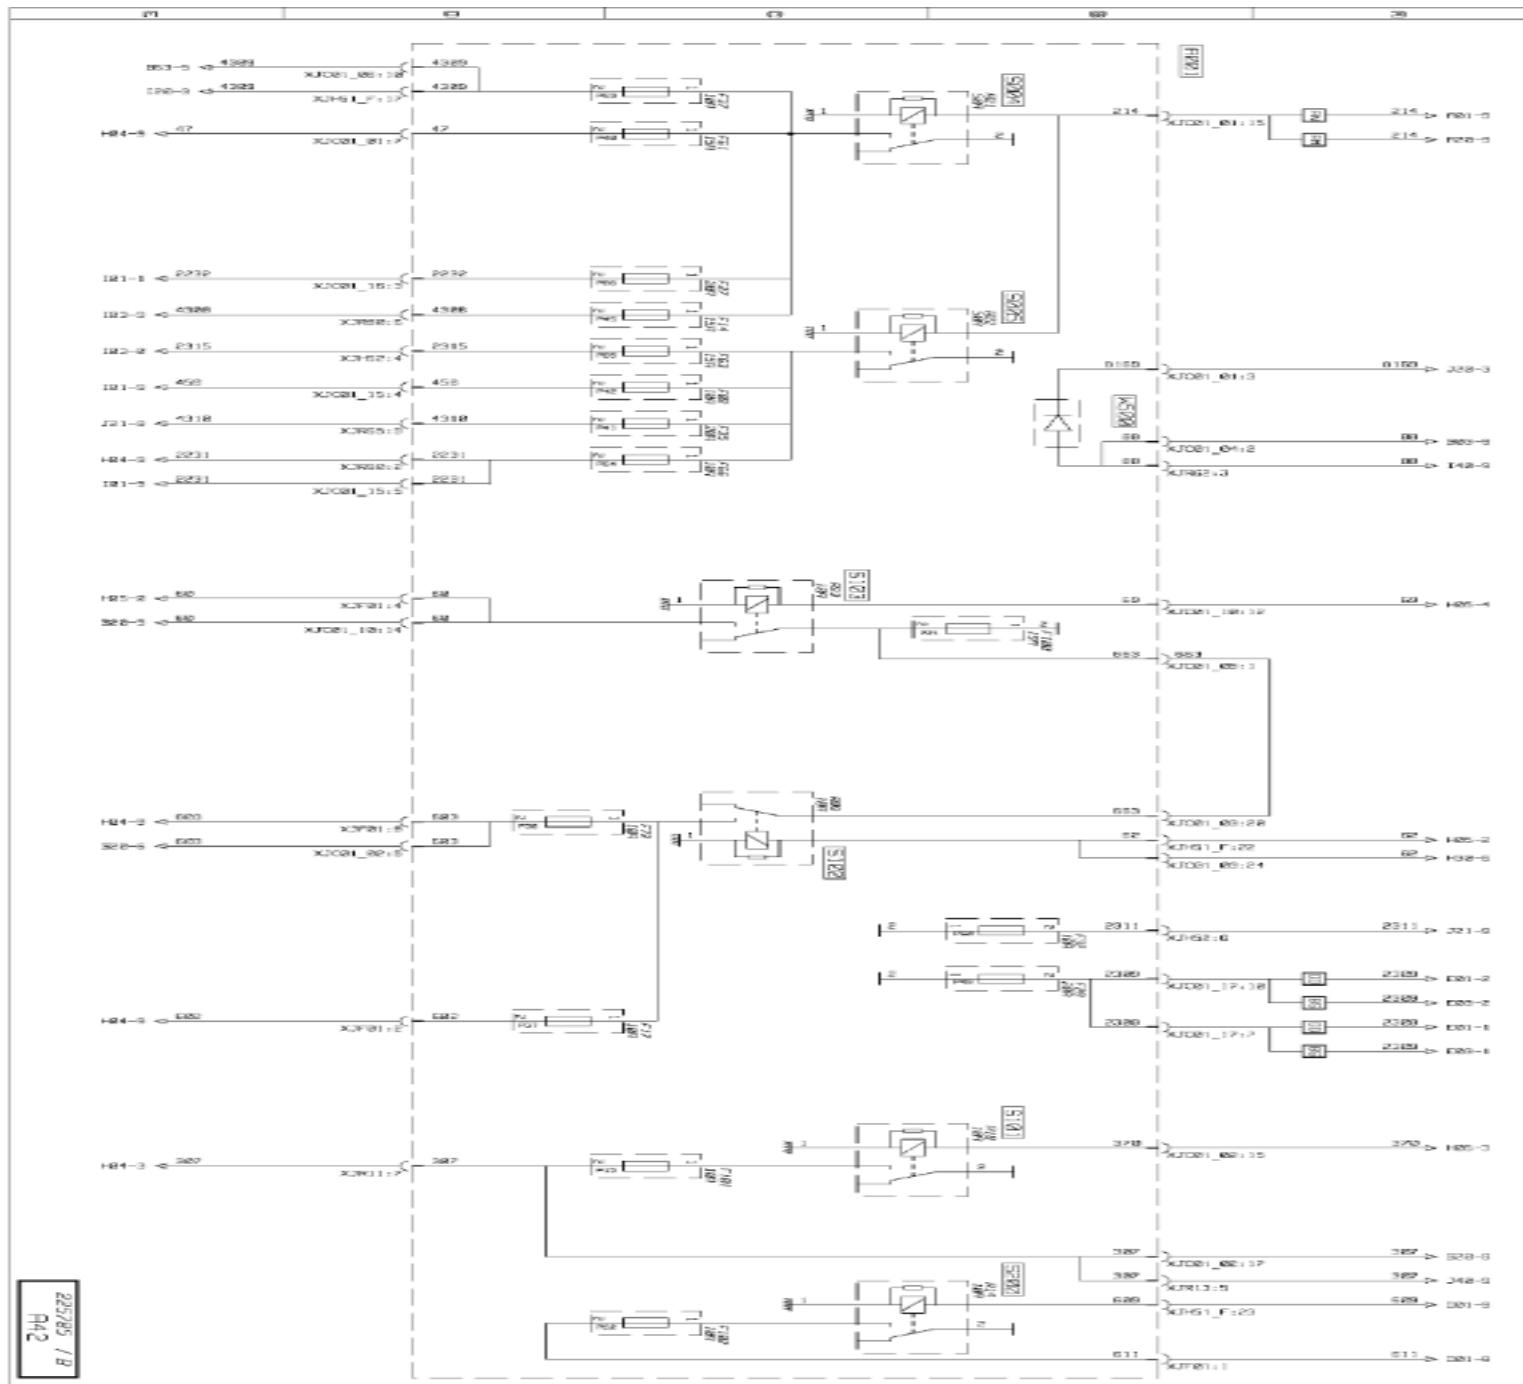

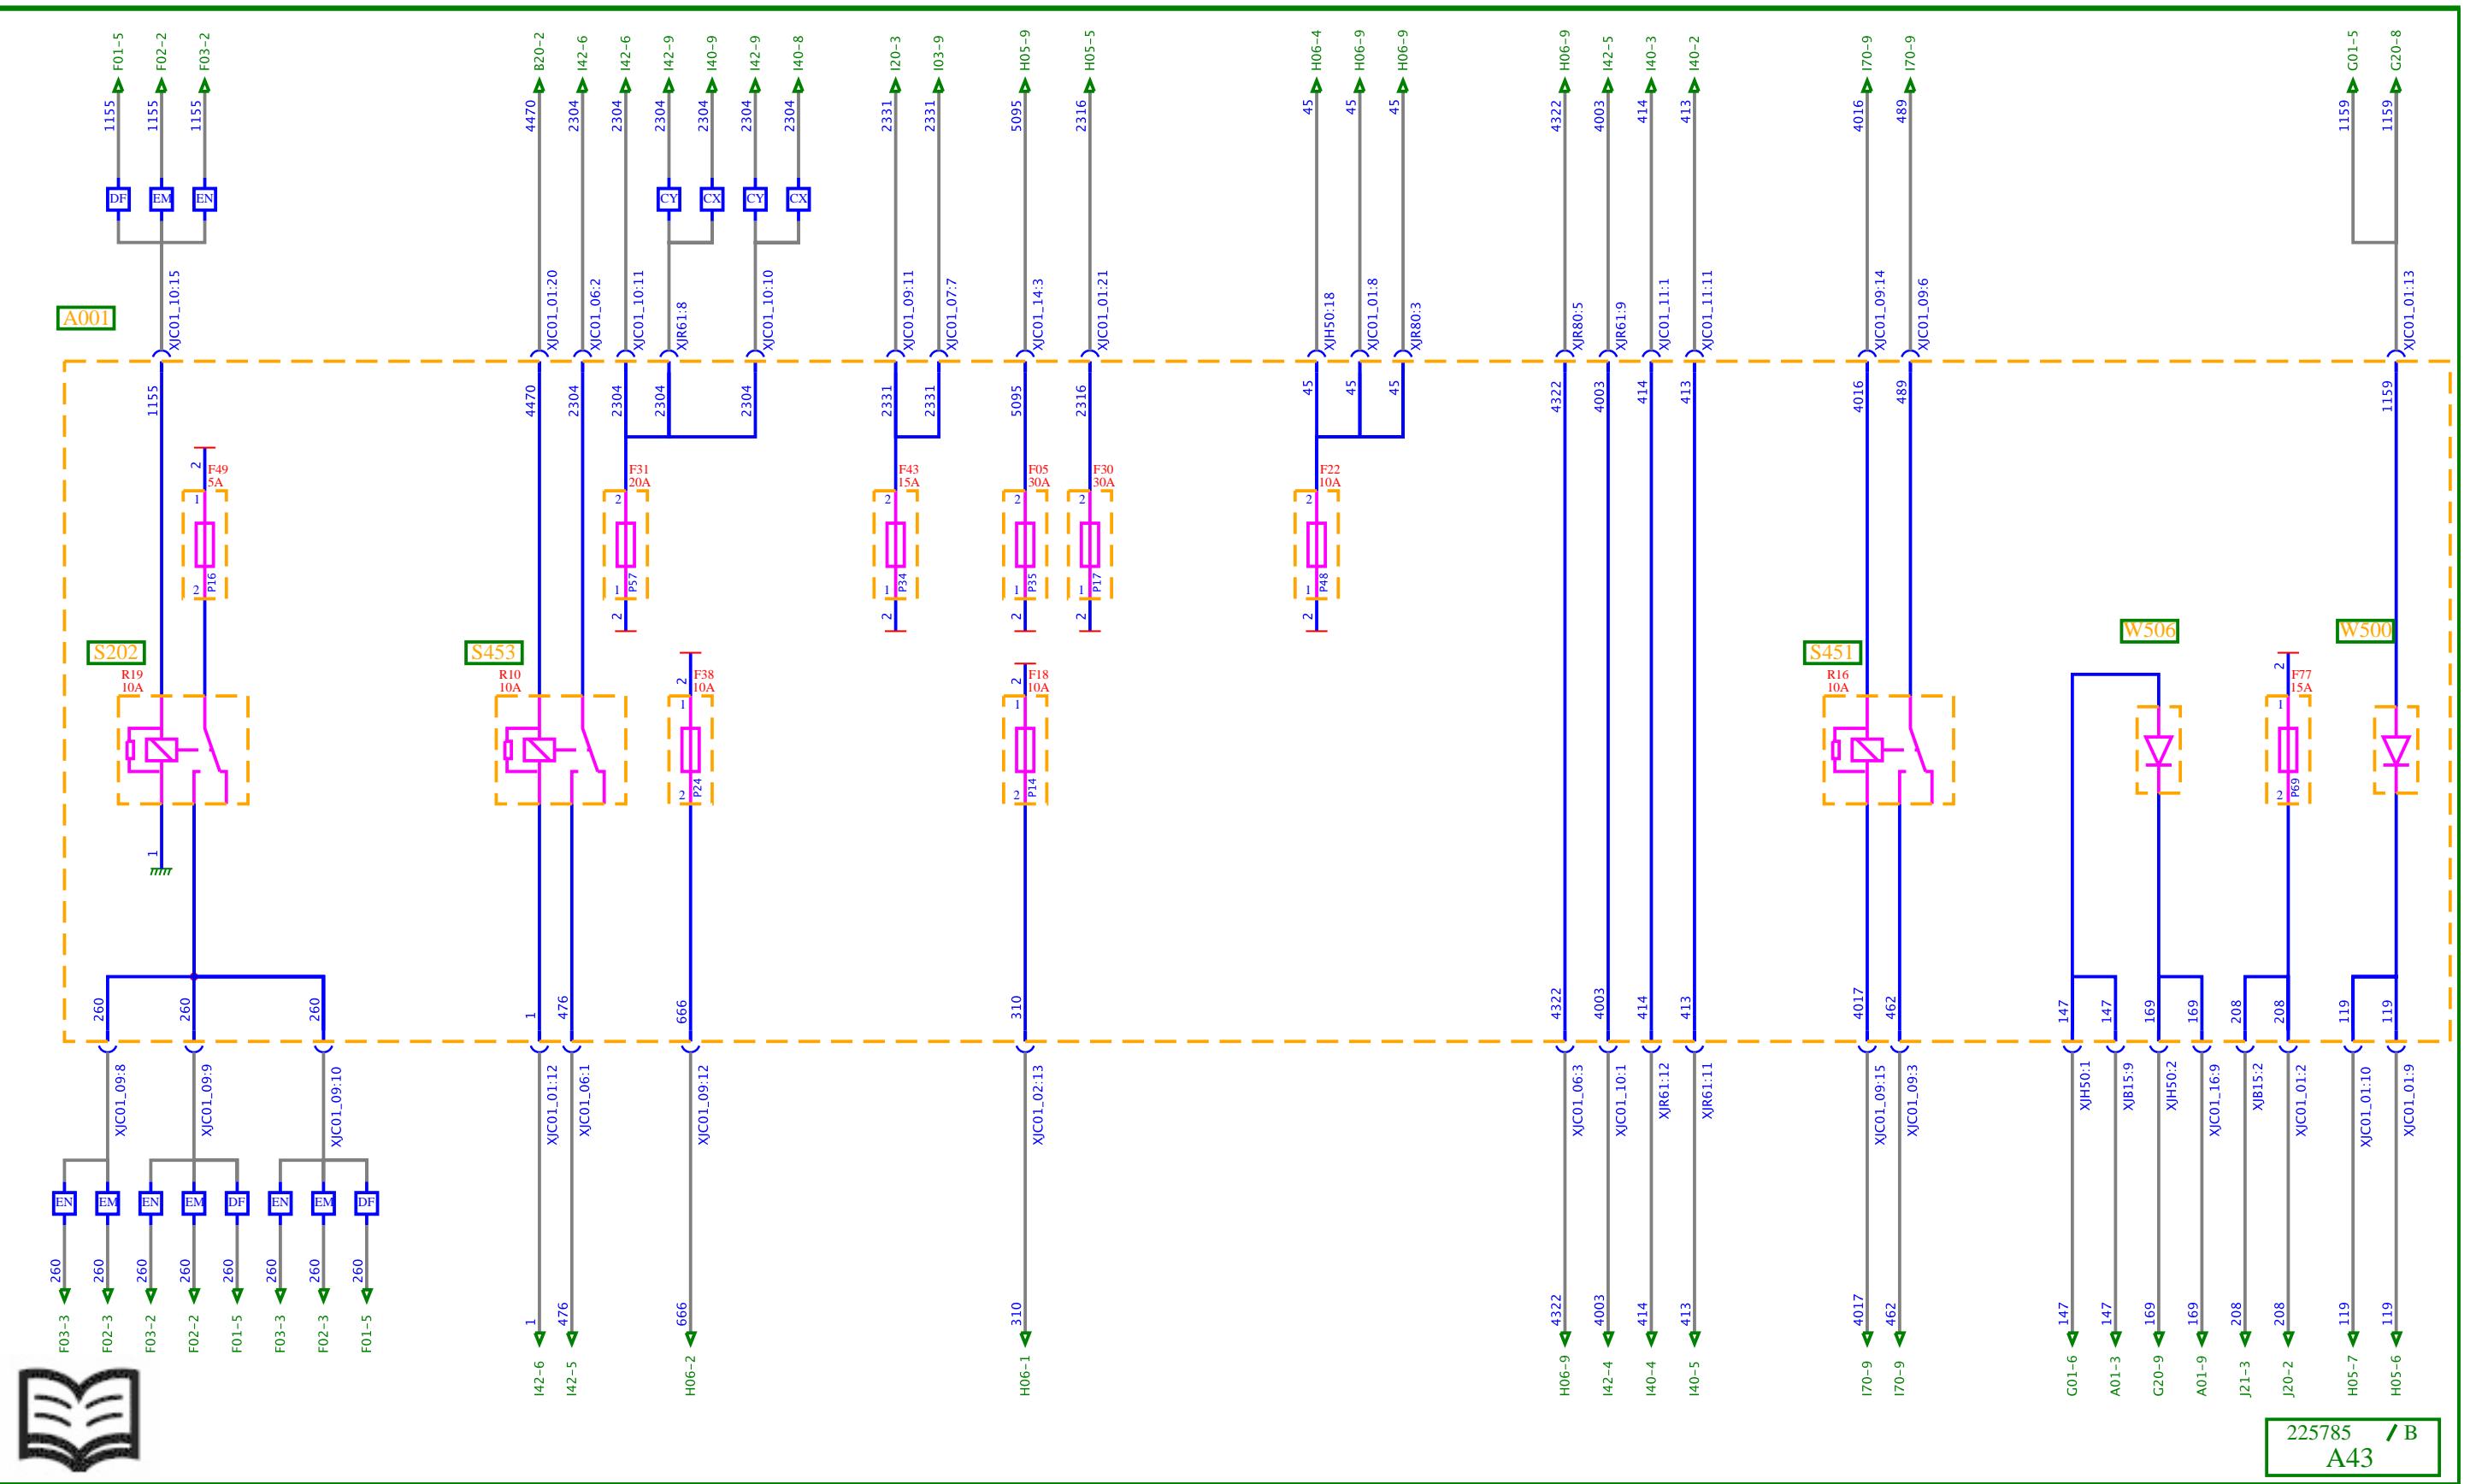

Electrical distribution (4/6)

Key to appliances

| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| S202 | Air suspension power supply relay | B2c |
| S451 | Air conditioning compressor clutch power supply relay | B2c |
| S453 | Add-on heater power supply relay | B2c |
| W500 | Diode(s) | B2c |
| W506 | Doors central locking diode | B2c |

CX: Without air / air independent heating


CY: Without air / water independent heating


DF: with electronic air suspension tractor vehicle **4x2**

EM: with **4x2 - 6x2** vehicle rear electronic air suspension

EN: with **4x2 - 6x2** vehicle integral electronic air suspension

Electrical distribution (4/6)

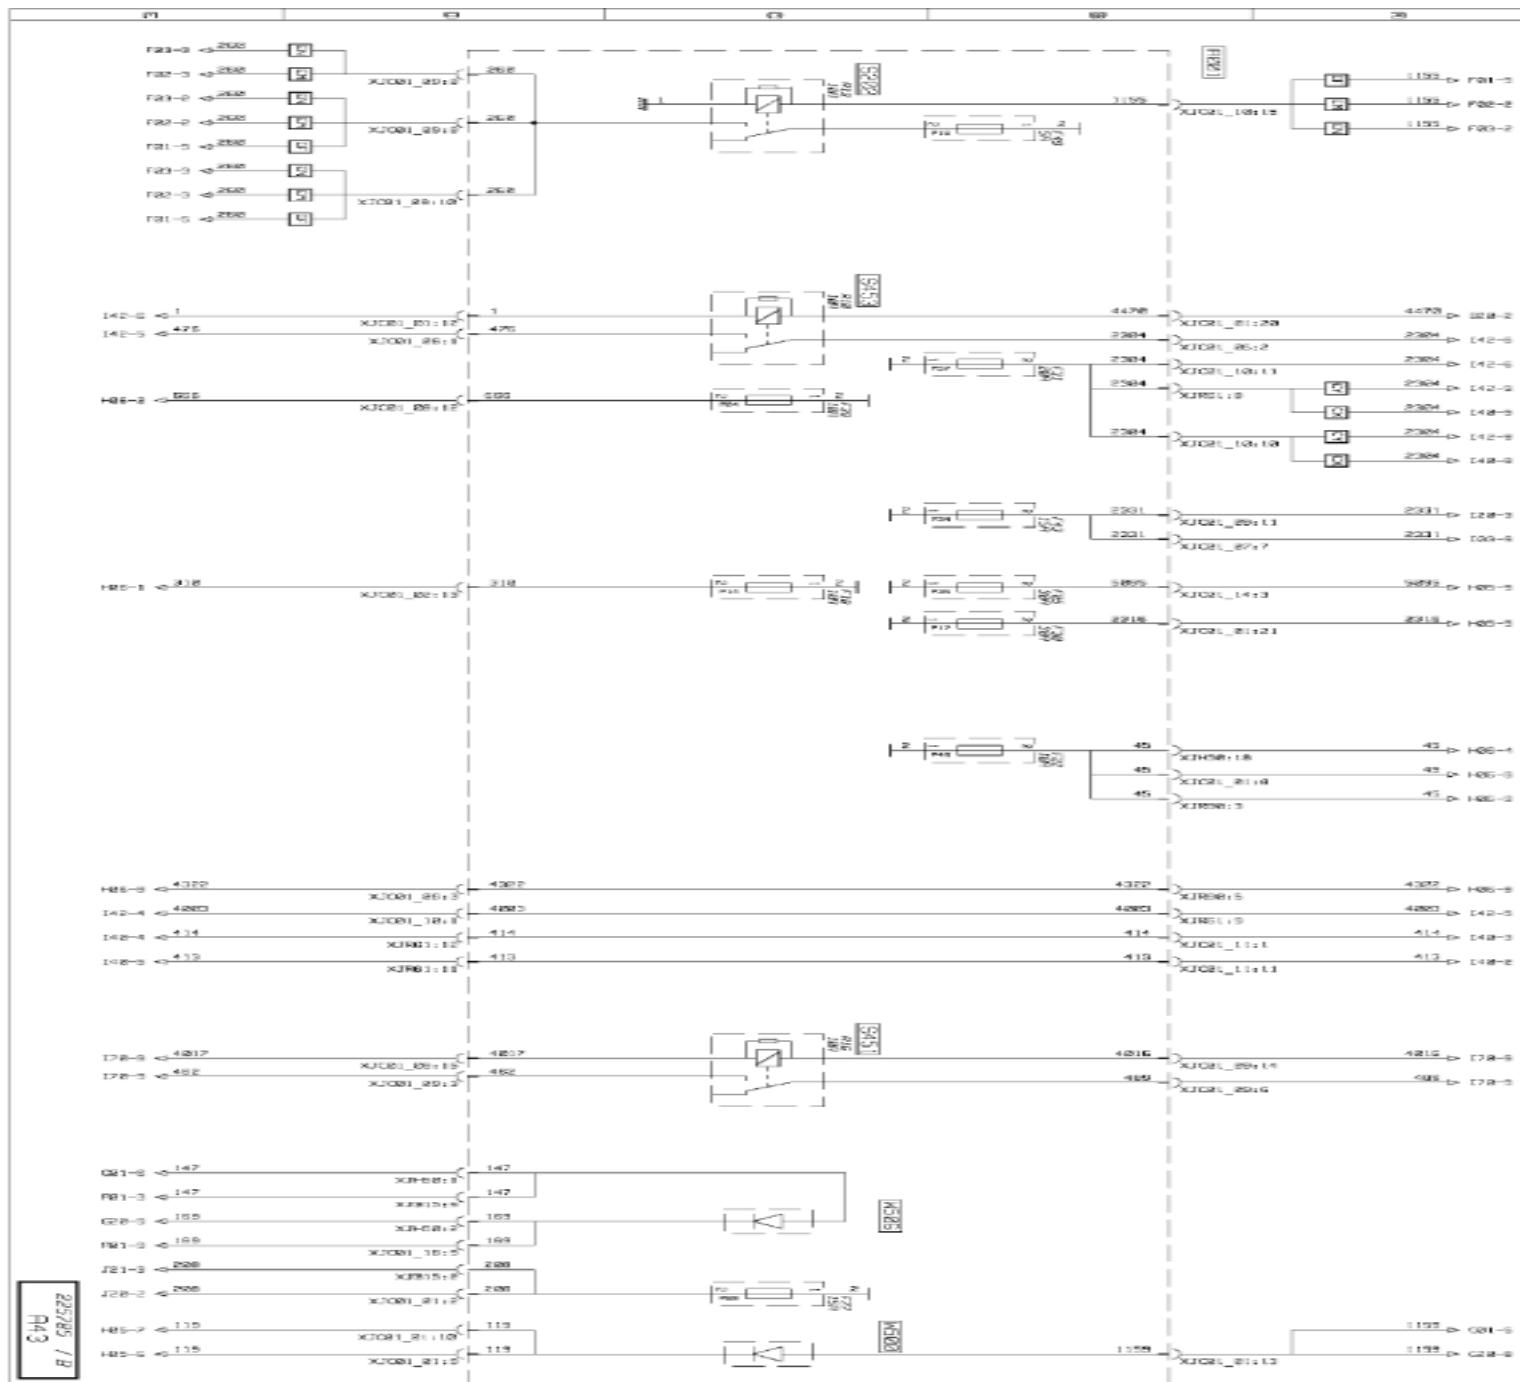

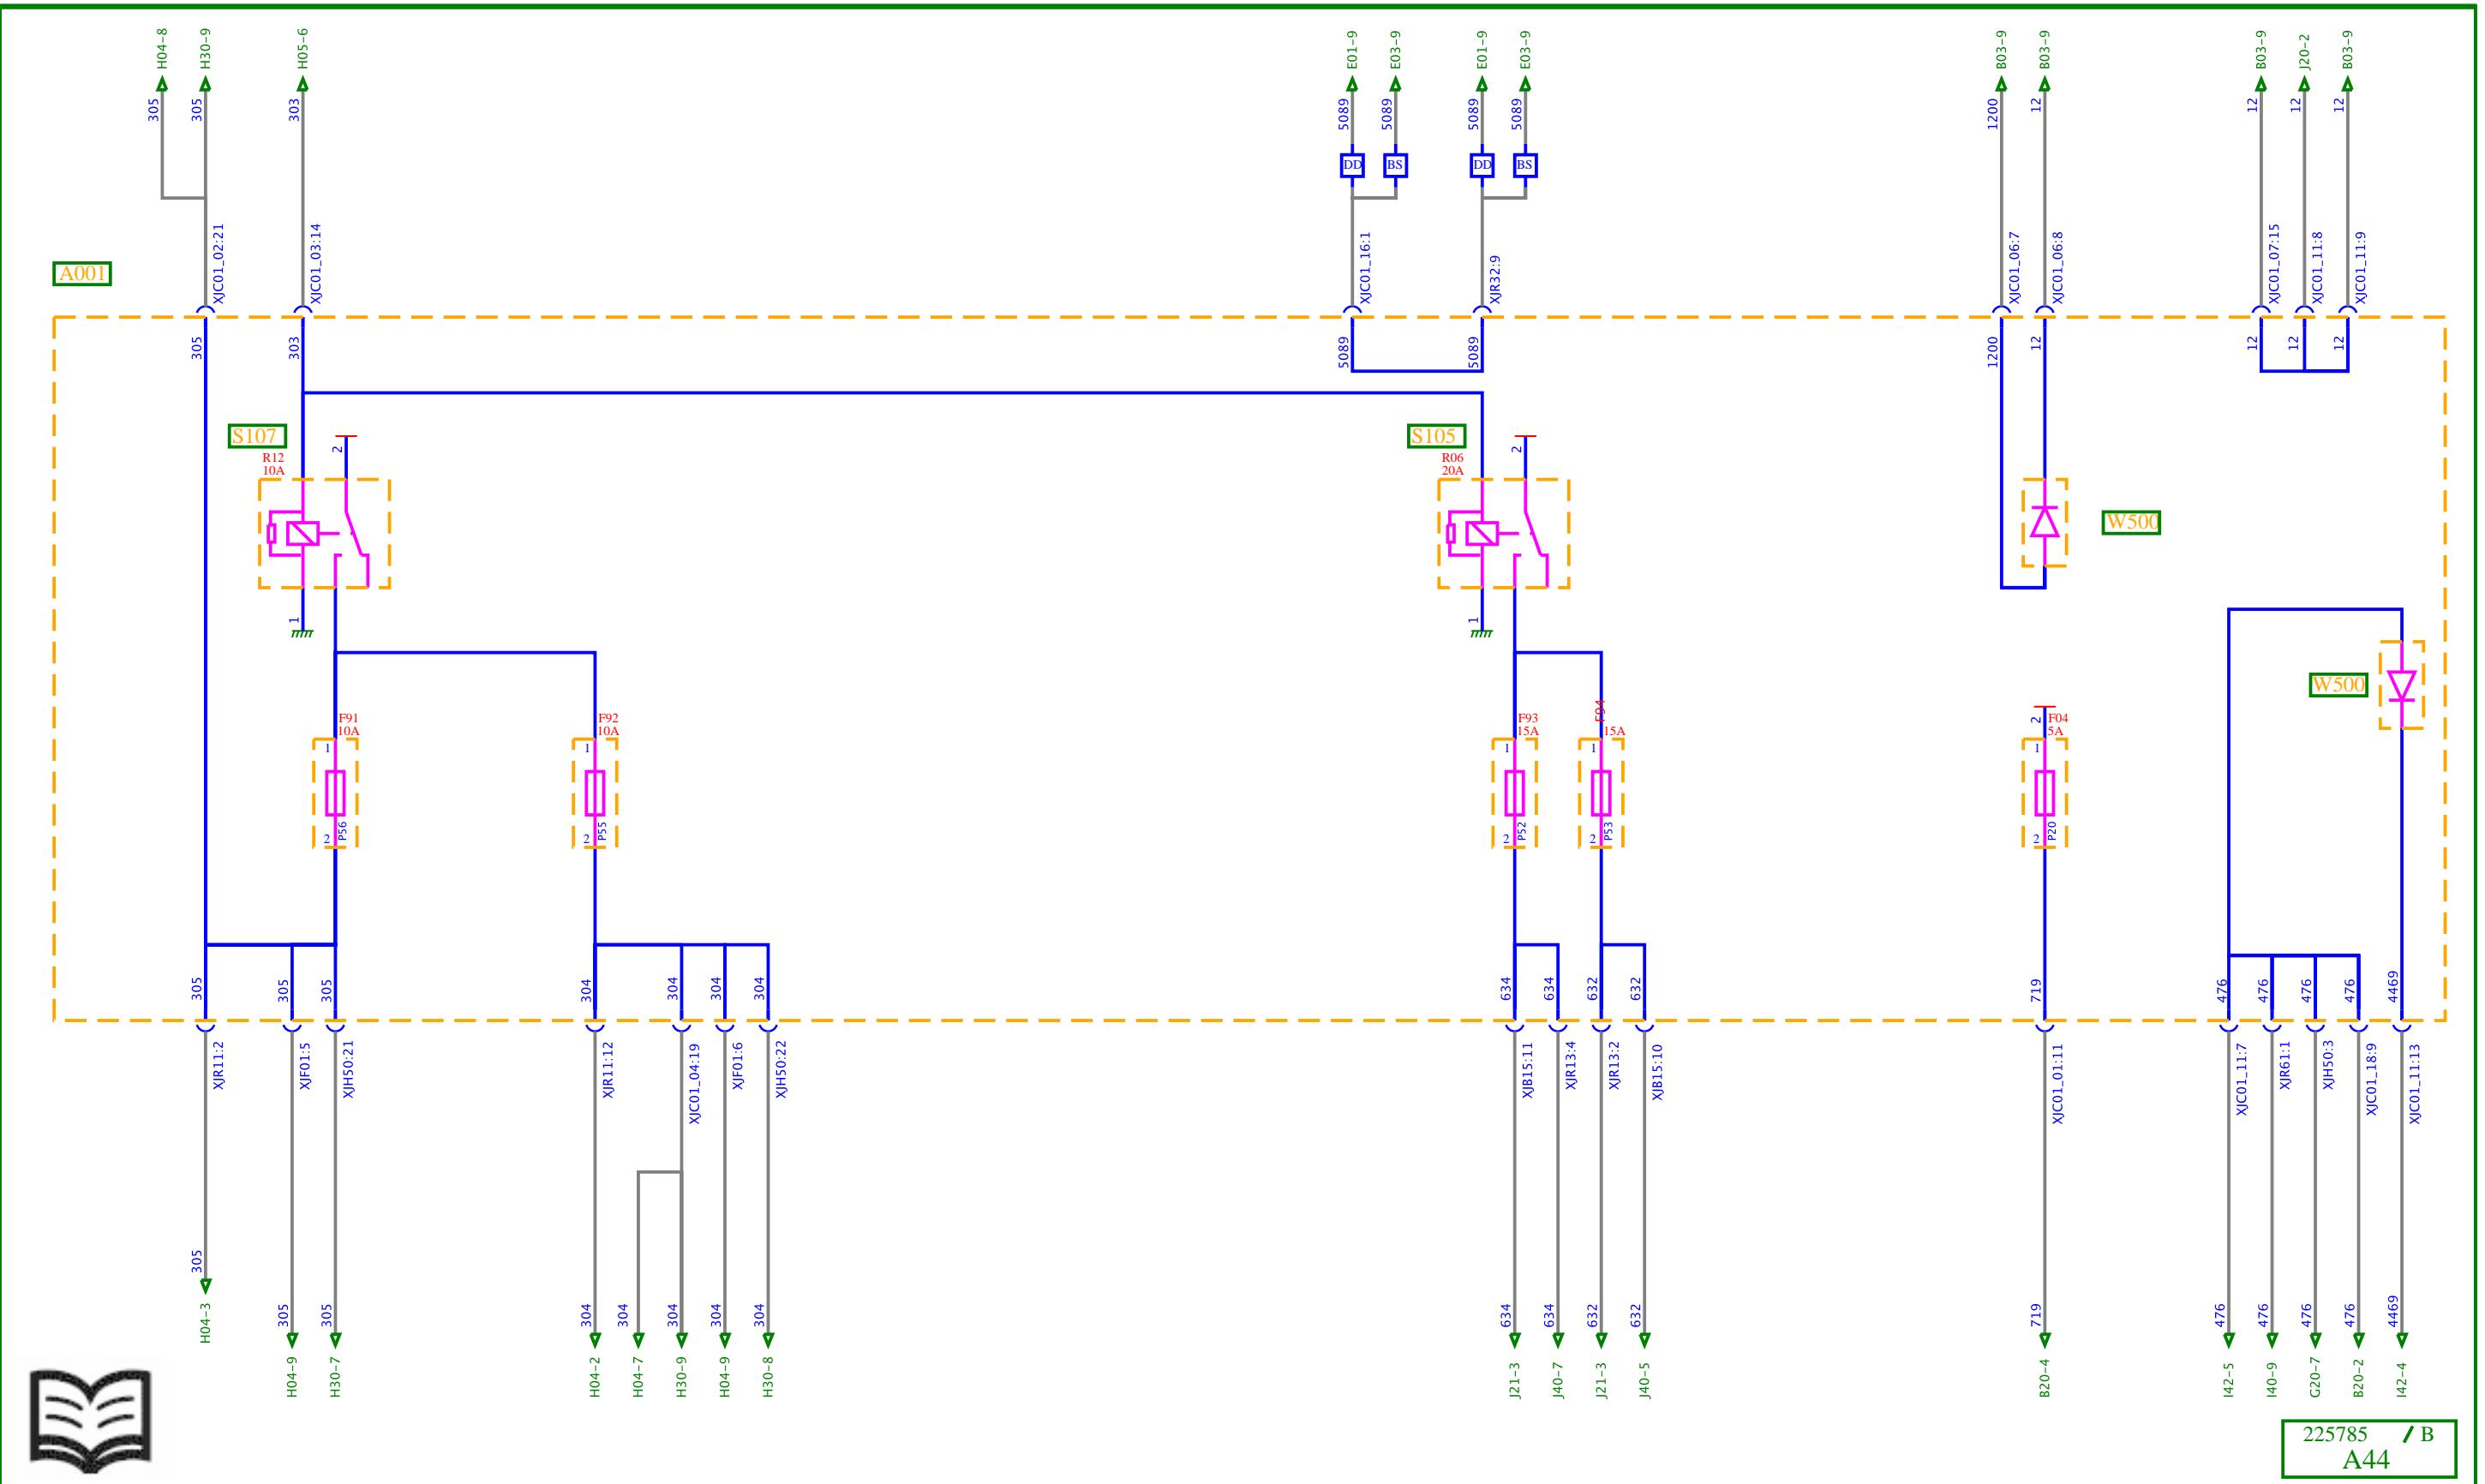

Electrical distribution (5/6)


Key to appliances


| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| S105 | RH and LH side/parking and marker lights power supply relay | B2c |
| S107 | RH and LH side/parking and marker lights power supply relay (trailer and bodybuilder) | B2c |
| W500 | Diode(s) | B2c |

BS: 4x2 vehicles

DD: 6x2 vehicles

Electrical distribution (5/6)

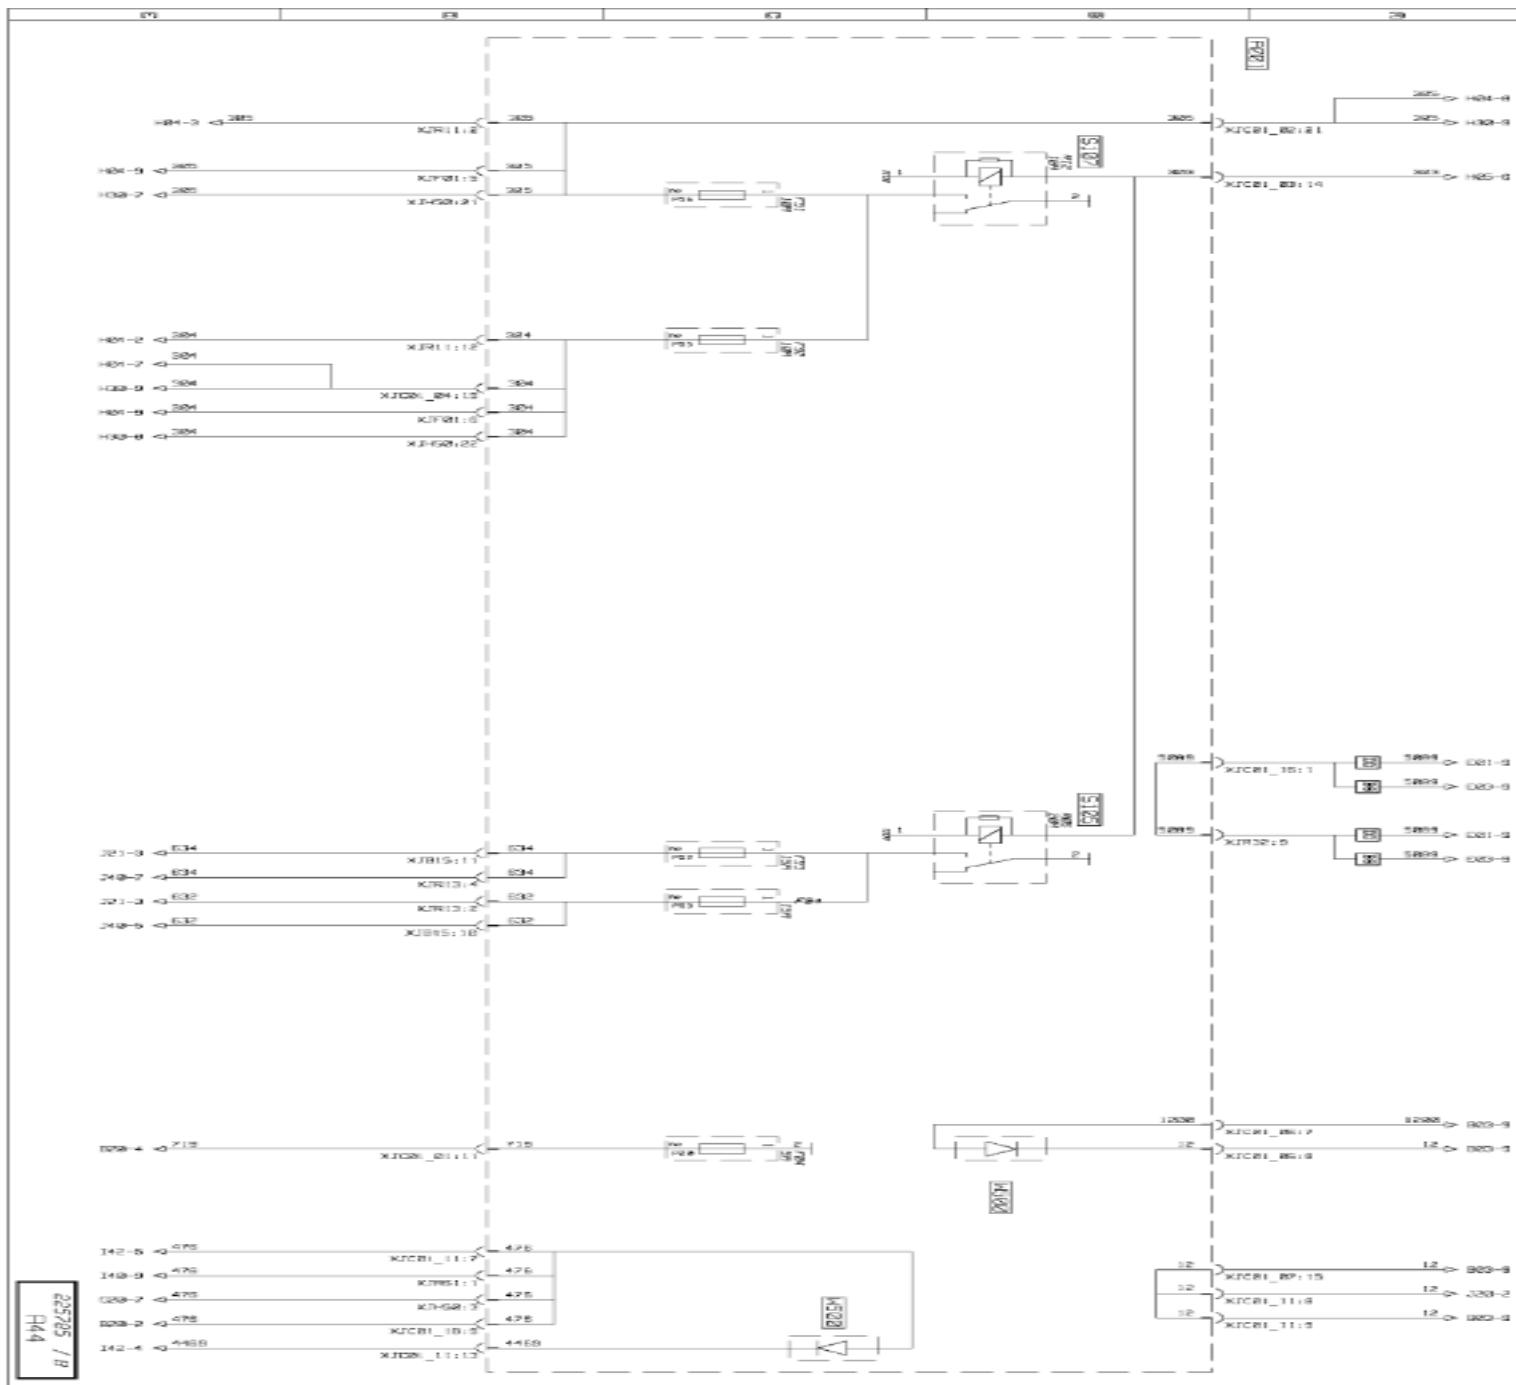

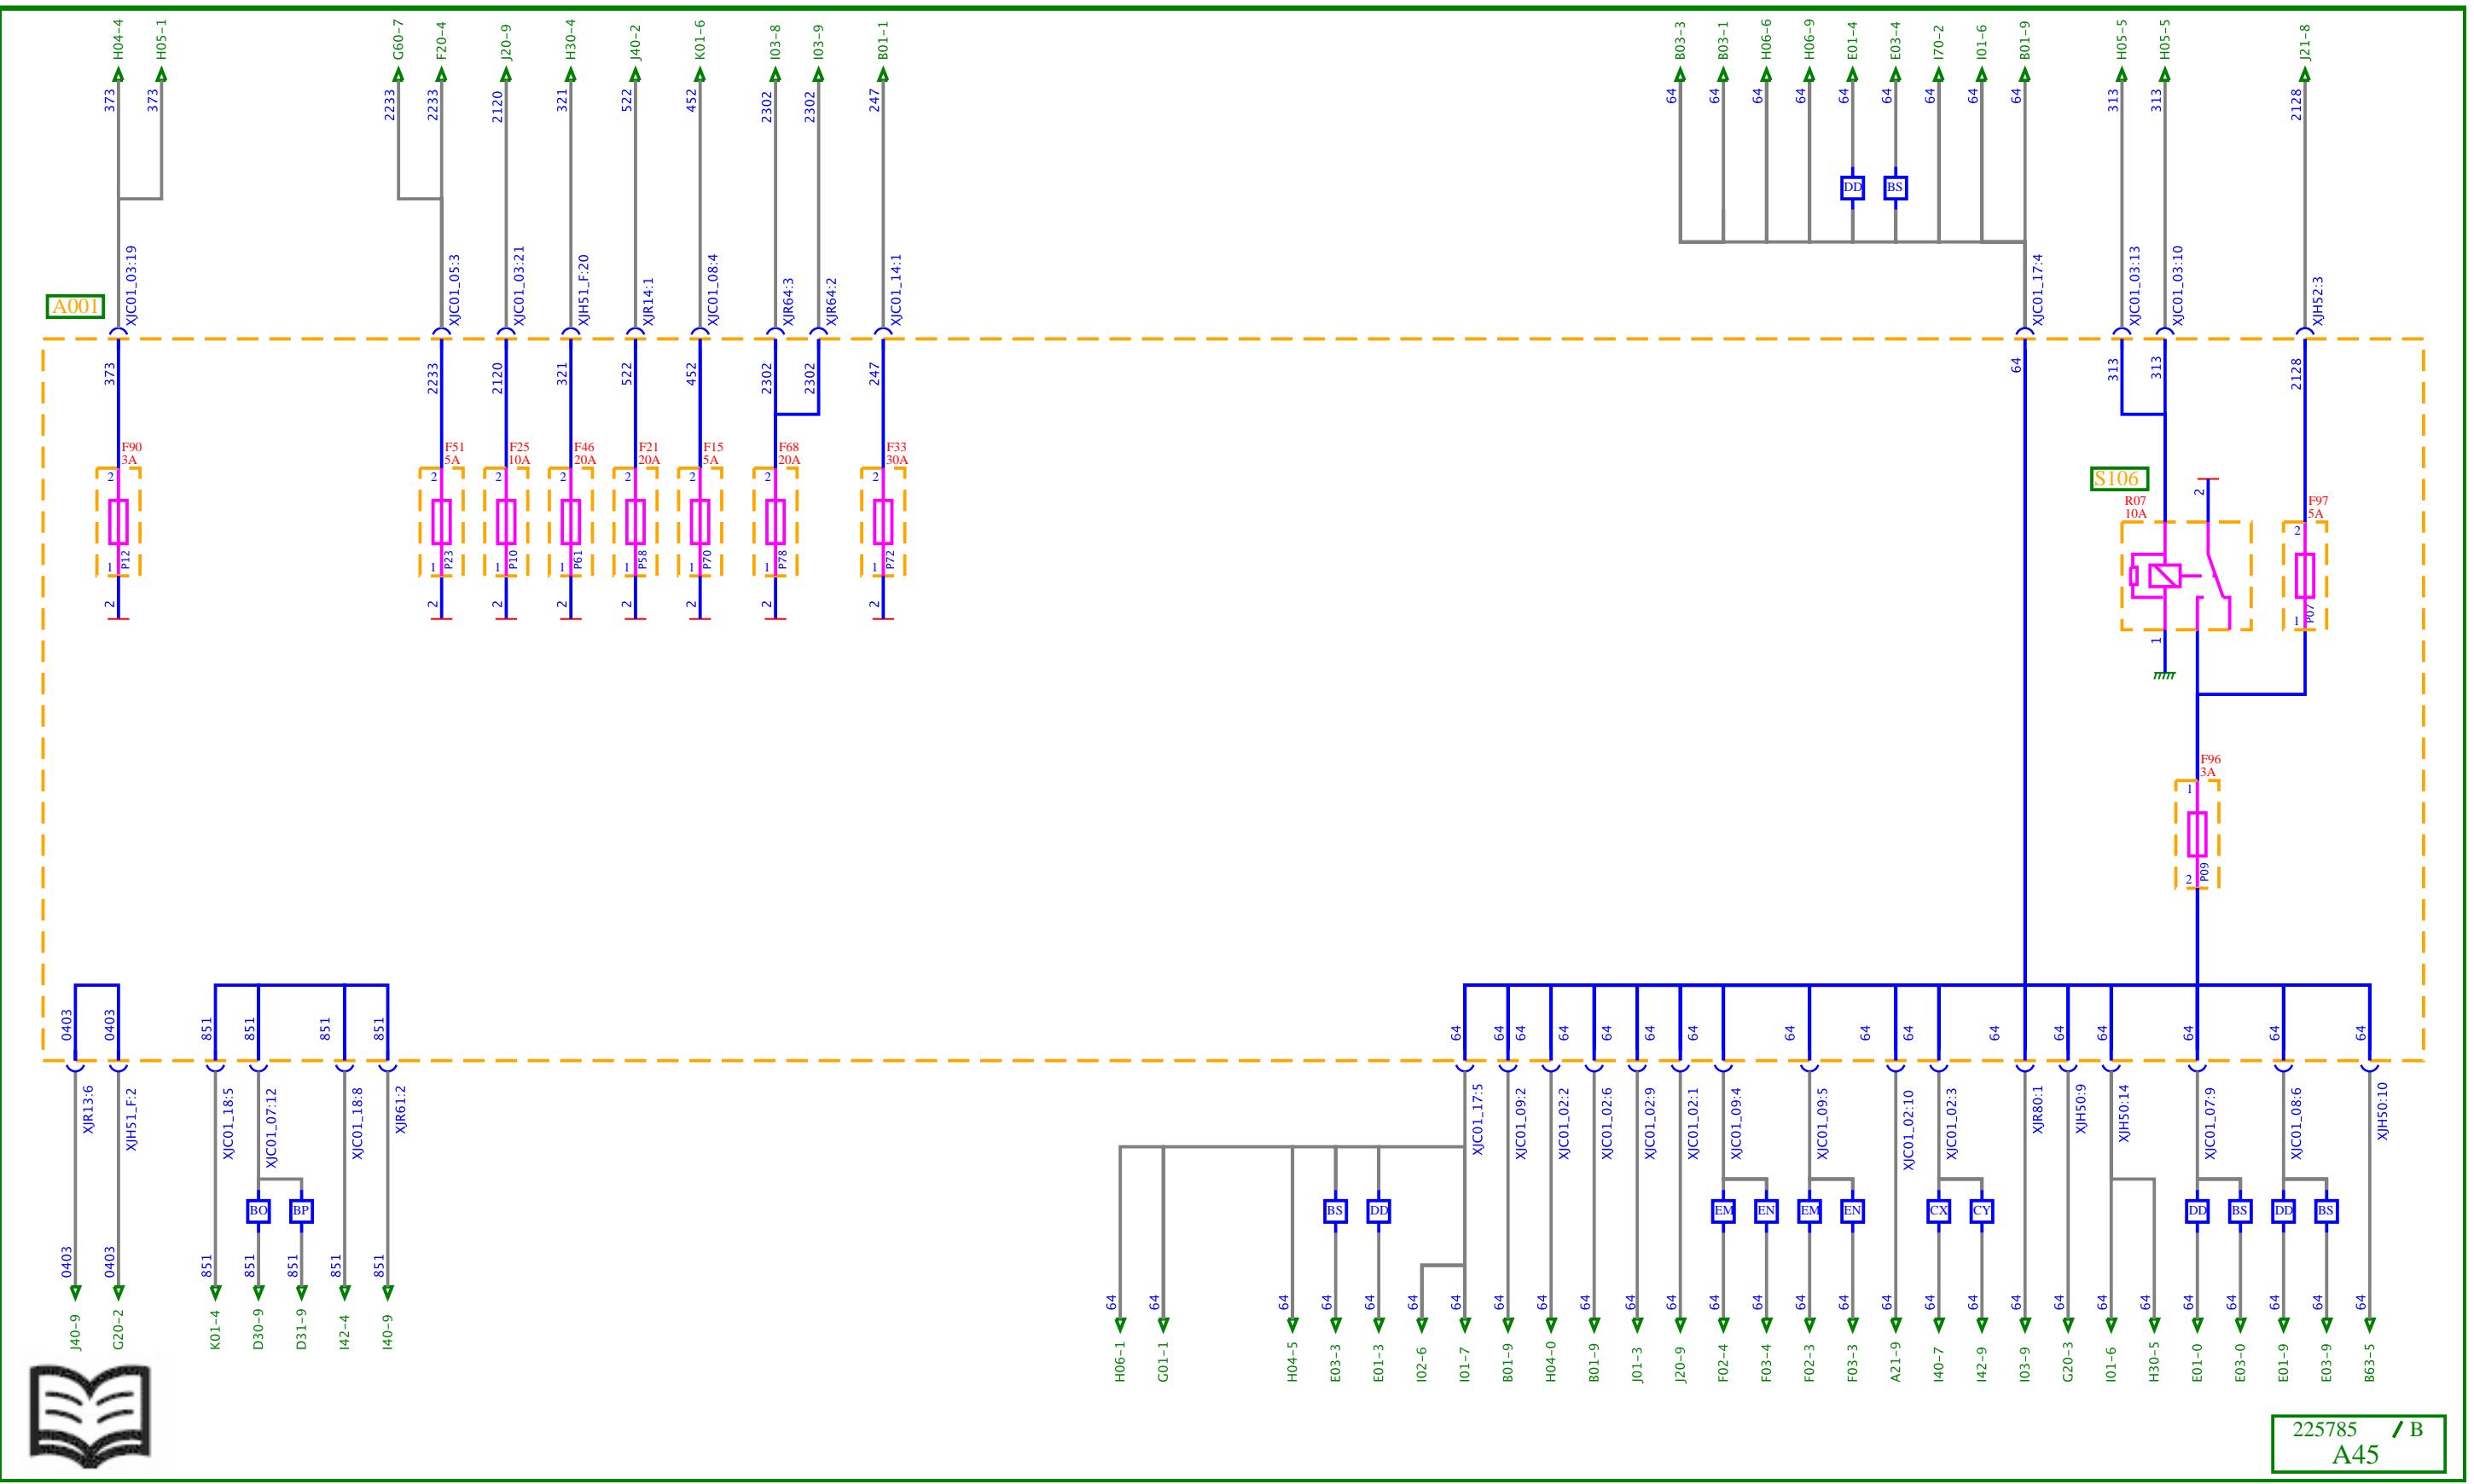

Electrical distribution (6/6)

Key to appliances

| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| S106 | Switches night lighting power supply relay | B2c |

BO: with **ECOSPLIT 2** hydraulic retarder

BP: with **ECOSPLIT 4** hydraulic retarder

BS: **4x2** vehicles

DD: **6x2** vehicles


CX: Without air / air independent heating


CY: Without air / water independent heating

EM: with **4x2 - 6x2** vehicle rear electronic air suspension

EN: with **4x2 - 6x2** vehicle integral electronic air suspension

Electrical distribution (6/6)

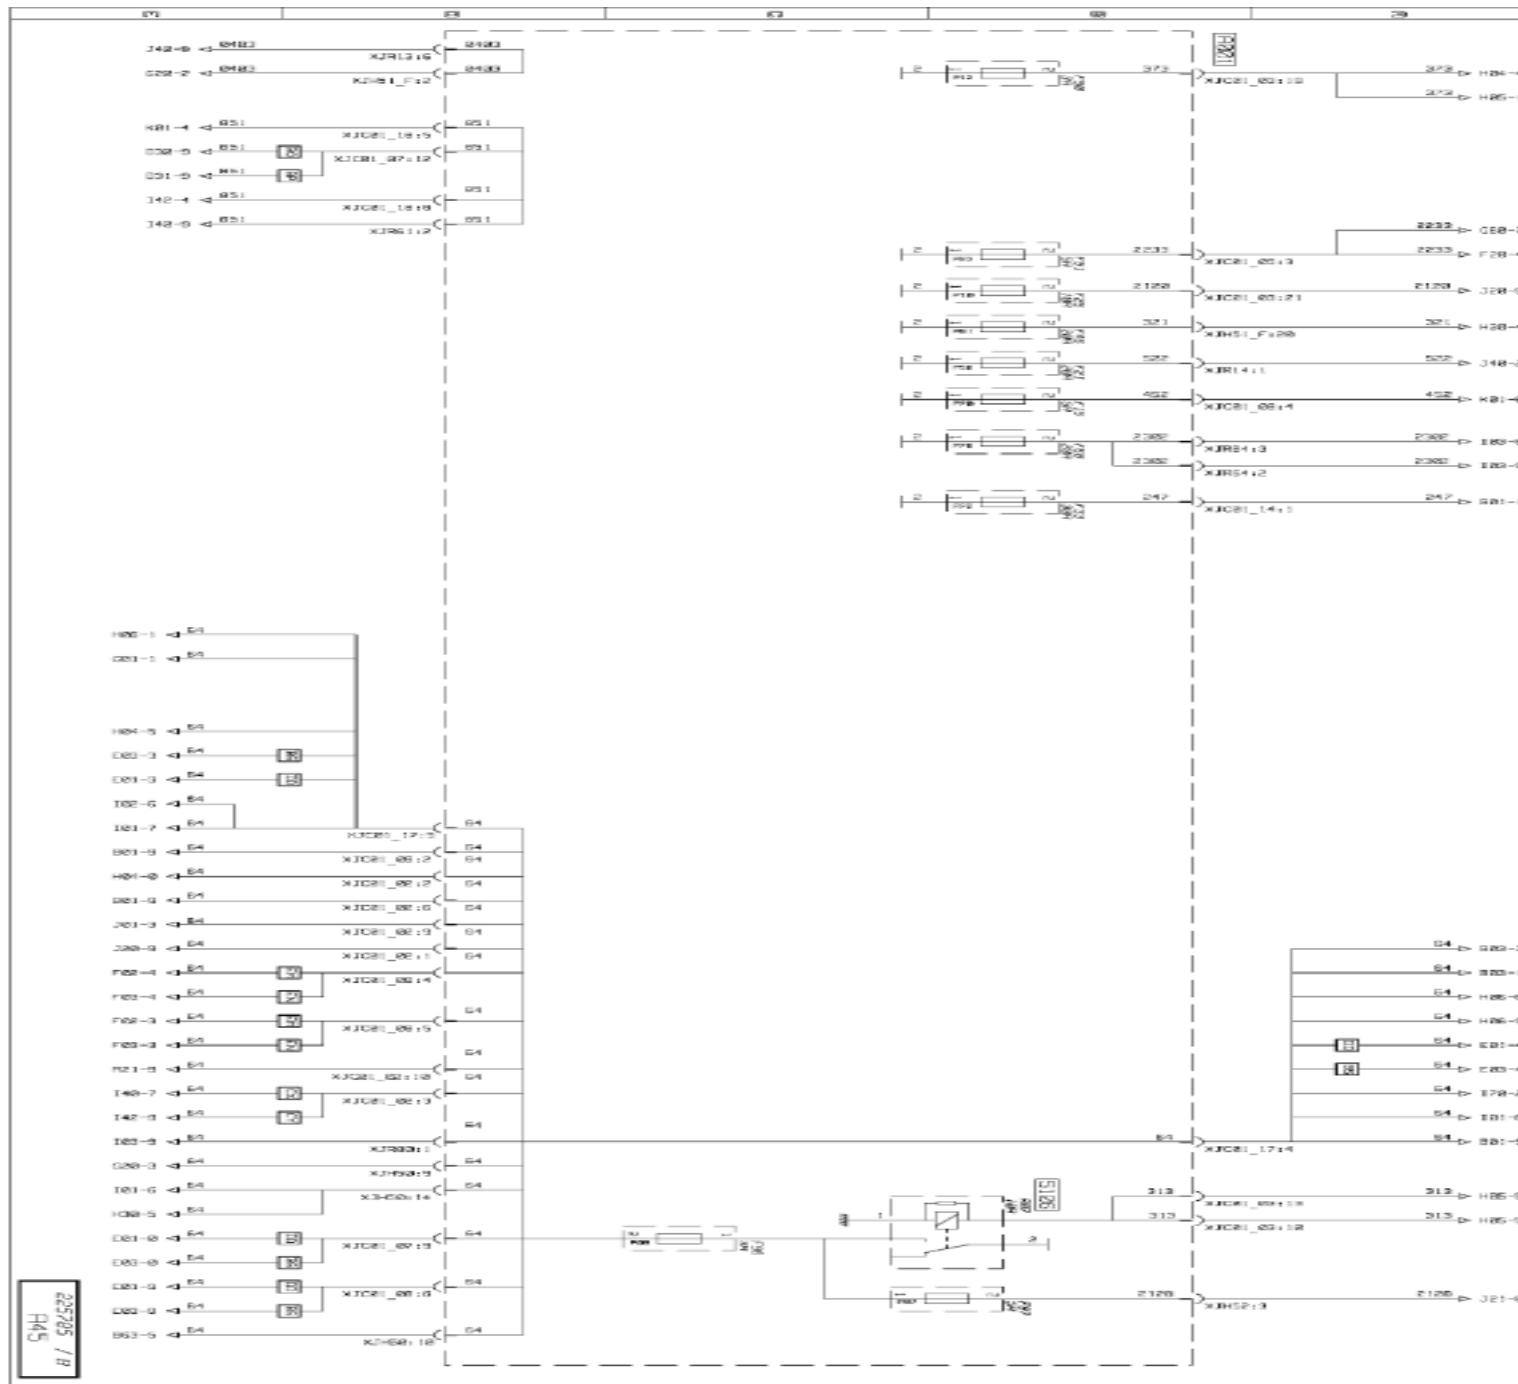

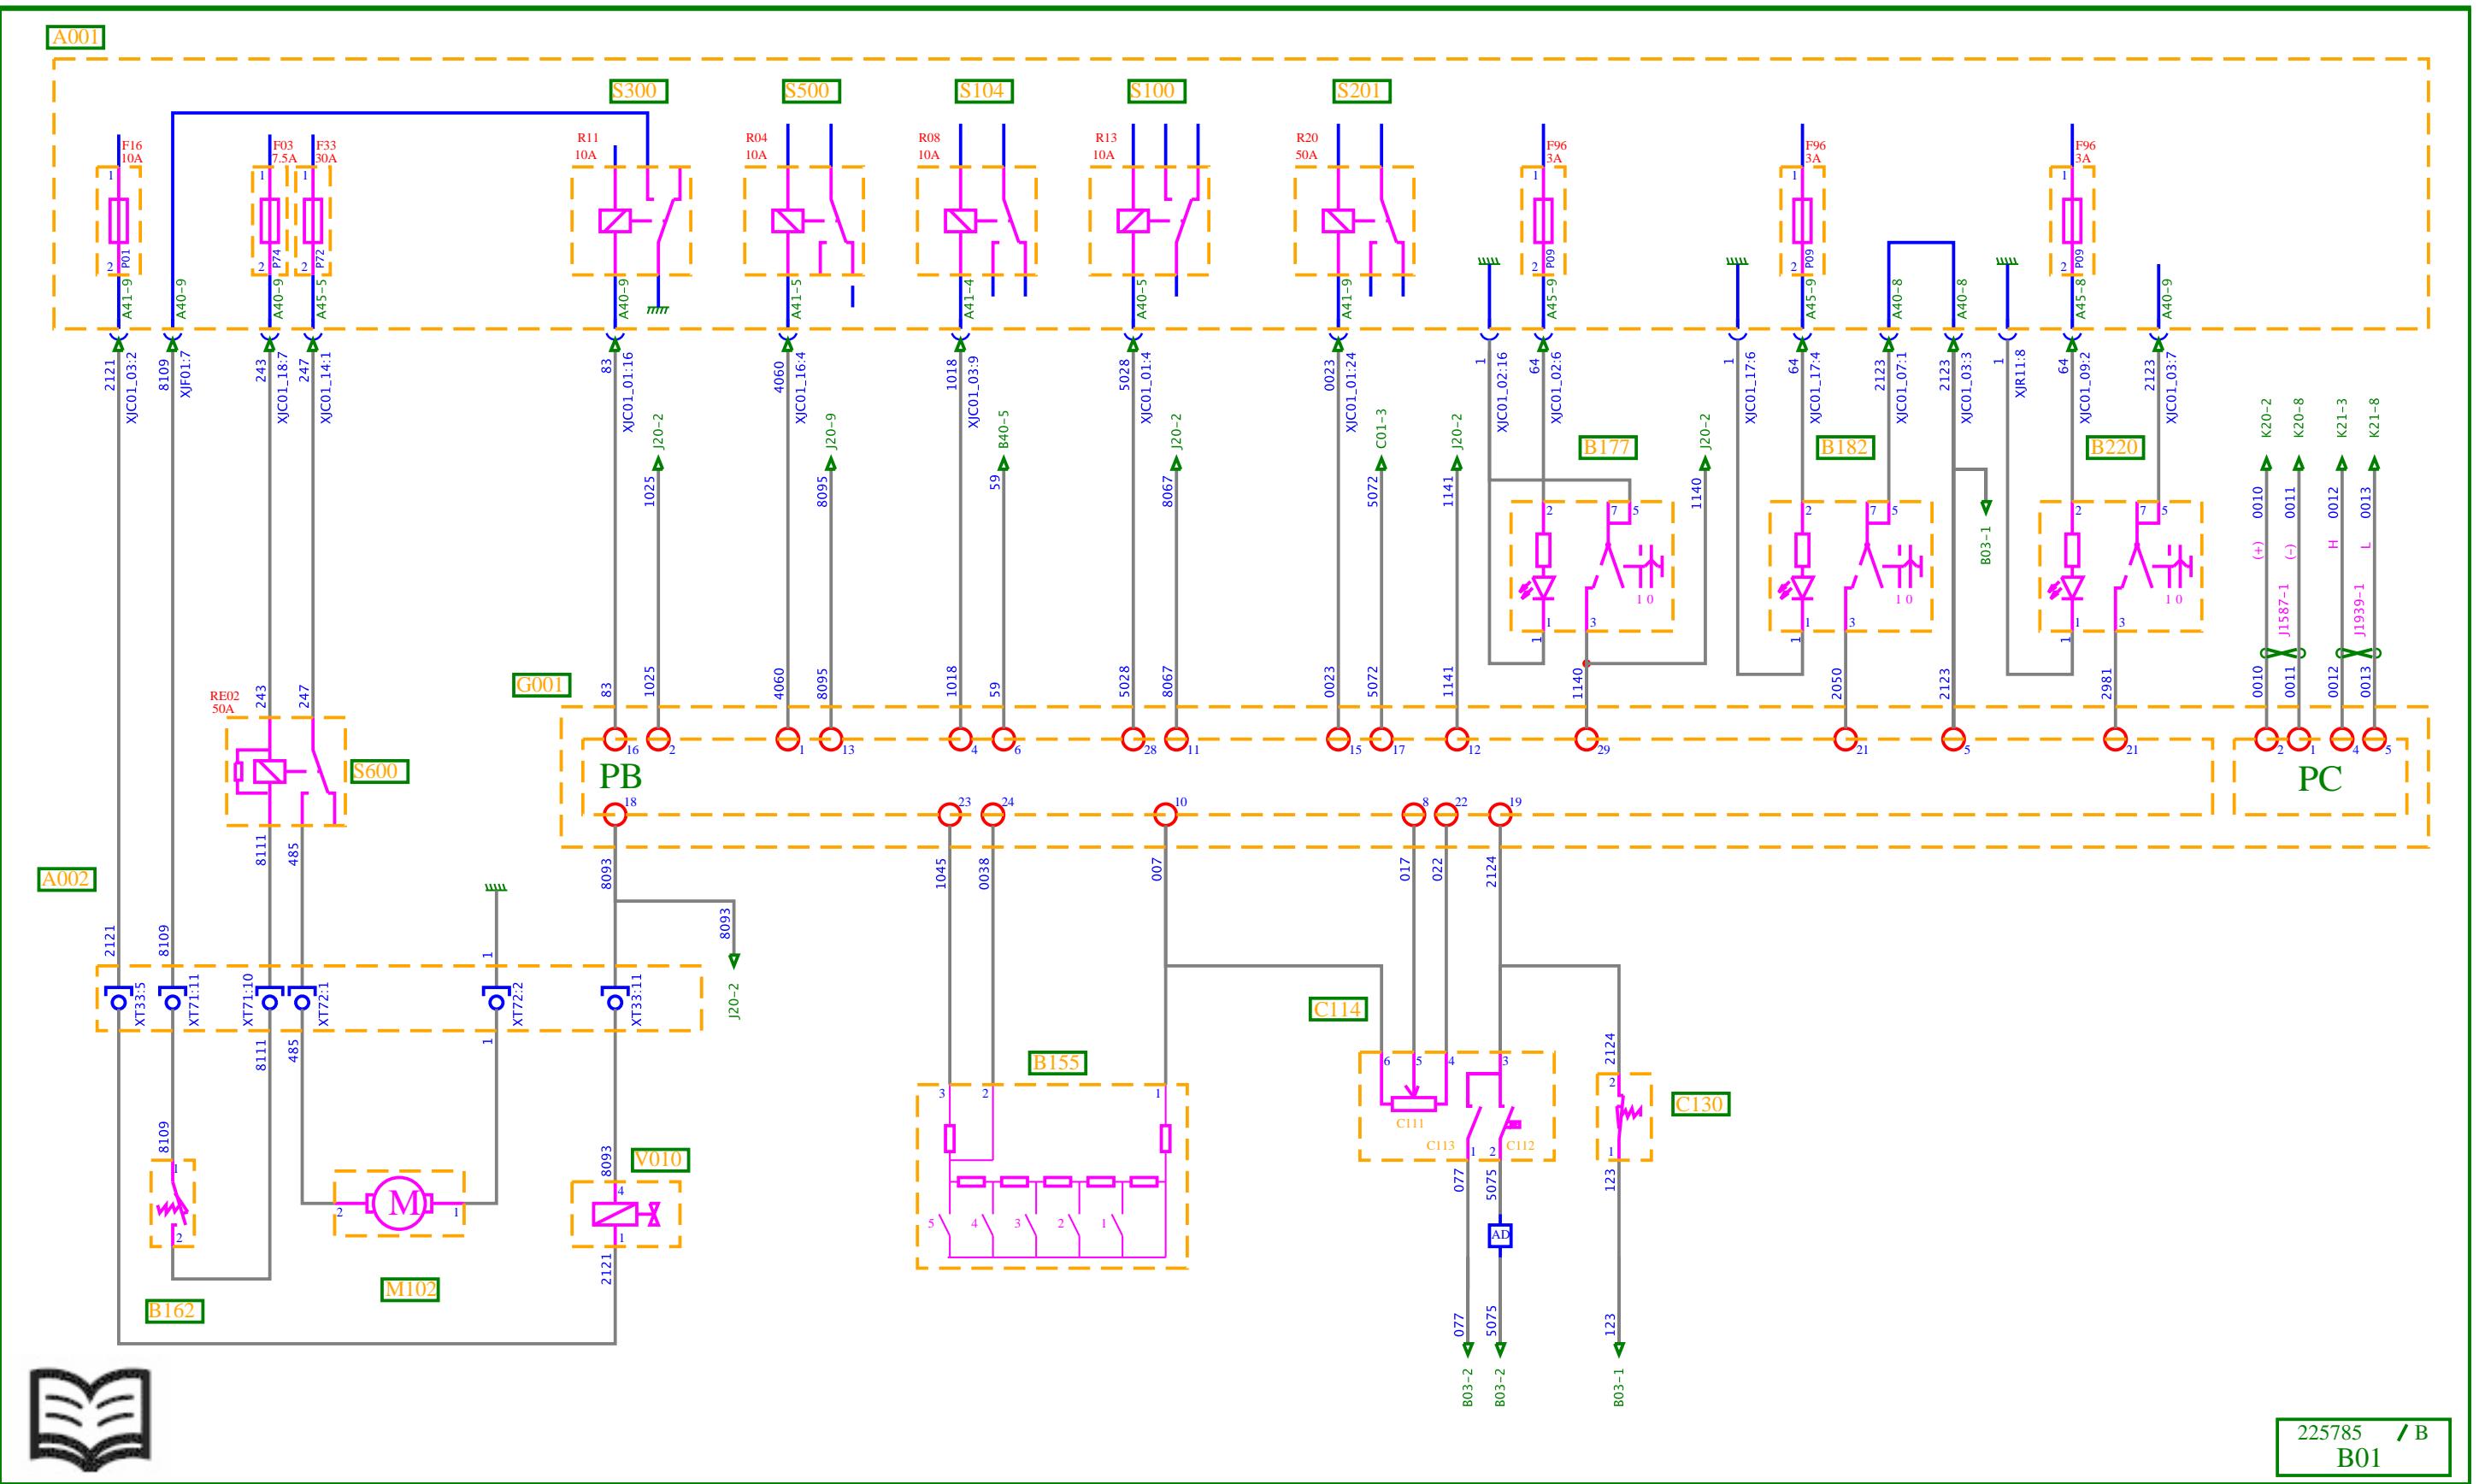


Vehicle electronic management (1/2)

Key to appliances


| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B155 | Electric or hydraulic retarder control | C2c |
| B162 | Cab tilting control | A4d |
| B177 | PTO 1 engagement request control (in cab) | C2b |
| B182 | Auto/manual selection control | C2b |
| B220 | Optiroll control | B2c |
| C111 | Accelerator pedal position sensor | C1c |
| C112 | Accelerator pedal "rest" position sensor N° 2 | C1c |
| C113 | Accelerator pedal rest position sensor | C1c |
| C114 | Accelerator pedal sensor unit | C1c |
| C130 | Clutch pedal position sensor | C1c |
| G001 | Vehicle management ECU | B2b |
| M102 | Cab tilting motor | A4c |
| S100 | Stop lights power supply relay | B2c |
| S104 | Reversing lights power supply relay | B2c |
| S201 | Vehicle and engine ECUs power supply relay | B2c |
| S300 | Cab tilting safety and authorization relay | B2c |
| S500 | Heated and swivelling rearview mirror power supply relay | B2c |
| S600 | Cab tilting motor power supply relay | B2b |
| V010 | PTO engagement electrovalve N° 1 | B4d |

AD: with automatic gearbox

Vehicle electronic management (1/2)

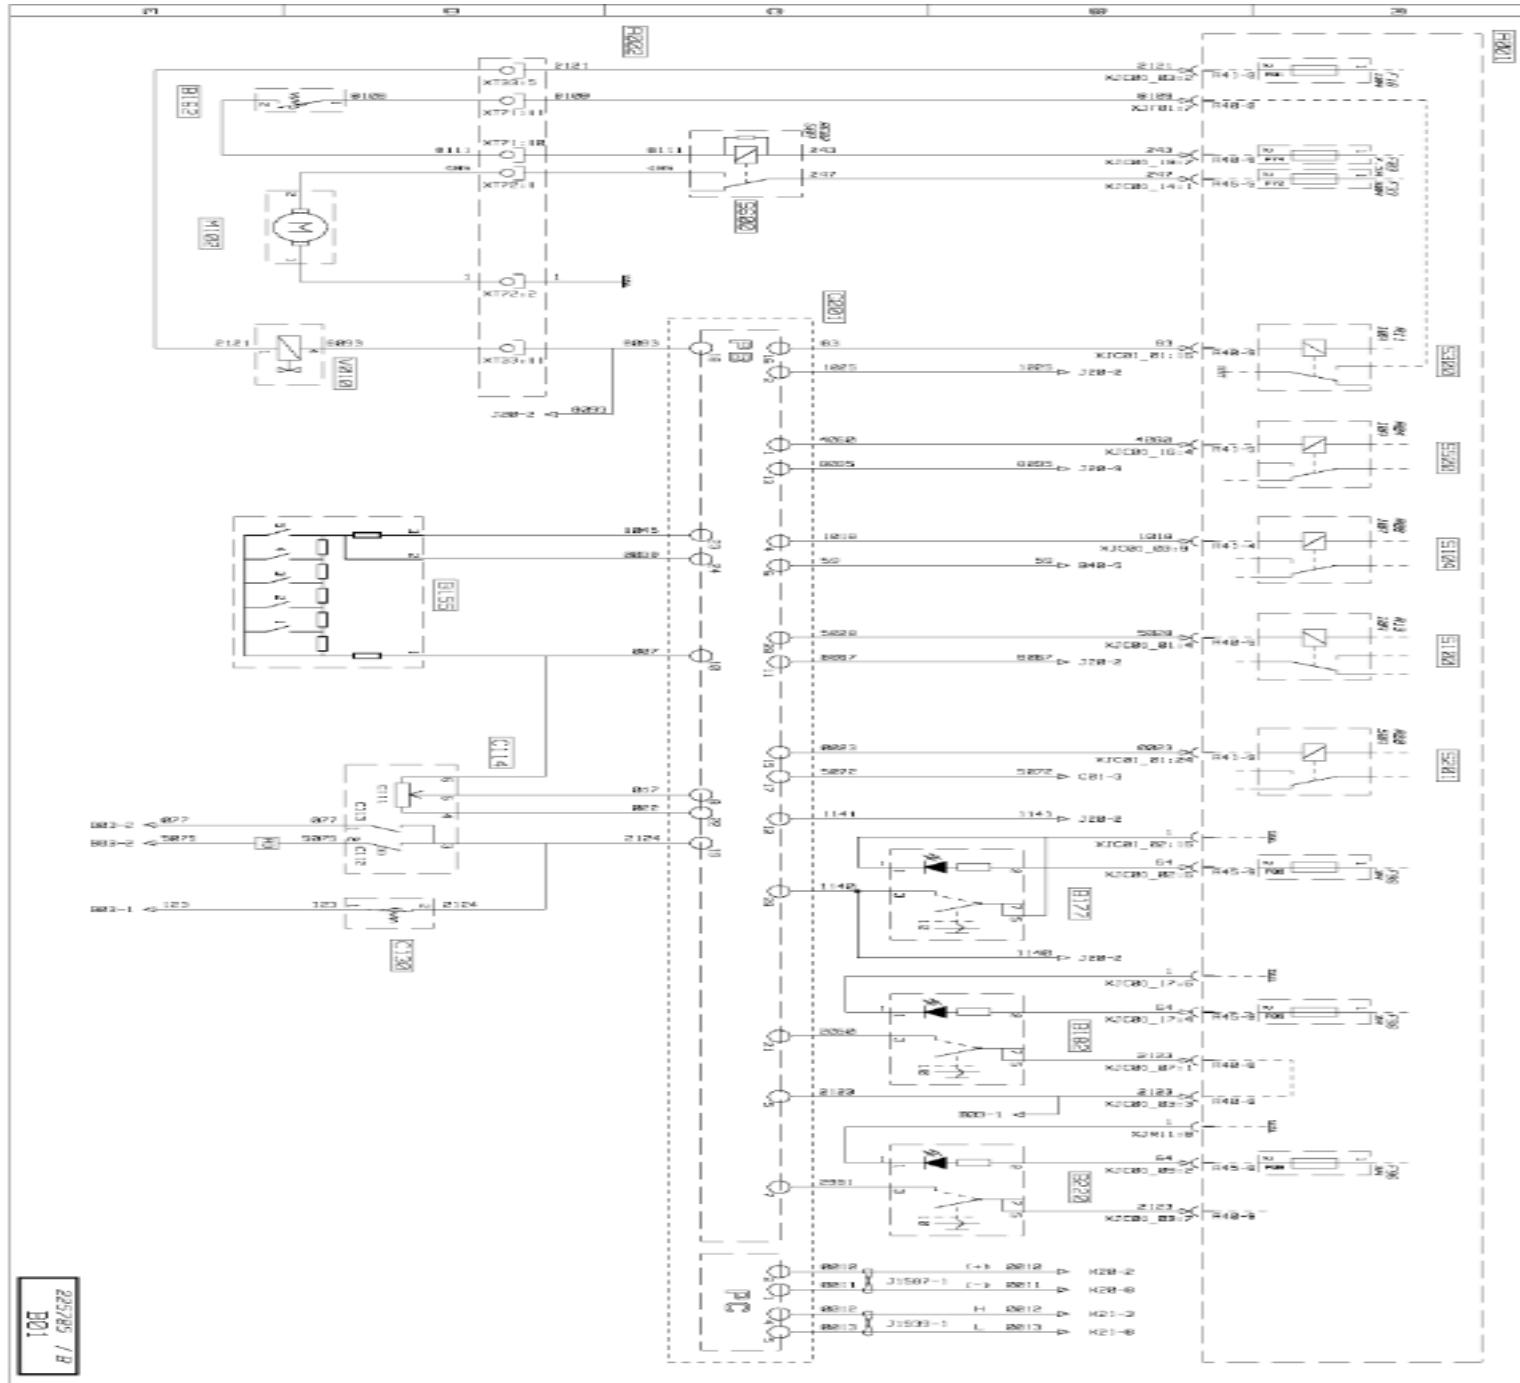

100
R / SGR572

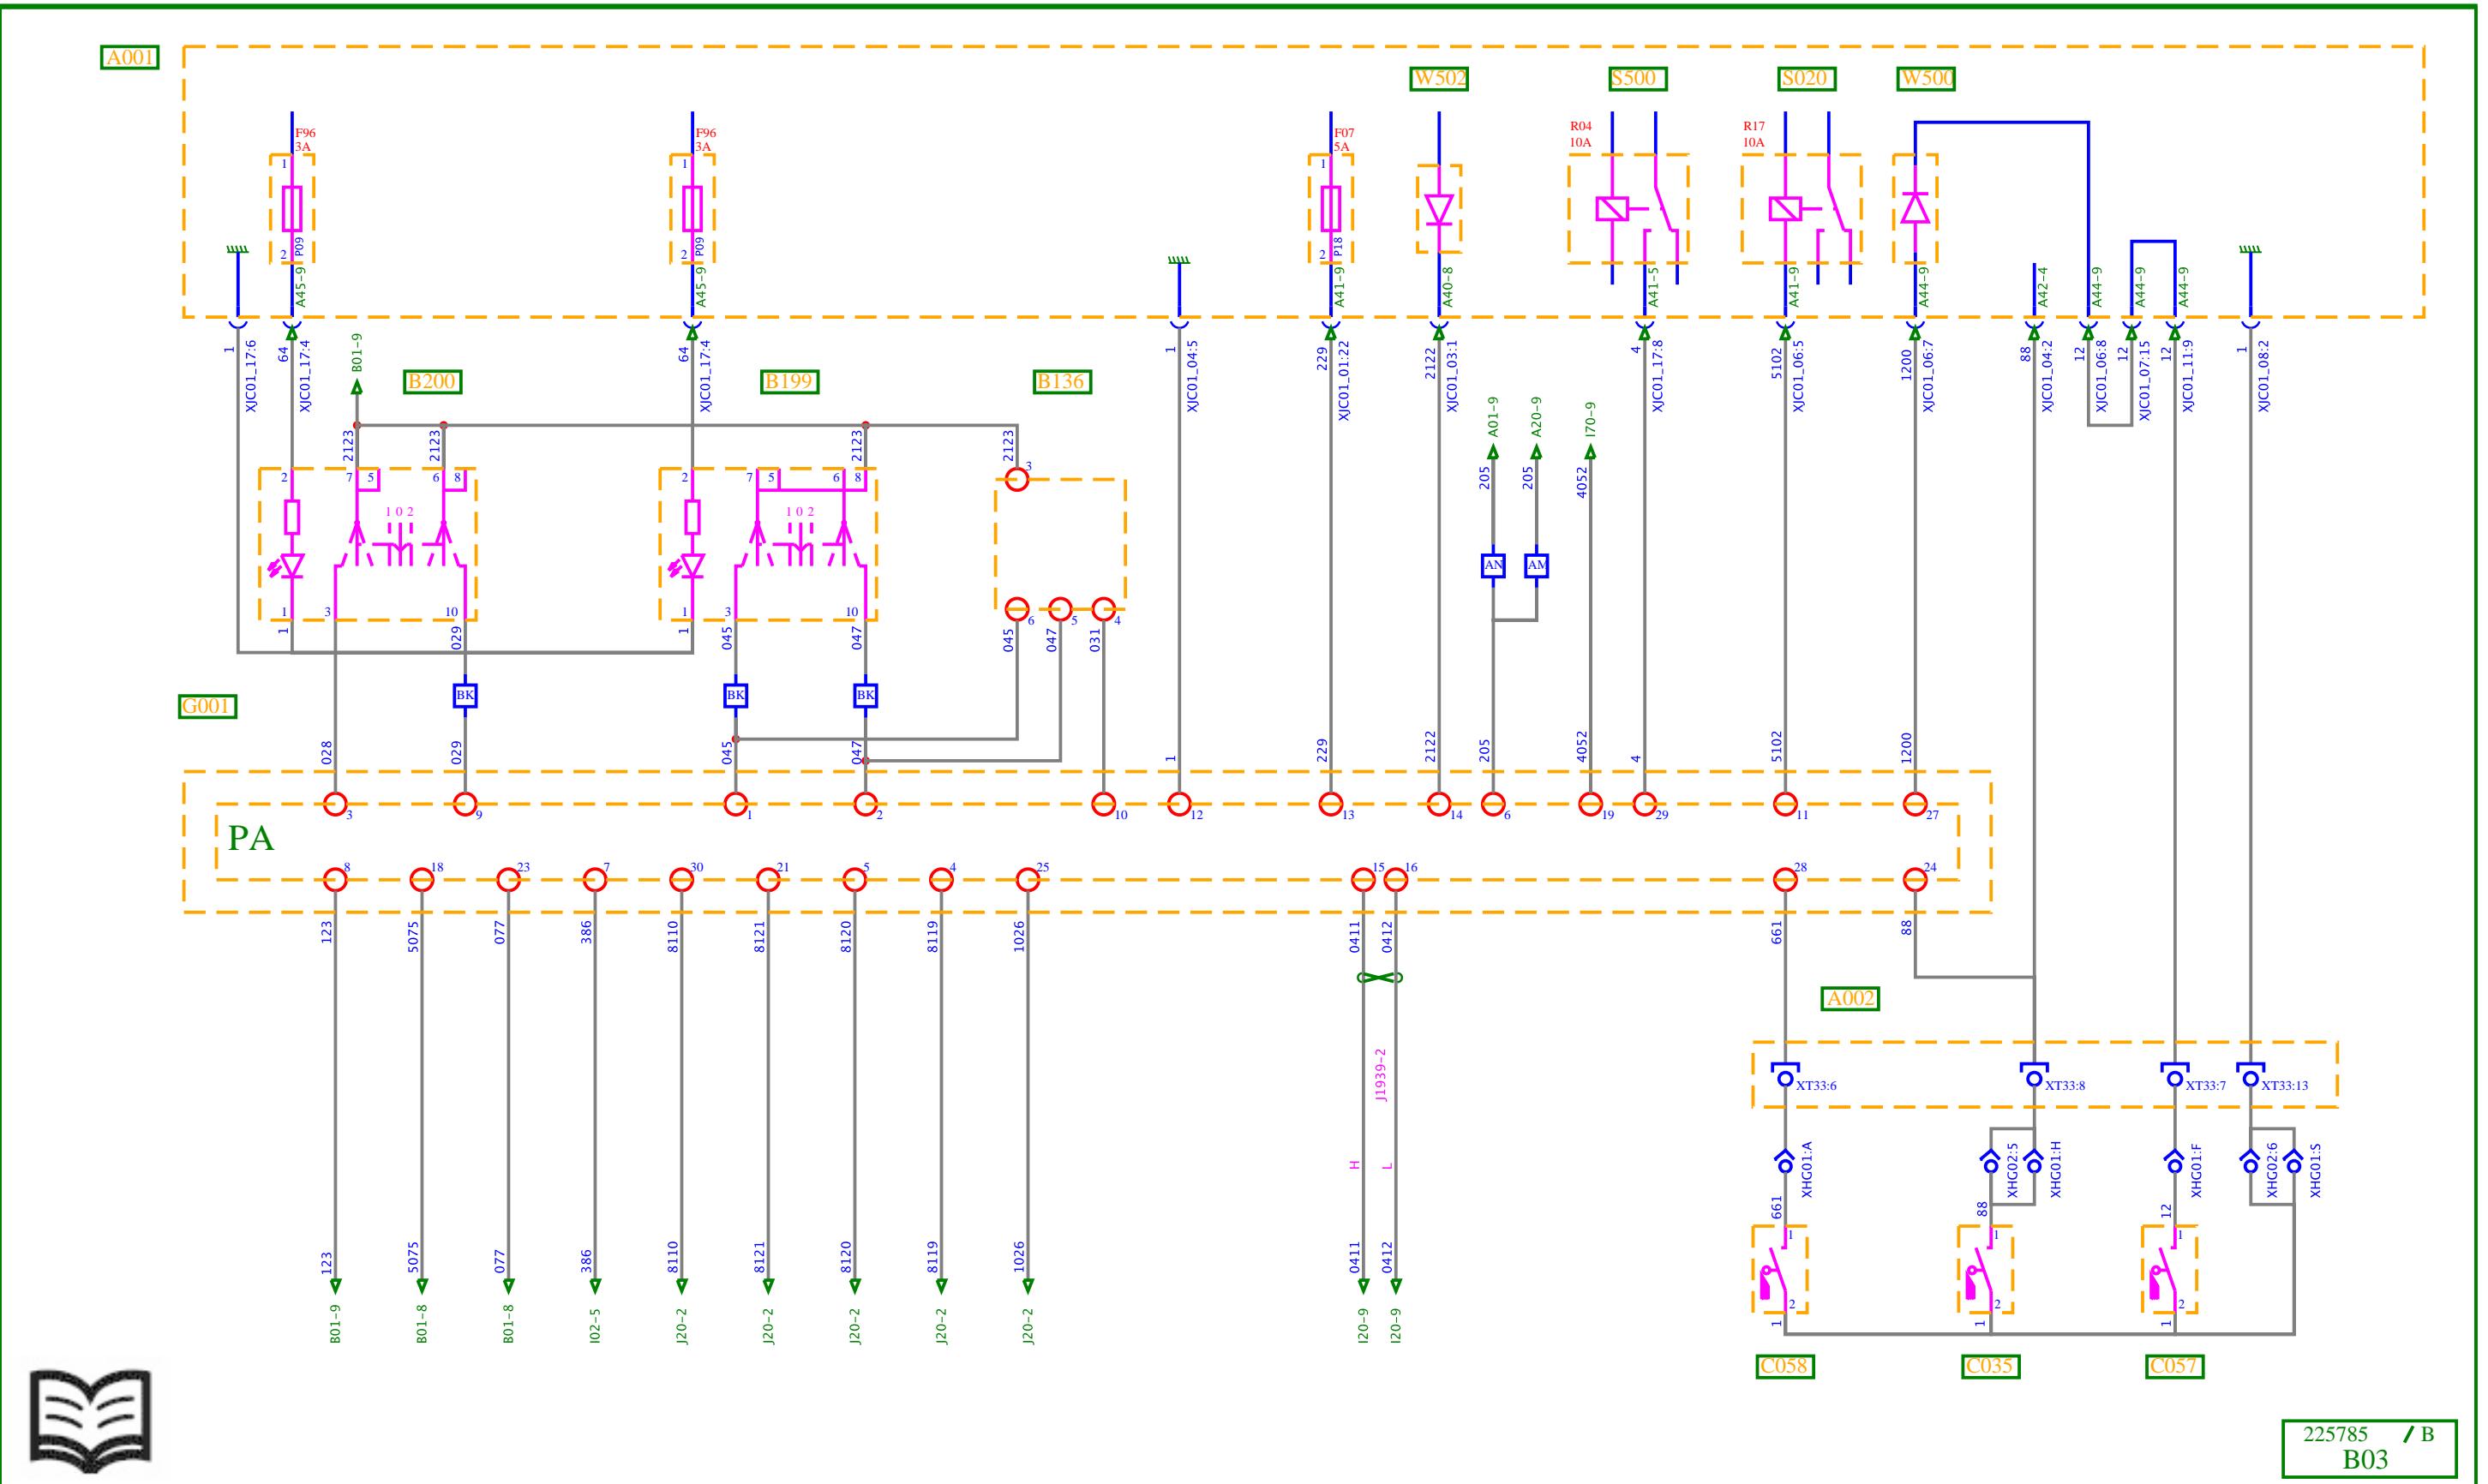

Vehicle electronic management (2/2)

Key to appliances


| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B136 | Cruise control and engine speed regulator adjustment control | C2c |
| B199 | Fast idling adjustment control | C2c |
| B200 | Cruise control / engine speed adjustment controls | C2c |
| C035 | PTO 1 engaged position information sensor | B4c |
| C057 | Neutral position sensor | B4c |
| C058 | Reverse gear engaged position sensor | B4c |
| G001 | Vehicle management ECU | B2b |
| S020 | Starting relay | B2c |
| S500 | Heated and swivelling rearview mirror power supply relay | B2c |
| W500 | Diode(s) | B2C |
| W502 | Diode on after ignition information circuit for vehicle management box | B2c |


AM: with ADR equipment

AN: without ADR equipment

BK: with engine speed regulation and steering wheel operated Cruise Control

Vehicle electronic management (2/2)

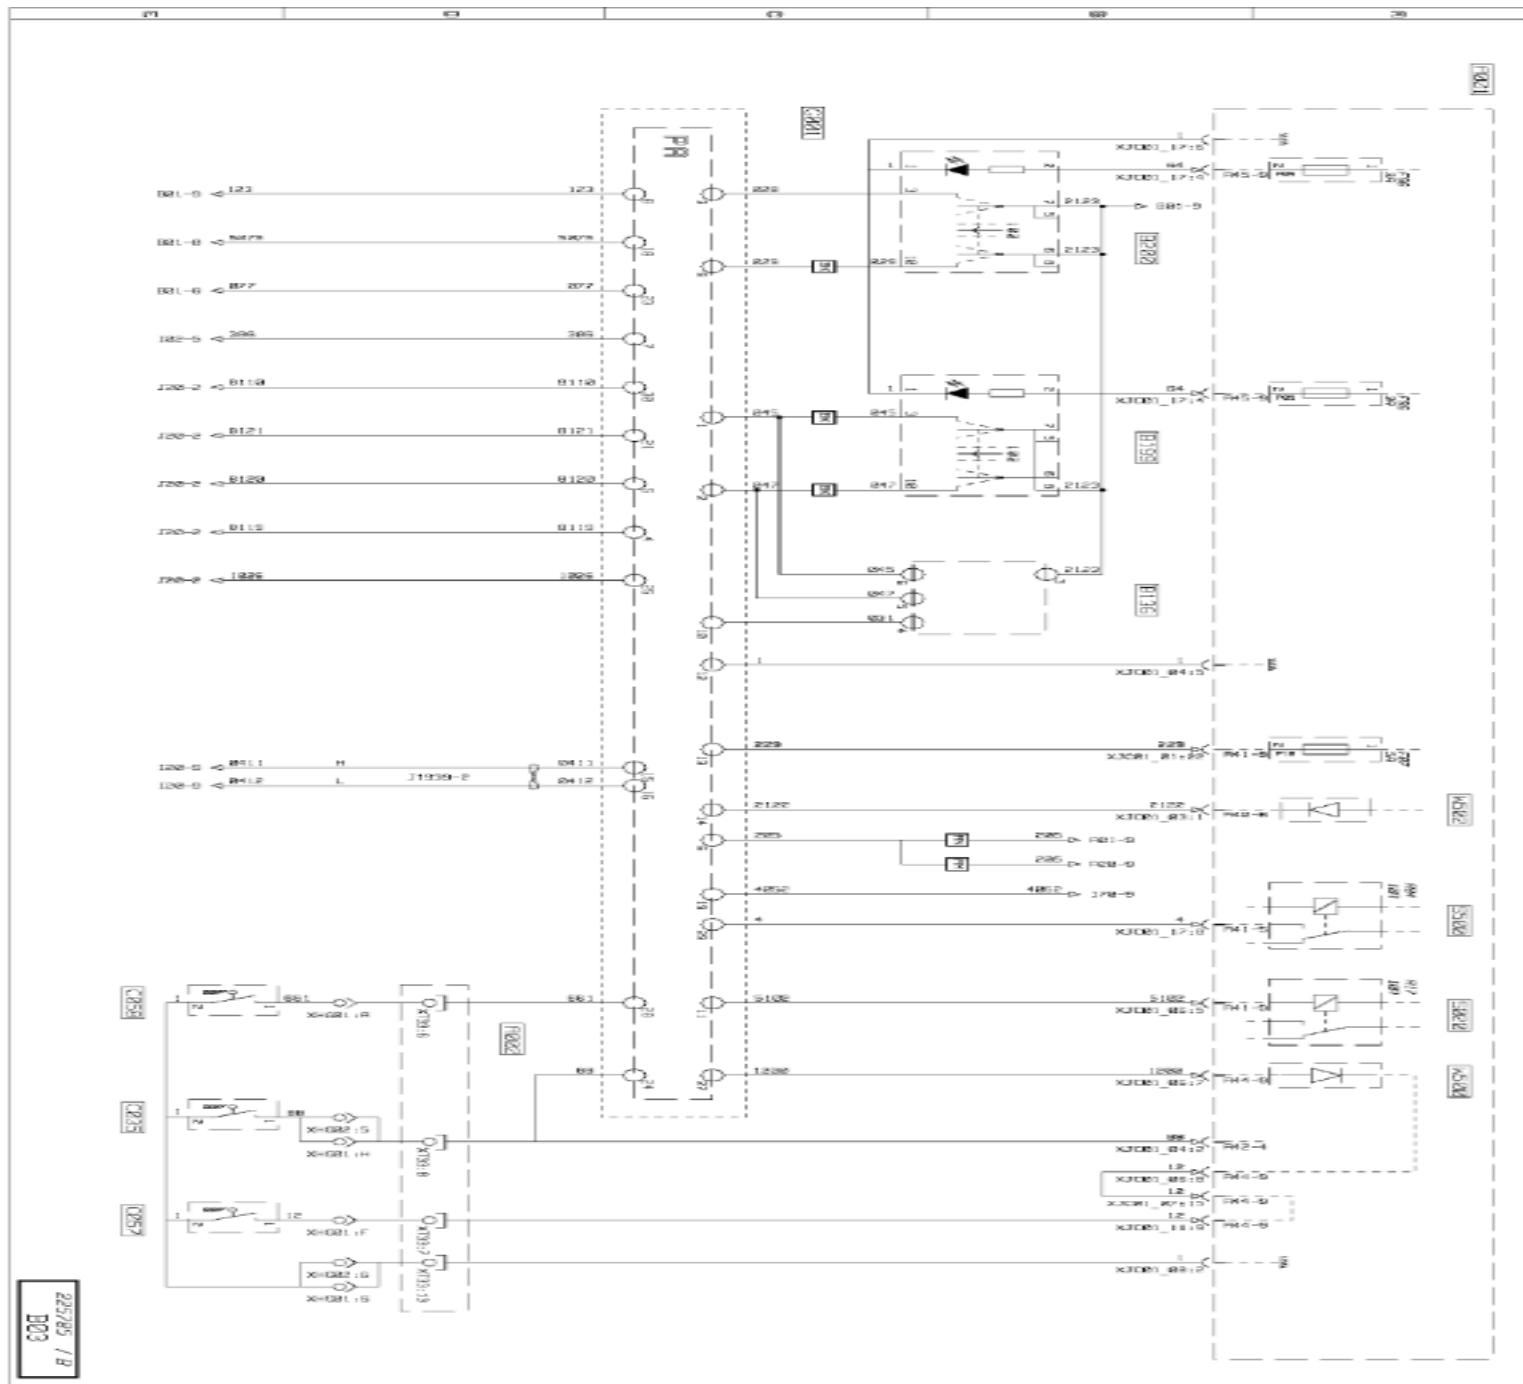

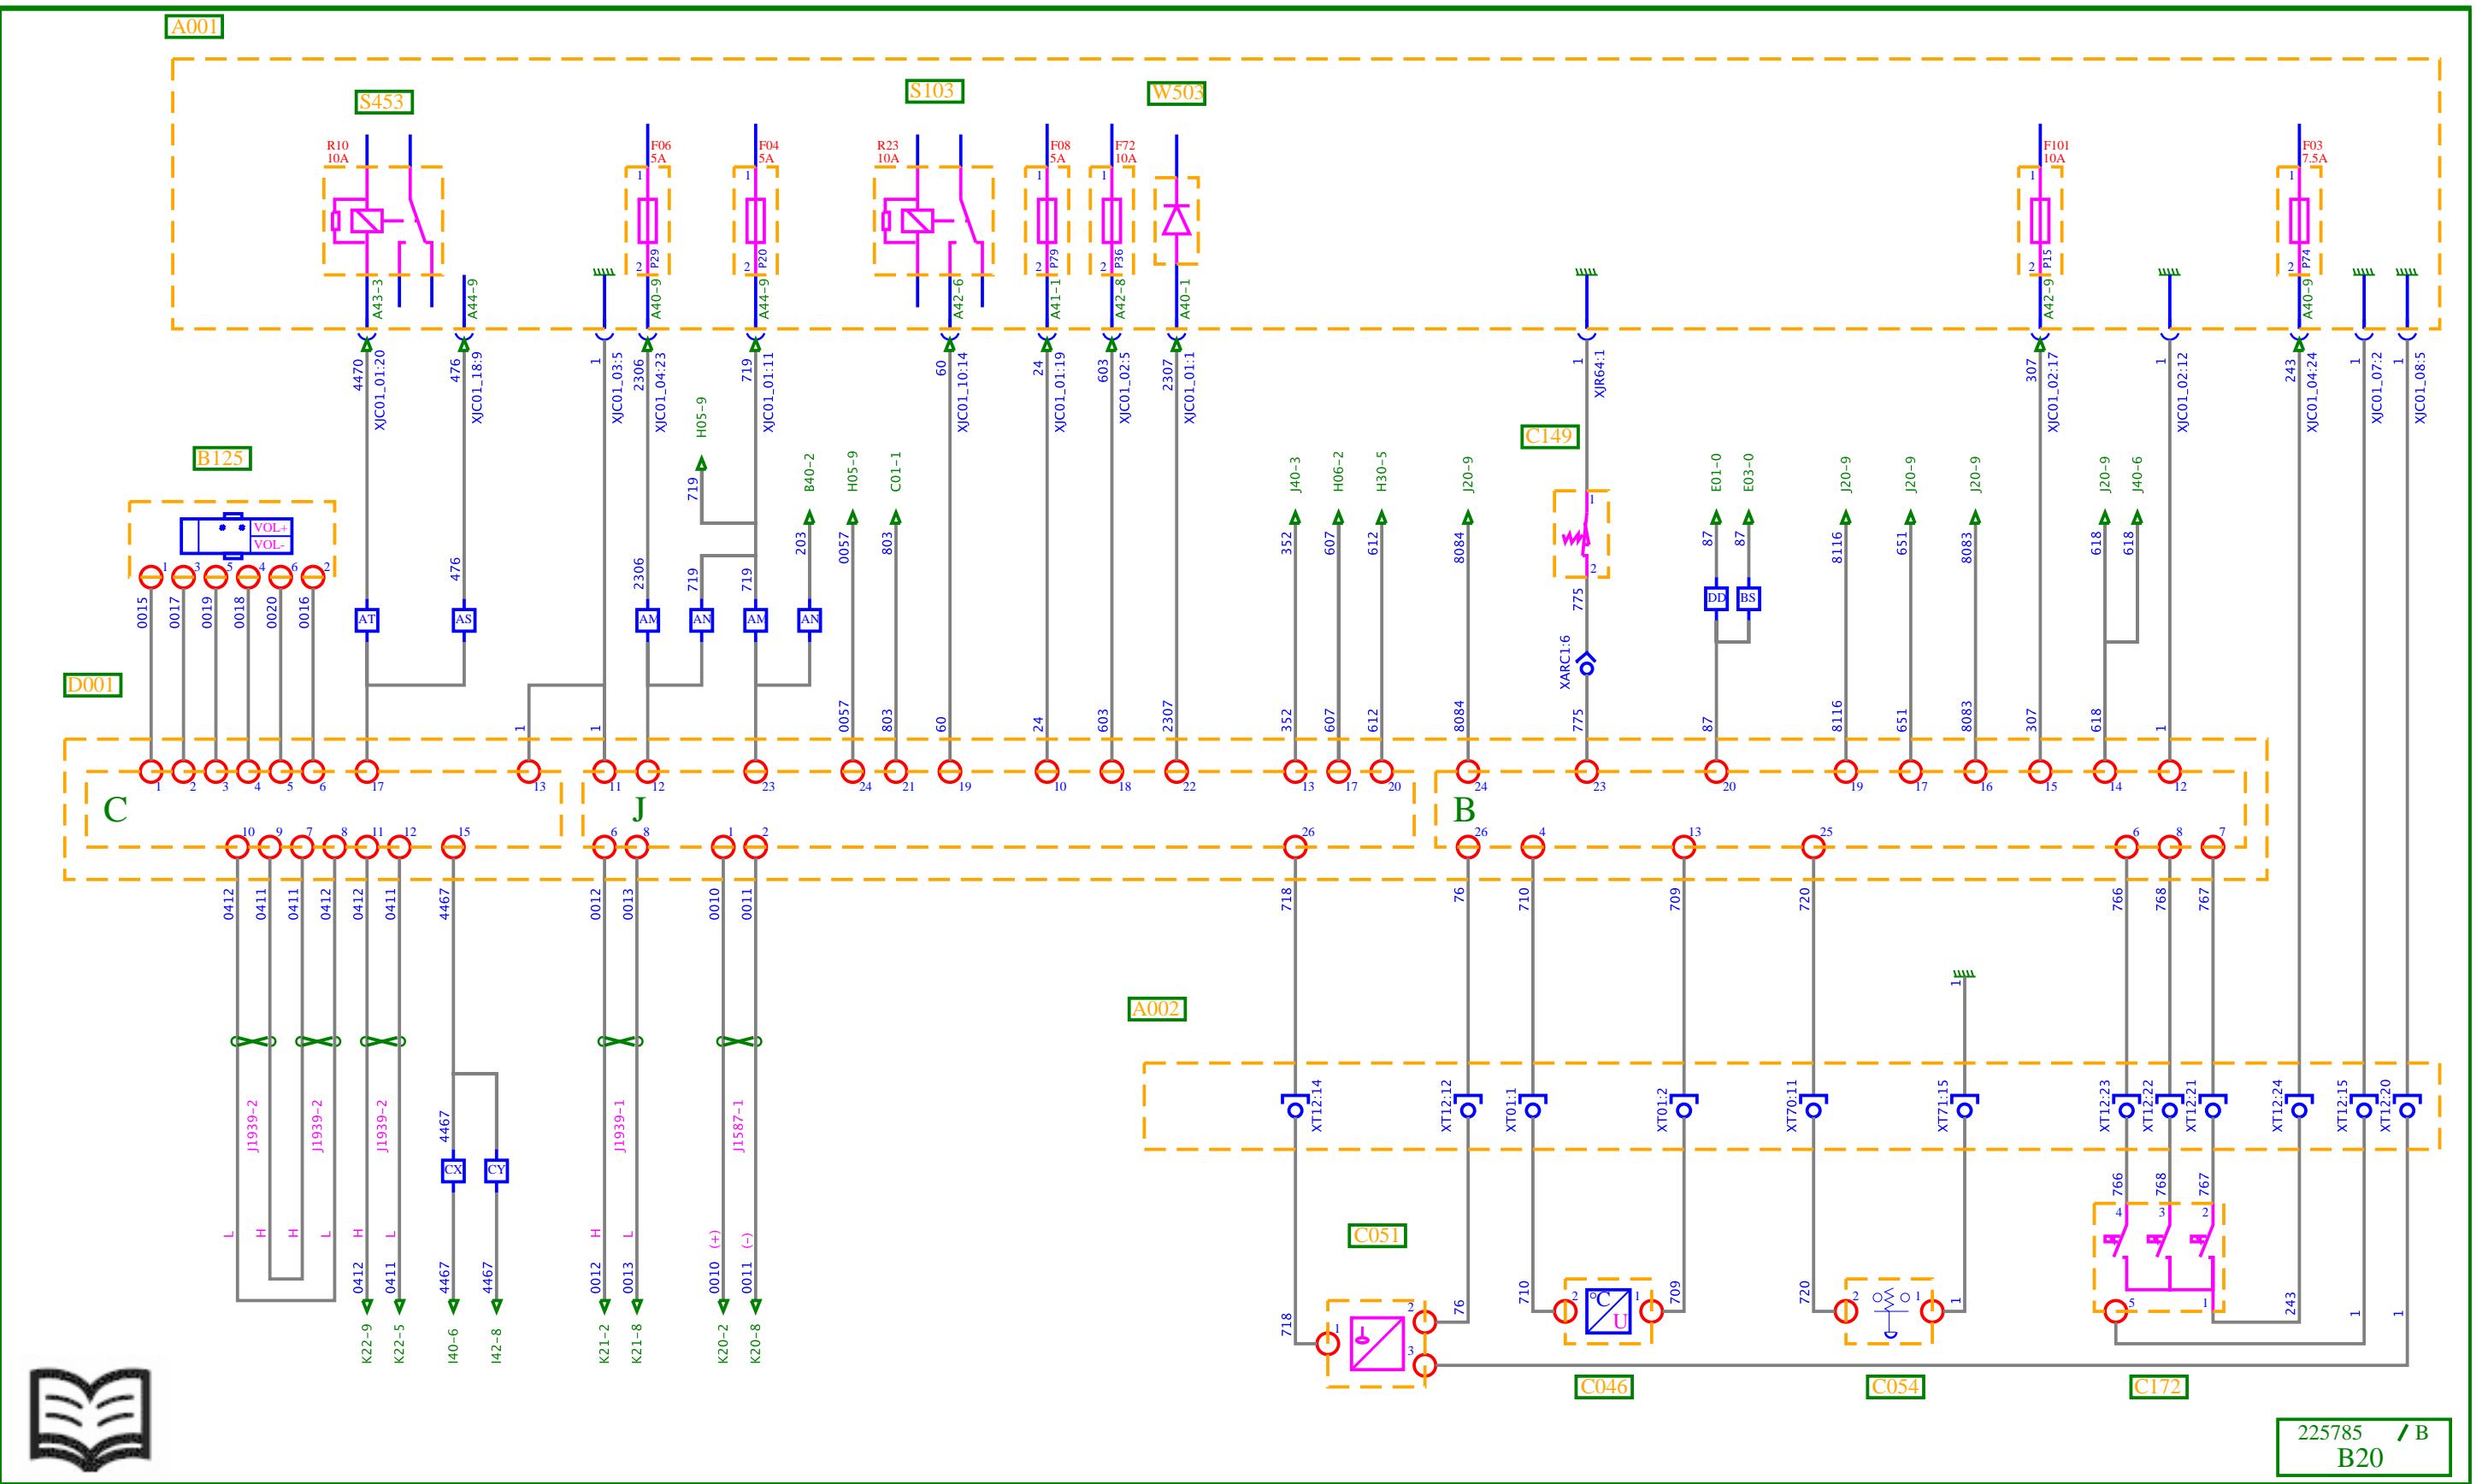

Principal information display

Key to appliances

| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B125 | Radio set control | C2b |
| C046 | External temperature sensor | C2c |
| C051 | Fuel level sensor | A5d |
| C054 | Air filter clogging sensor | C5d |
| C149 | Driver's seatbelt not buckled sensor | C3c |
| C172 | Fifth wheel position sensors | B6c |
| D001 | Principal information display | C2b |
| S103 | Fog driving lights power supply relay | B2c |
| S453 | Add-on heater power supply relay | B2c |
| W503 | Diode on engine running information relay power supply circuit | B2c |

AM: with ADR equipment

AN: without ADR equipment

AS: With air / air independent heating

AT: With air / water independent heating


BS: 4x2 vehicles


DD: 6x2 vehicles

CX: Without air / air independent heating

CY: Without air / water independent heating

Principal information display

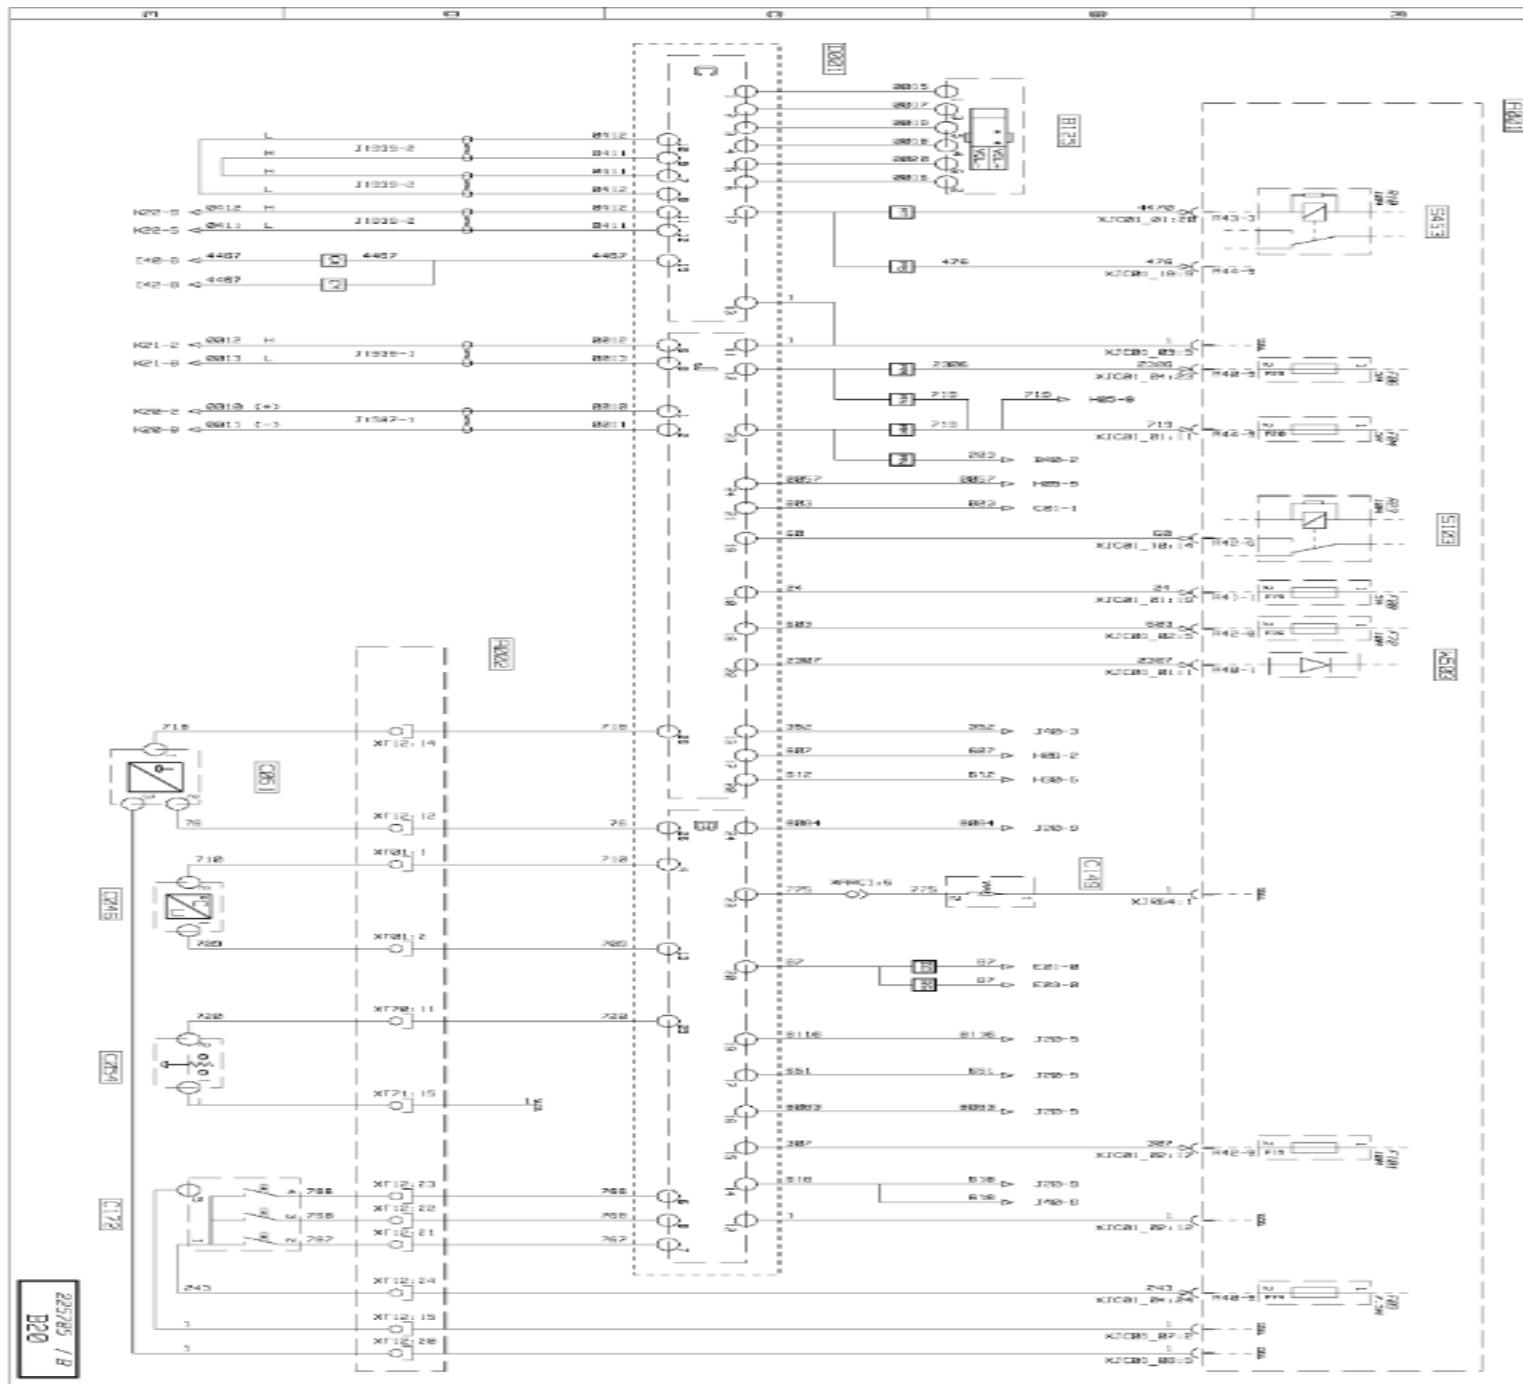

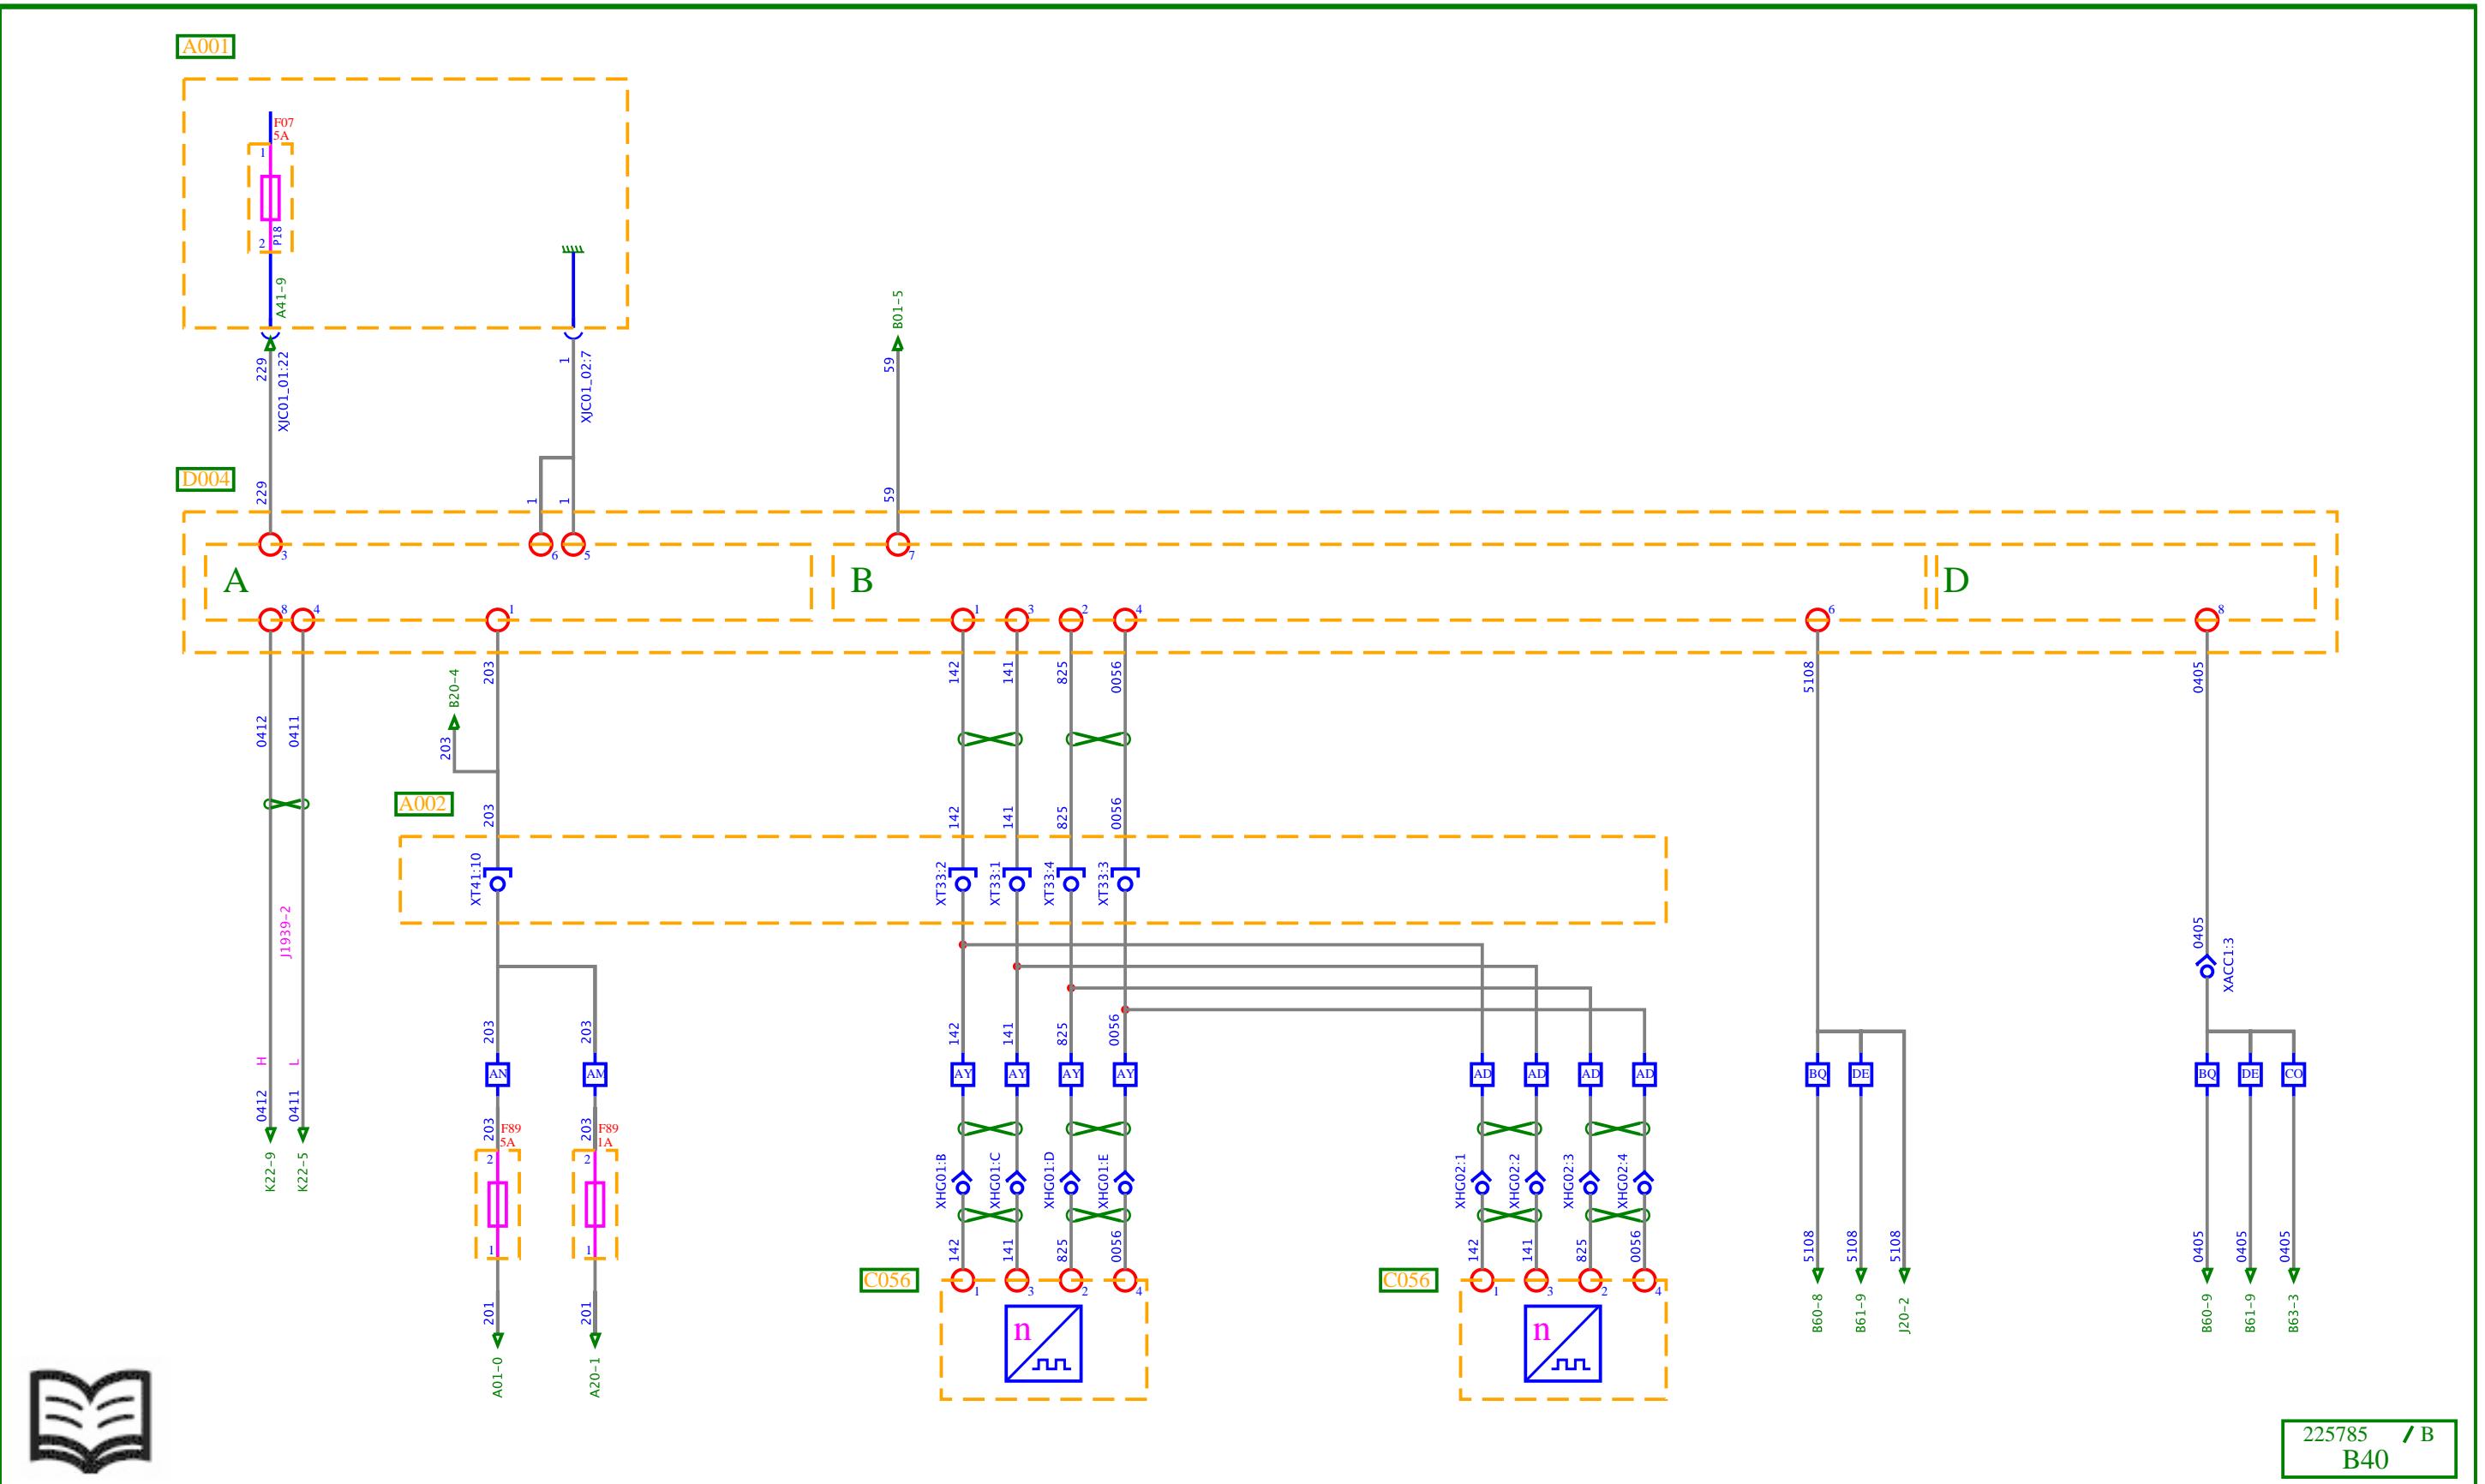

Tachograph

Key to appliances

| Code | Function | Location |
|------|---------------------------------|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| C056 | Tachograph speed sensor | B3c |
| D004 | Tachograph | C2c |

AD: with automatic gearbox

AY: with manual gearbox

AM: with ADR equipment


AN: without ADR equipment

BQ: with **FMS** equipment

CO: with **OPTIFLEET** equipment

DE: with **DATAMAX** equipment

Tachograph

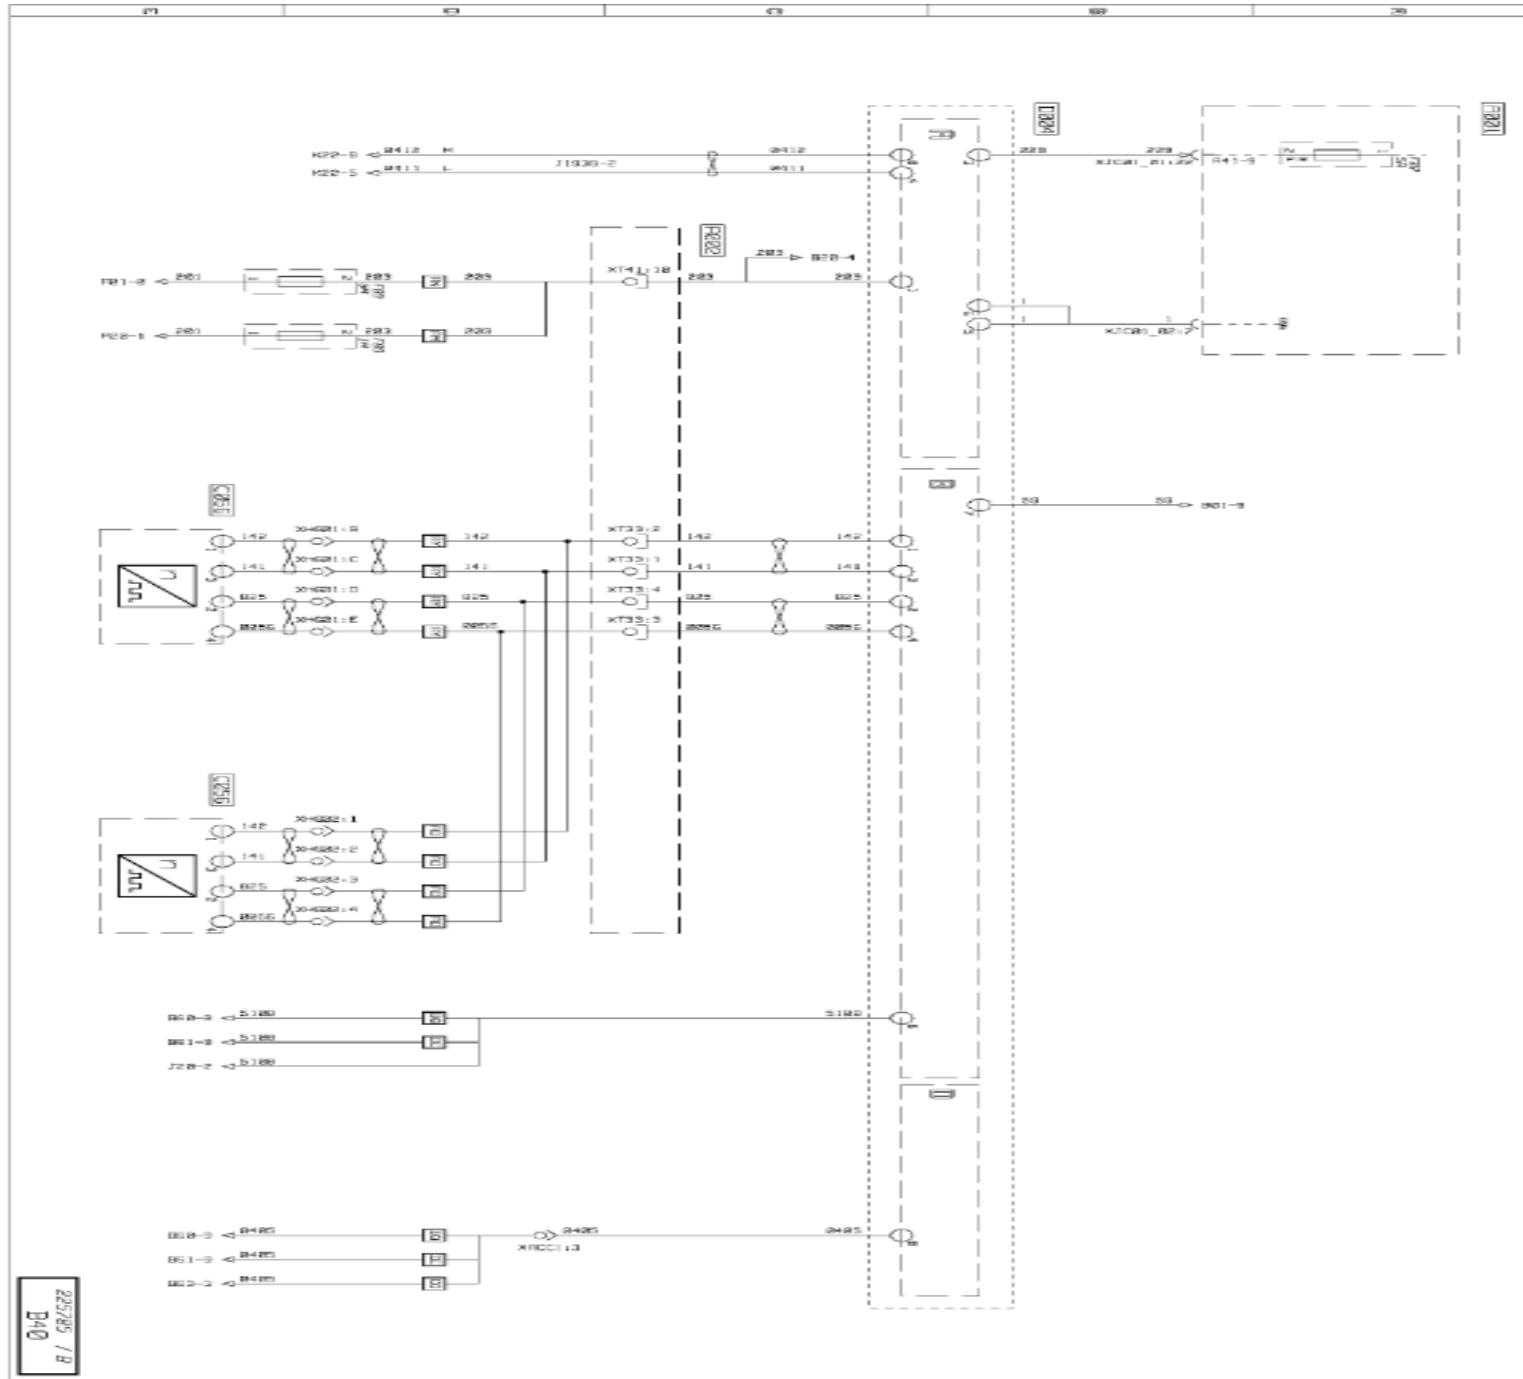

Onboard management DATAMAX


Key to appliances


| Code | Function | Location |
|------|---------------------------------|----------|
| A001 | Cab electrical distribution box | B2c |
| G100 | Datamax gateway ECU | B2c |
| G102 | Onboard management ECU | B2c |
| G103 | Positioning module ECU | B2c |

Onboard management DATAMAX

DATAMAX

22553C / R
DG1

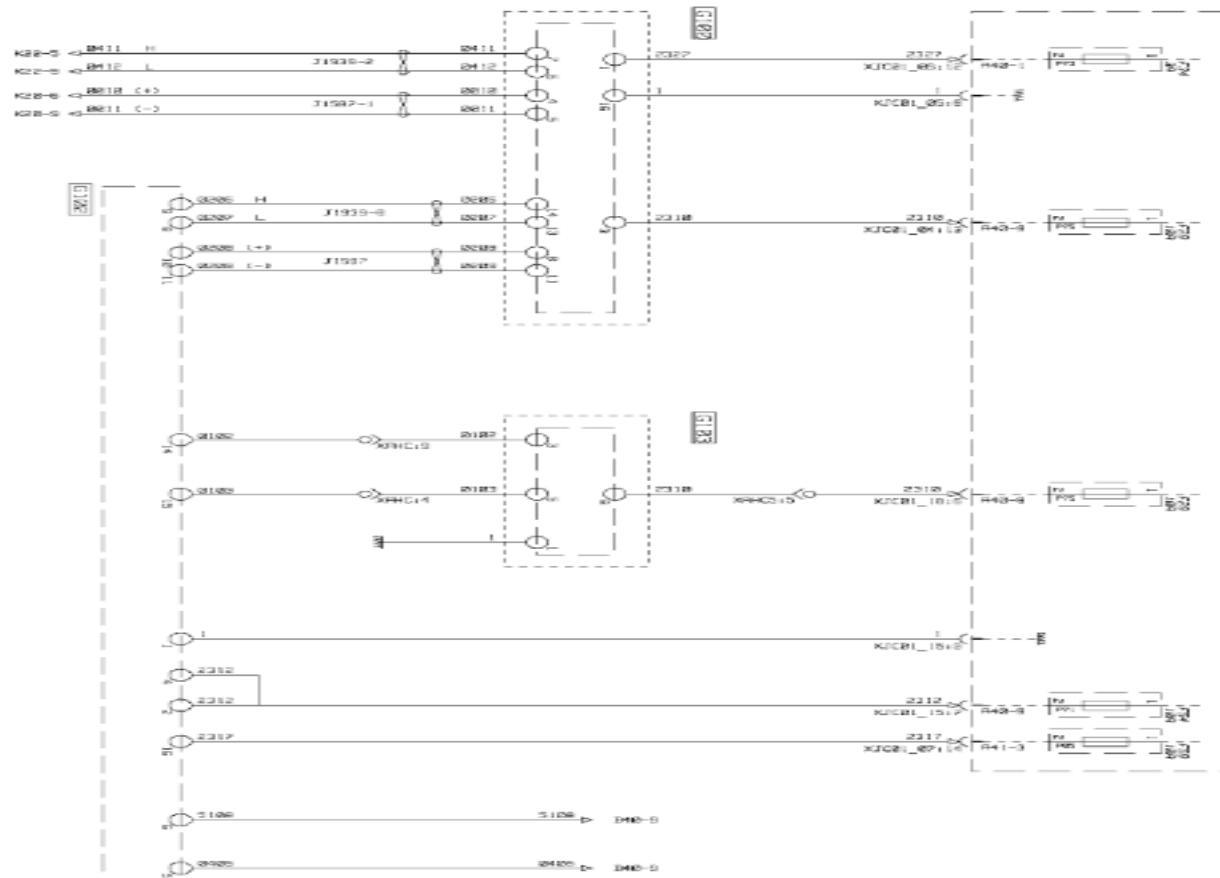

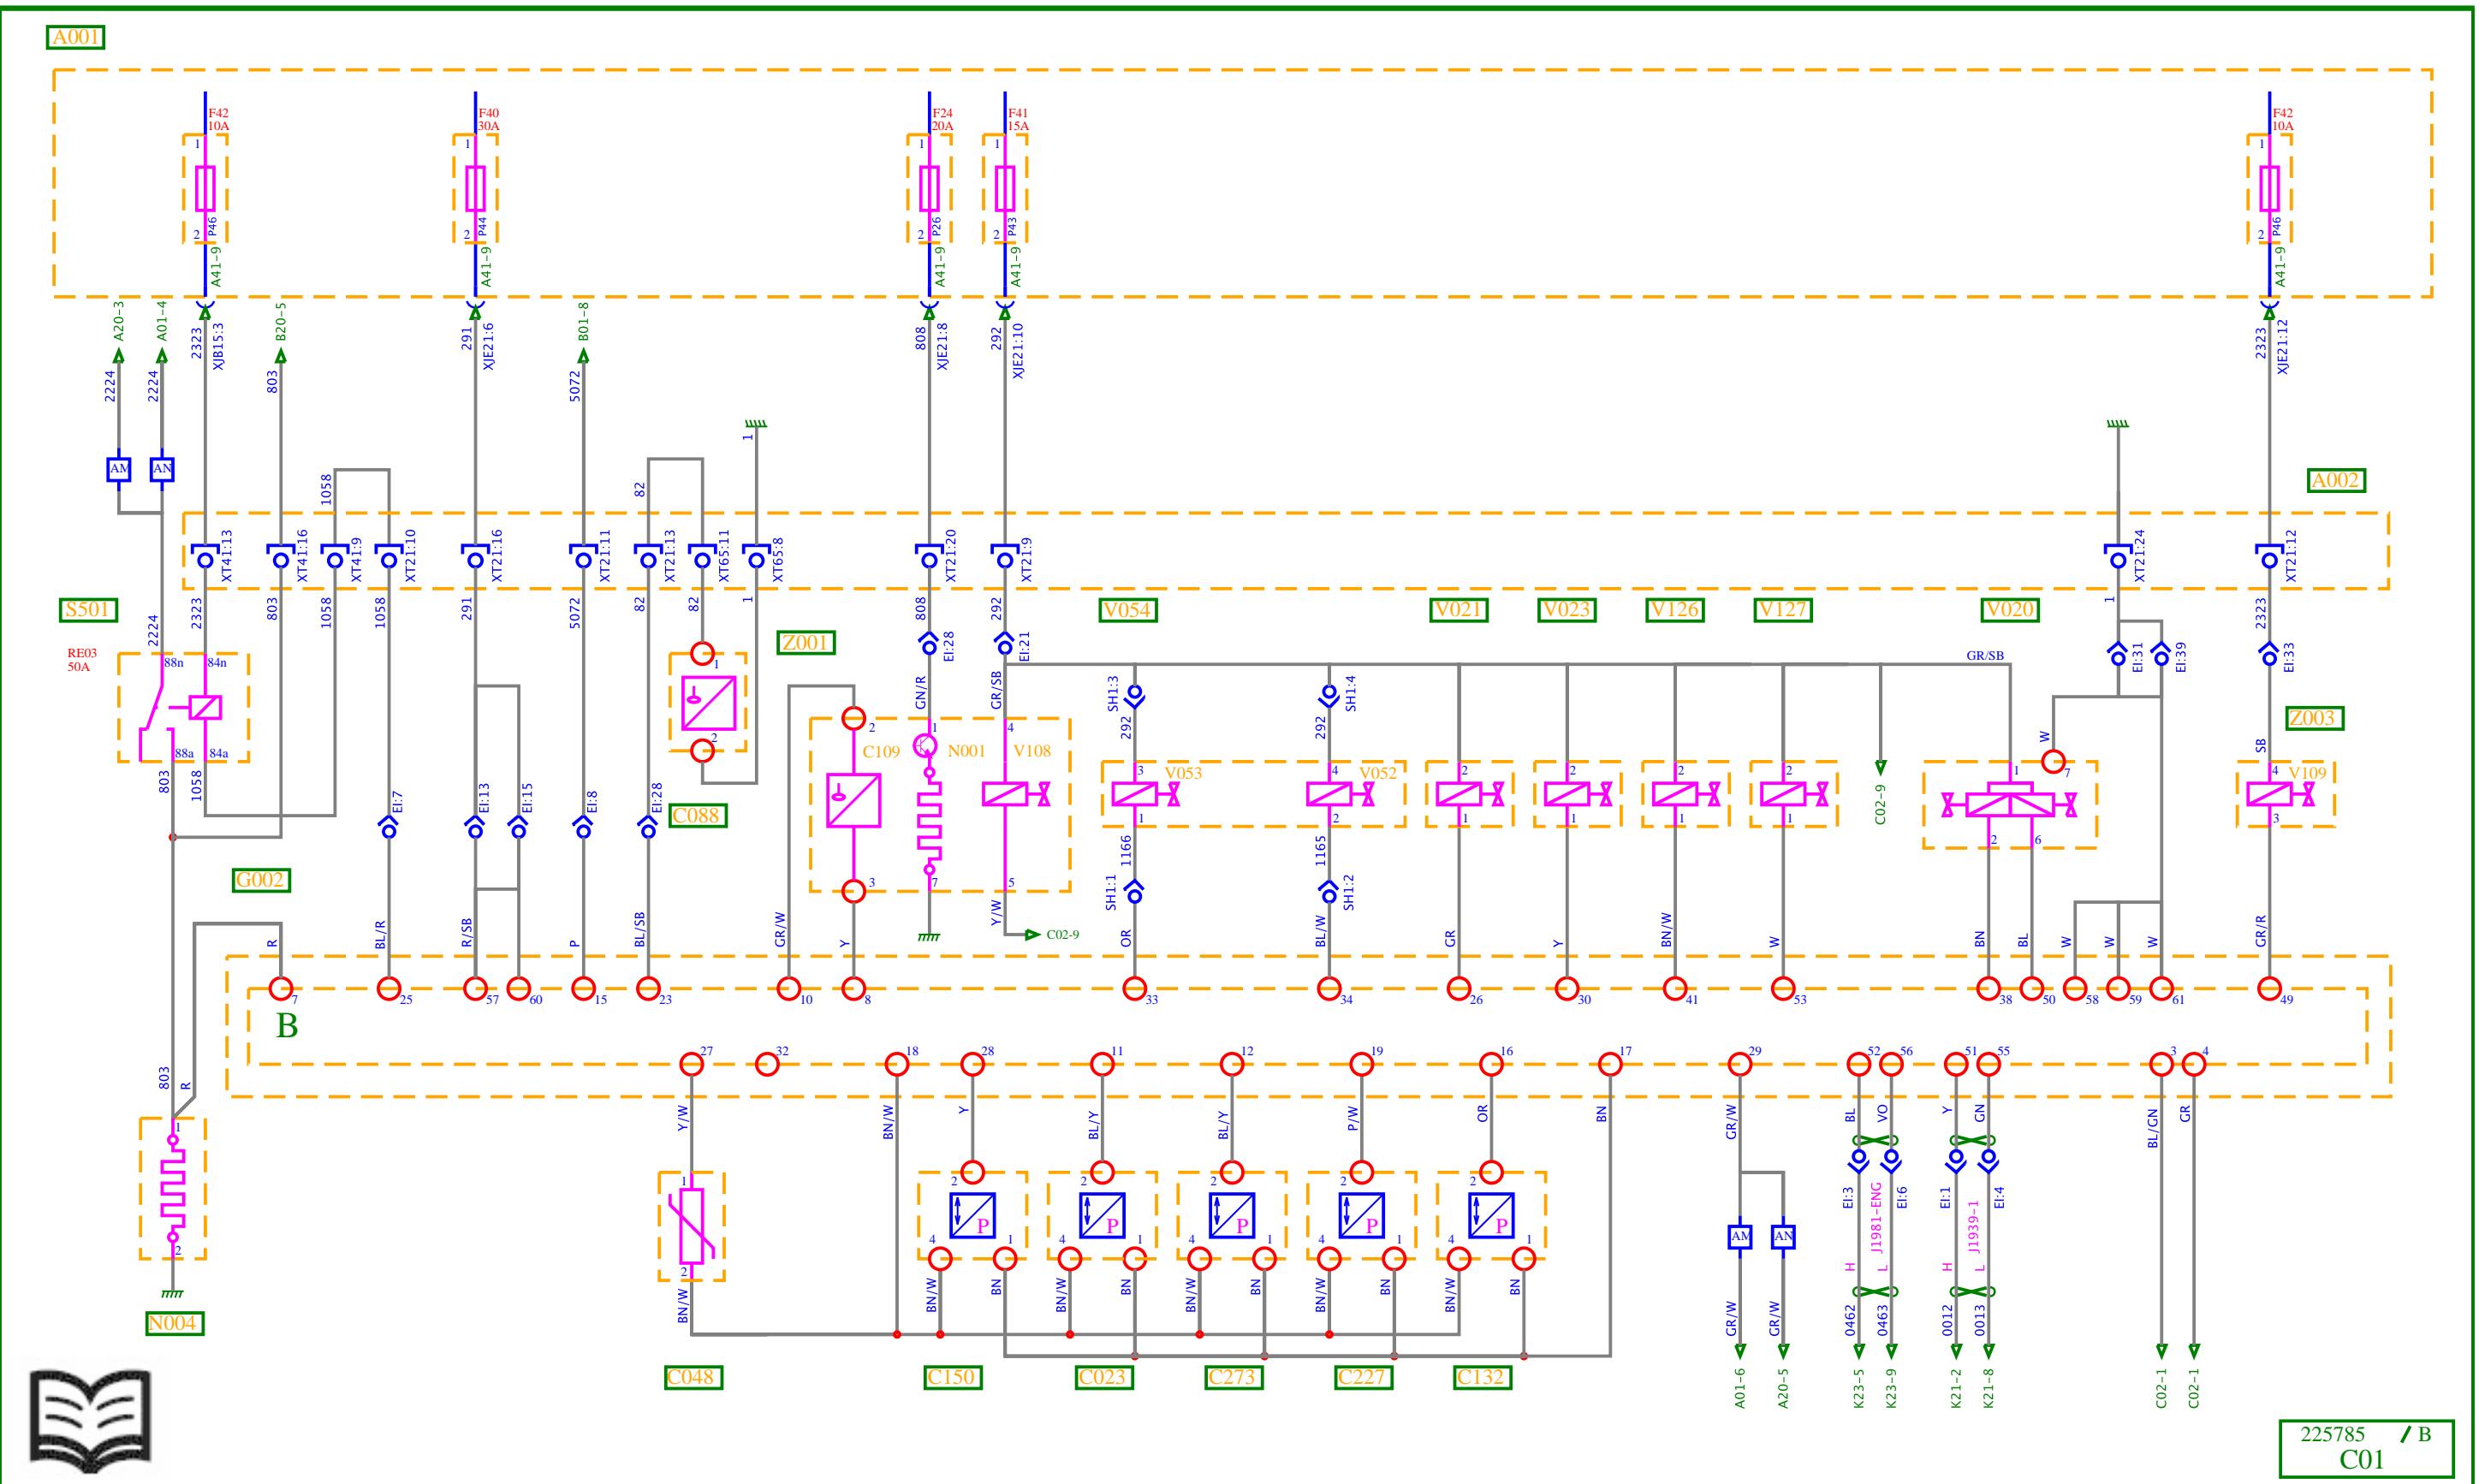

Engine electronic management (1/2)


Key to appliances


| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| C023 | Engine oil pressure sensor | B3b |
| C048 | Engine cooling circuit temperature sensor | B3b |
| C088 | Engine coolant level sensor | B3b |
| C109 | Water in fuel sensor | B3b |
| C132 | Engine boost pressure sensor | B3b |
| C150 | Engine block inside pressure sensor | B3b |
| C227 | Pistons cooling oil pressure sensor | B3b |
| C273 | Exhaust backpressure sensor | B3b |
| G002 | Engine management ECU | B3b |
| N001 | Fuel heater resistor N° 2 | B3b |
| N004 | Air preheating resistor | B3b |
| S501 | Air preheating relay | C4d |
| V020 | Exhaust brake solenoid valve unit | B3b |
| V021 | Engine brake N° 1 solenoid valve | B3c |
| V023 | Exhaust brake solenoid valve | B3c |
| V052 | Range change electrovalve | B4c |
| V053 | Splitter control electrovalve | B4c |
| V054 | Splitter and range change control unit | B4c |
| V108 | Air dryer bleeding solenoid valve | B3b |
| V109 | Engine cooling fan speed regulation solenoid valve | B3c |
| V126 | Pistons cooling solenoid valve | B3b |
| V127 | Engine oil cooling solenoid valve | B3b |
| Z001 | Fuel heating unit | B3b |
| Z003 | Fan speed regulator unit | B3c |

AM: with ADR equipment

AN: without ADR equipment

Engine electronic management (1/2)

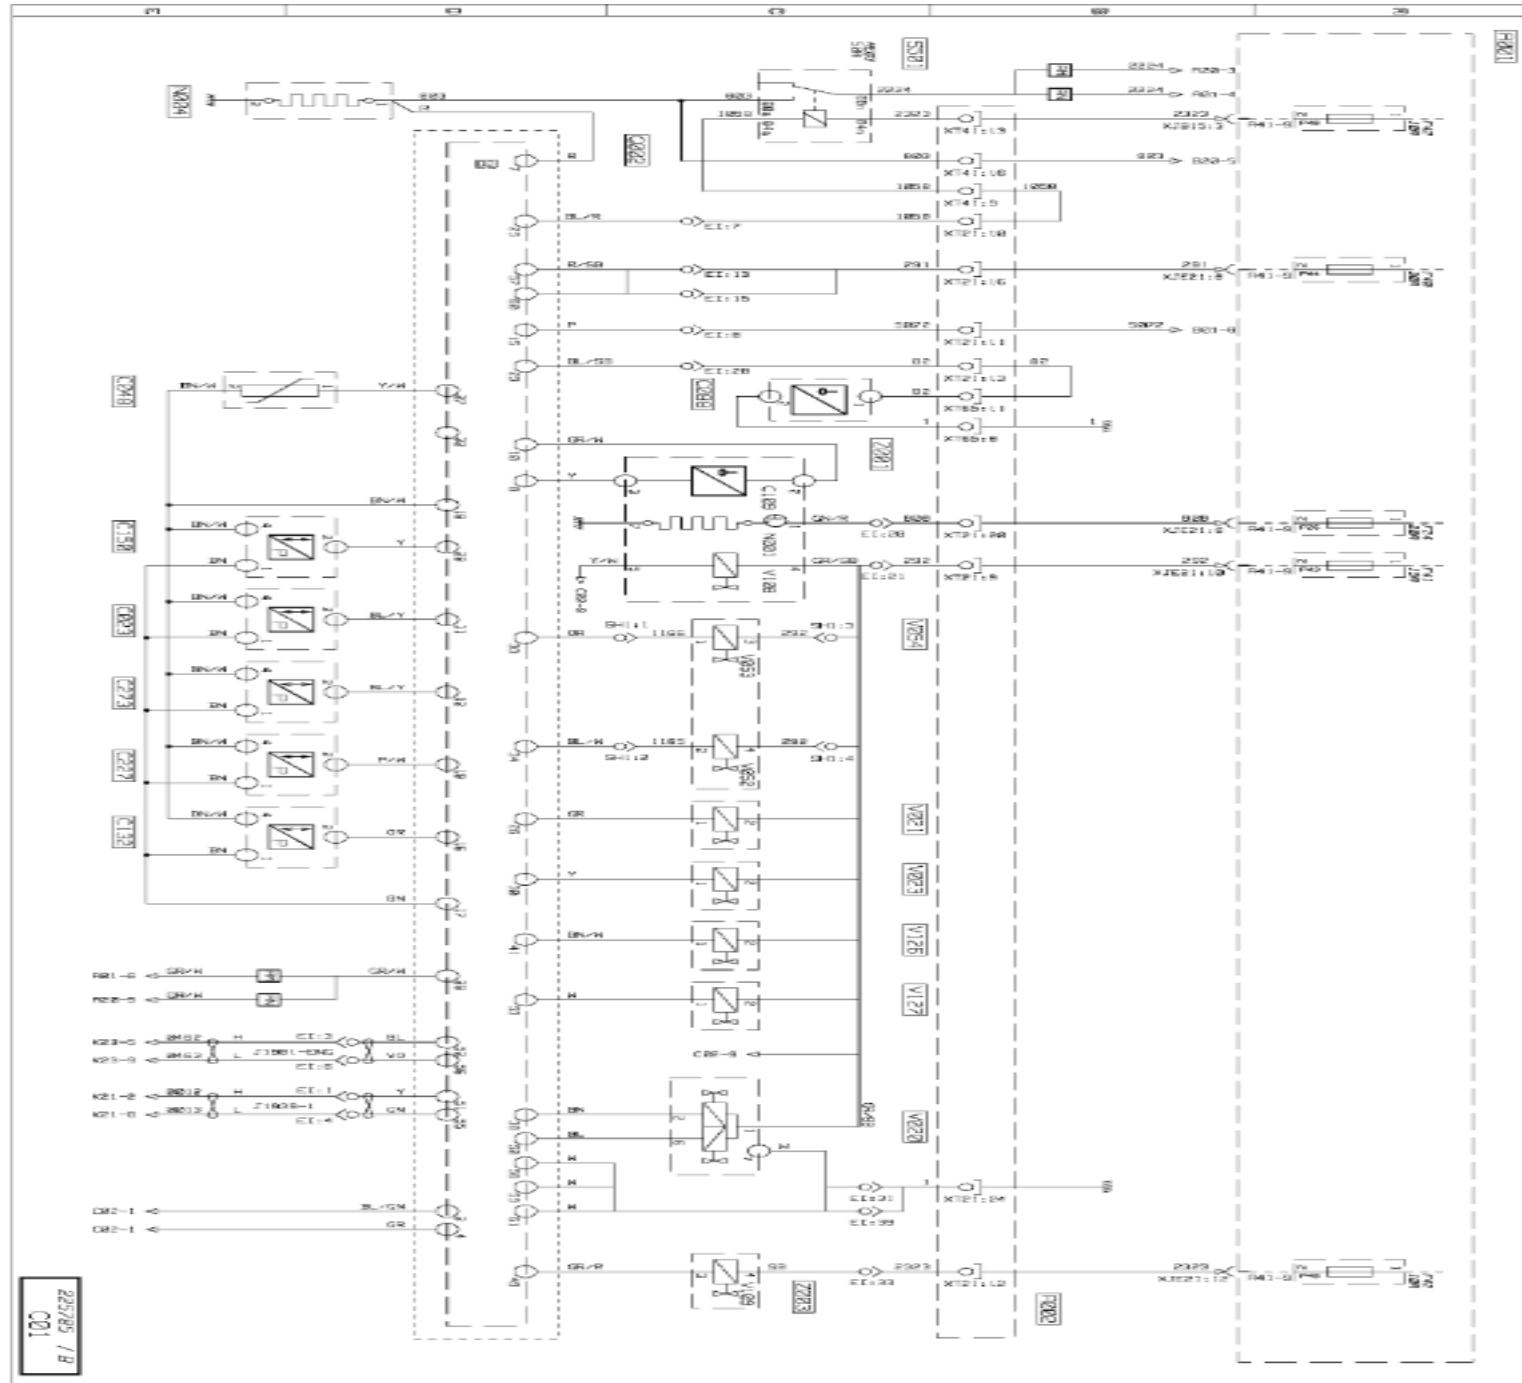

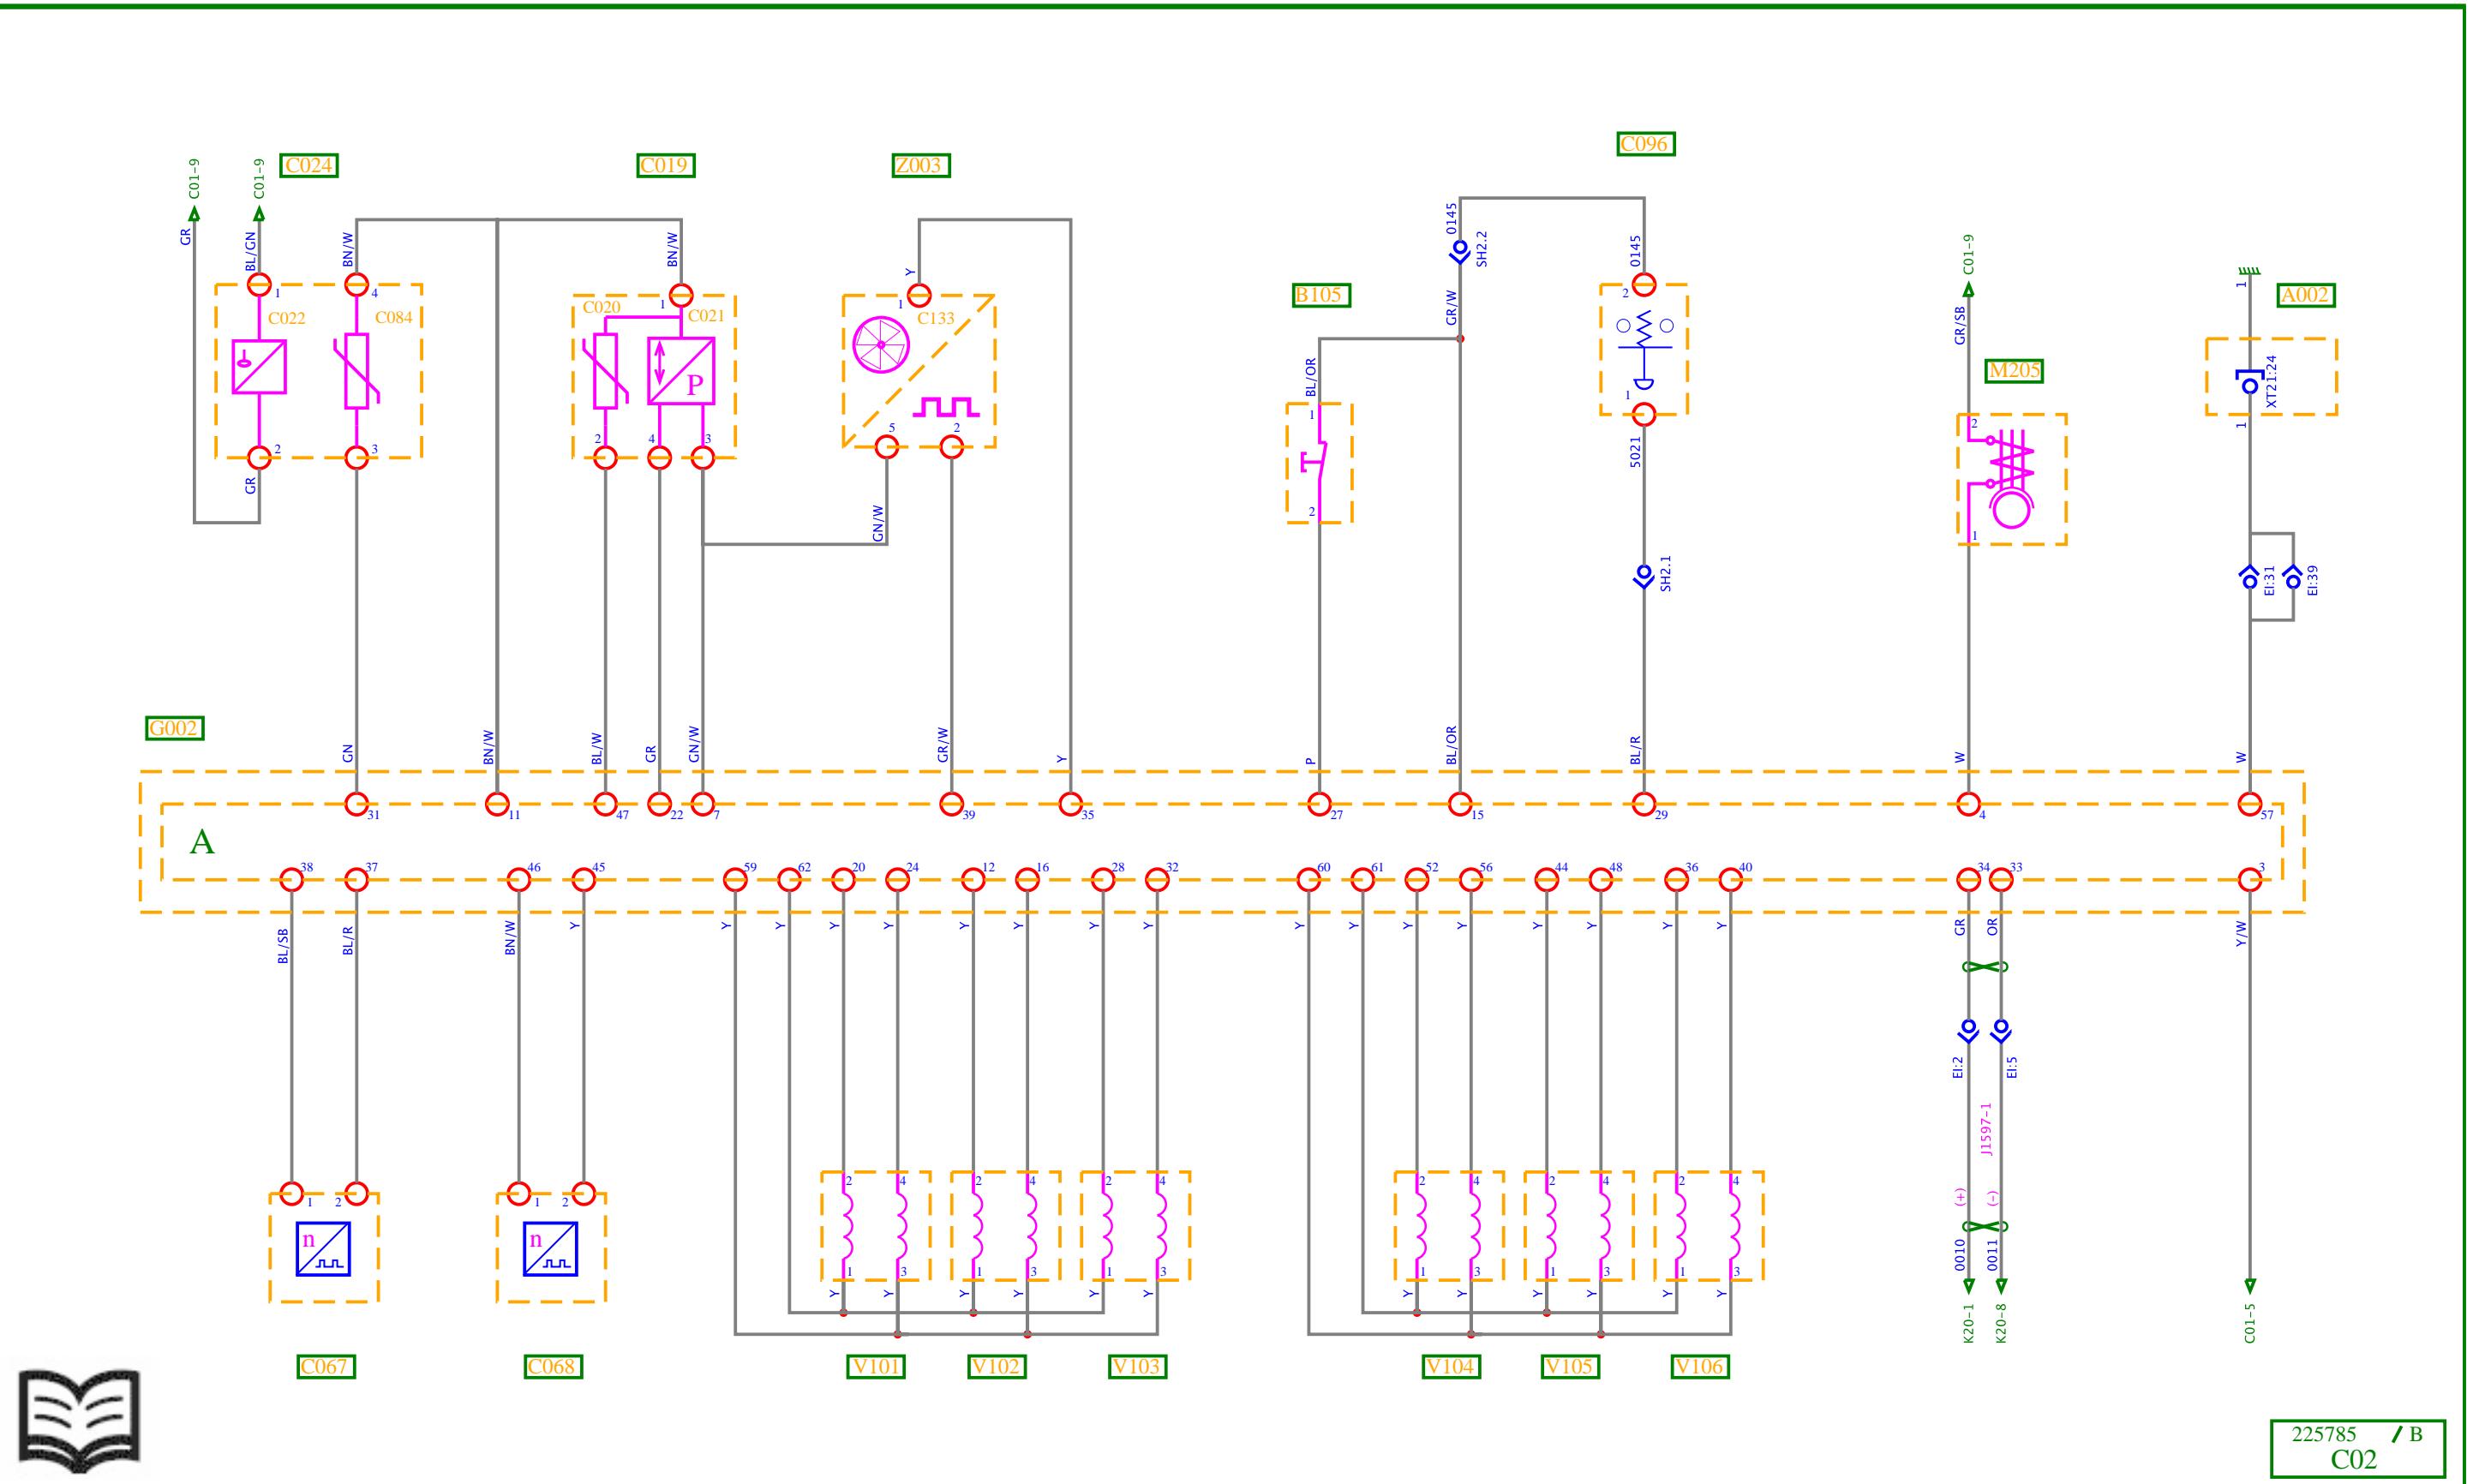



Engine electronic management (2/2)

Key to appliances

| Code | Function | Location |
|------|--|----------|
| A002 | Chassis-cab connection box | B2c |
| B105 | Engine stop control | B3c |
| C019 | Boost air pressure and temperature sensor | B3c |
| C020 | Boost air temperature sensor | B3c |
| C021 | Boost air pressure sensor | B3c |
| C022 | Engine oil level sensor | B3c |
| C024 | Engine oil level and temperature sensor unit | B3c |
| C067 | Flywheel speed sensor | B2c |
| C068 | Camshaft engine speed sensor | B3c |
| C084 | Engine oil temperature sensor | B3c |
| C096 | Range change selector pressure sensor | B4d |
| C133 | Engine cooling fan speed sensor | B3c |
| G002 | Engine management ECU | B3b |
| M205 | Water pump electromagnetic clutch | B3c |
| V101 | Cylinder injector solenoid valve N° 1 | B3c |
| V102 | Cylinder injector solenoid valve N° 2 | B3c |
| V103 | Cylinder injector solenoid valve N° 3 | B3c |
| V104 | Cylinder injector solenoid valve N° 4 | B3c |
| V105 | Cylinder injector solenoid valve N° 5 | B3c |
| V106 | Cylinder injector solenoid valve N° 6 | B3c |
| Z003 | Fan speed regulator unit | B3c |

Engine electronic management (2/2)

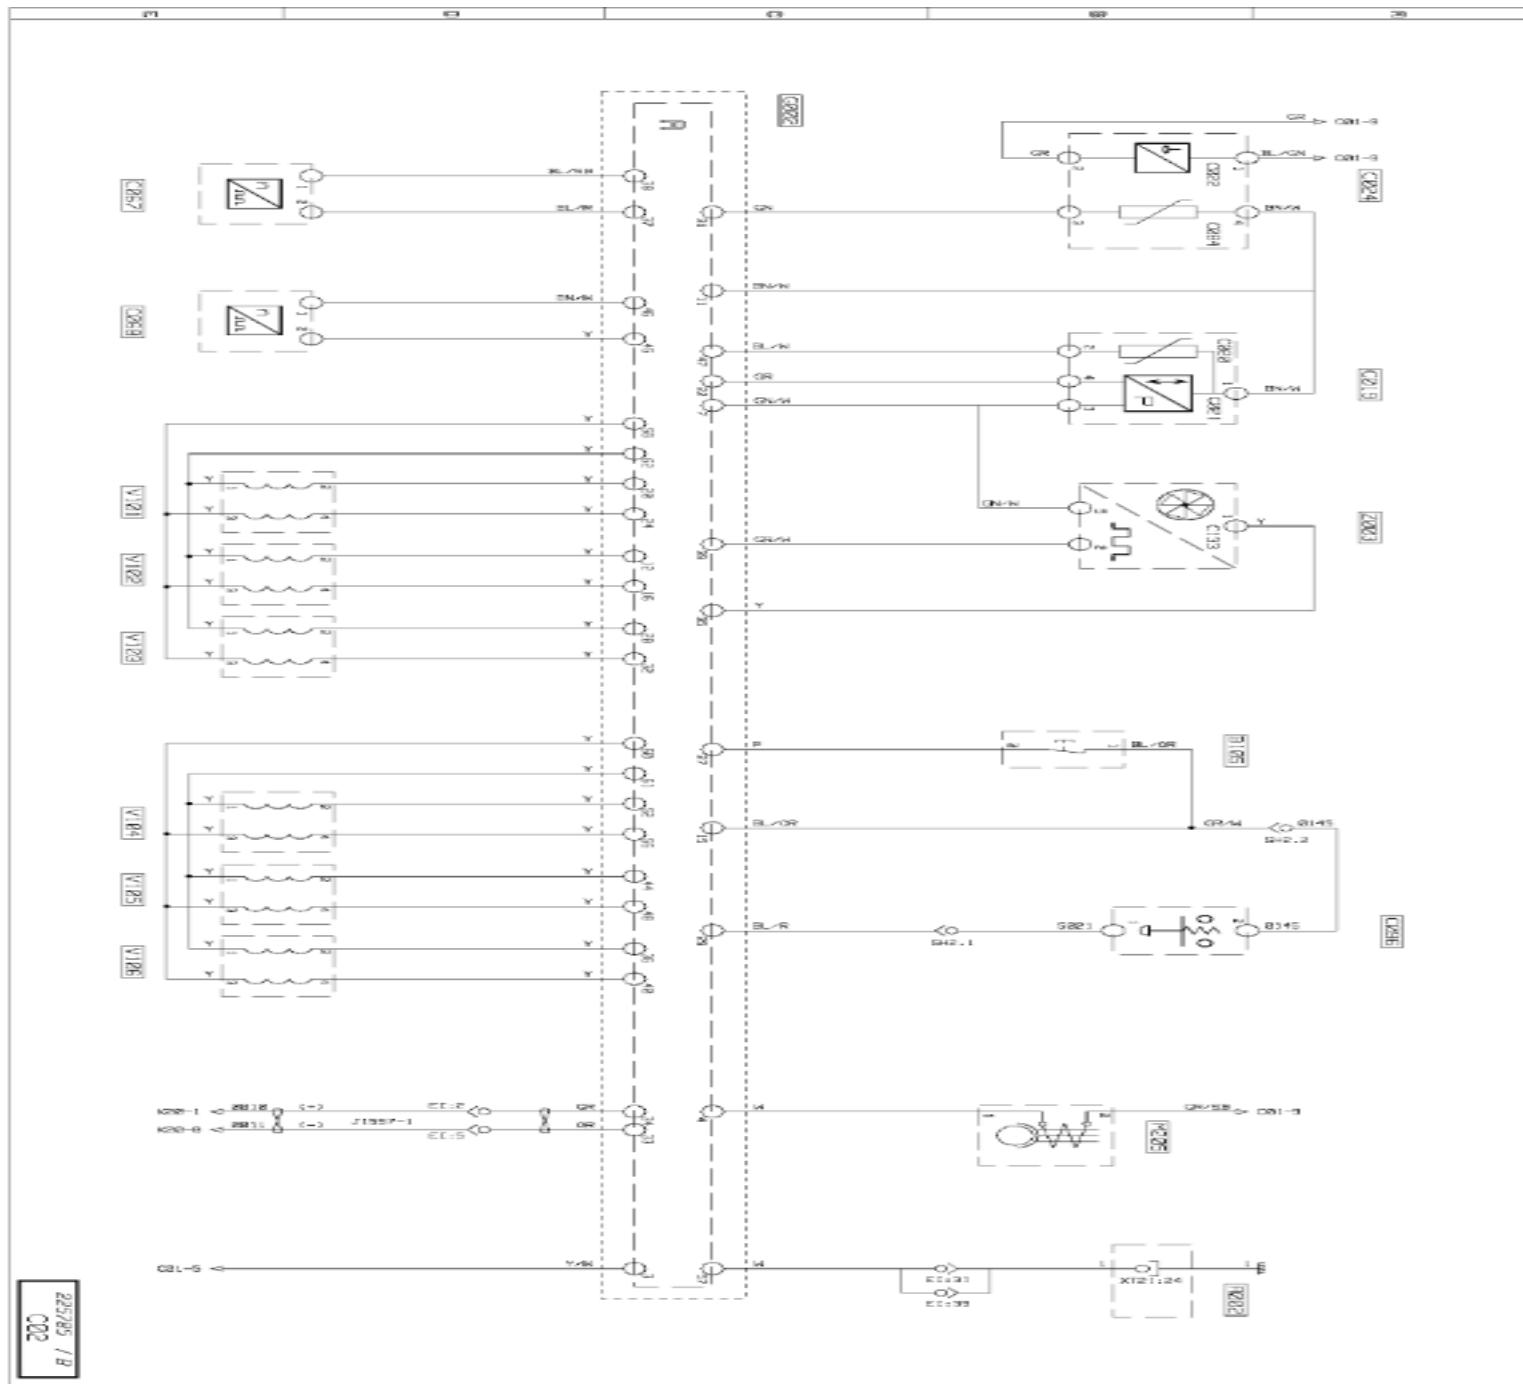

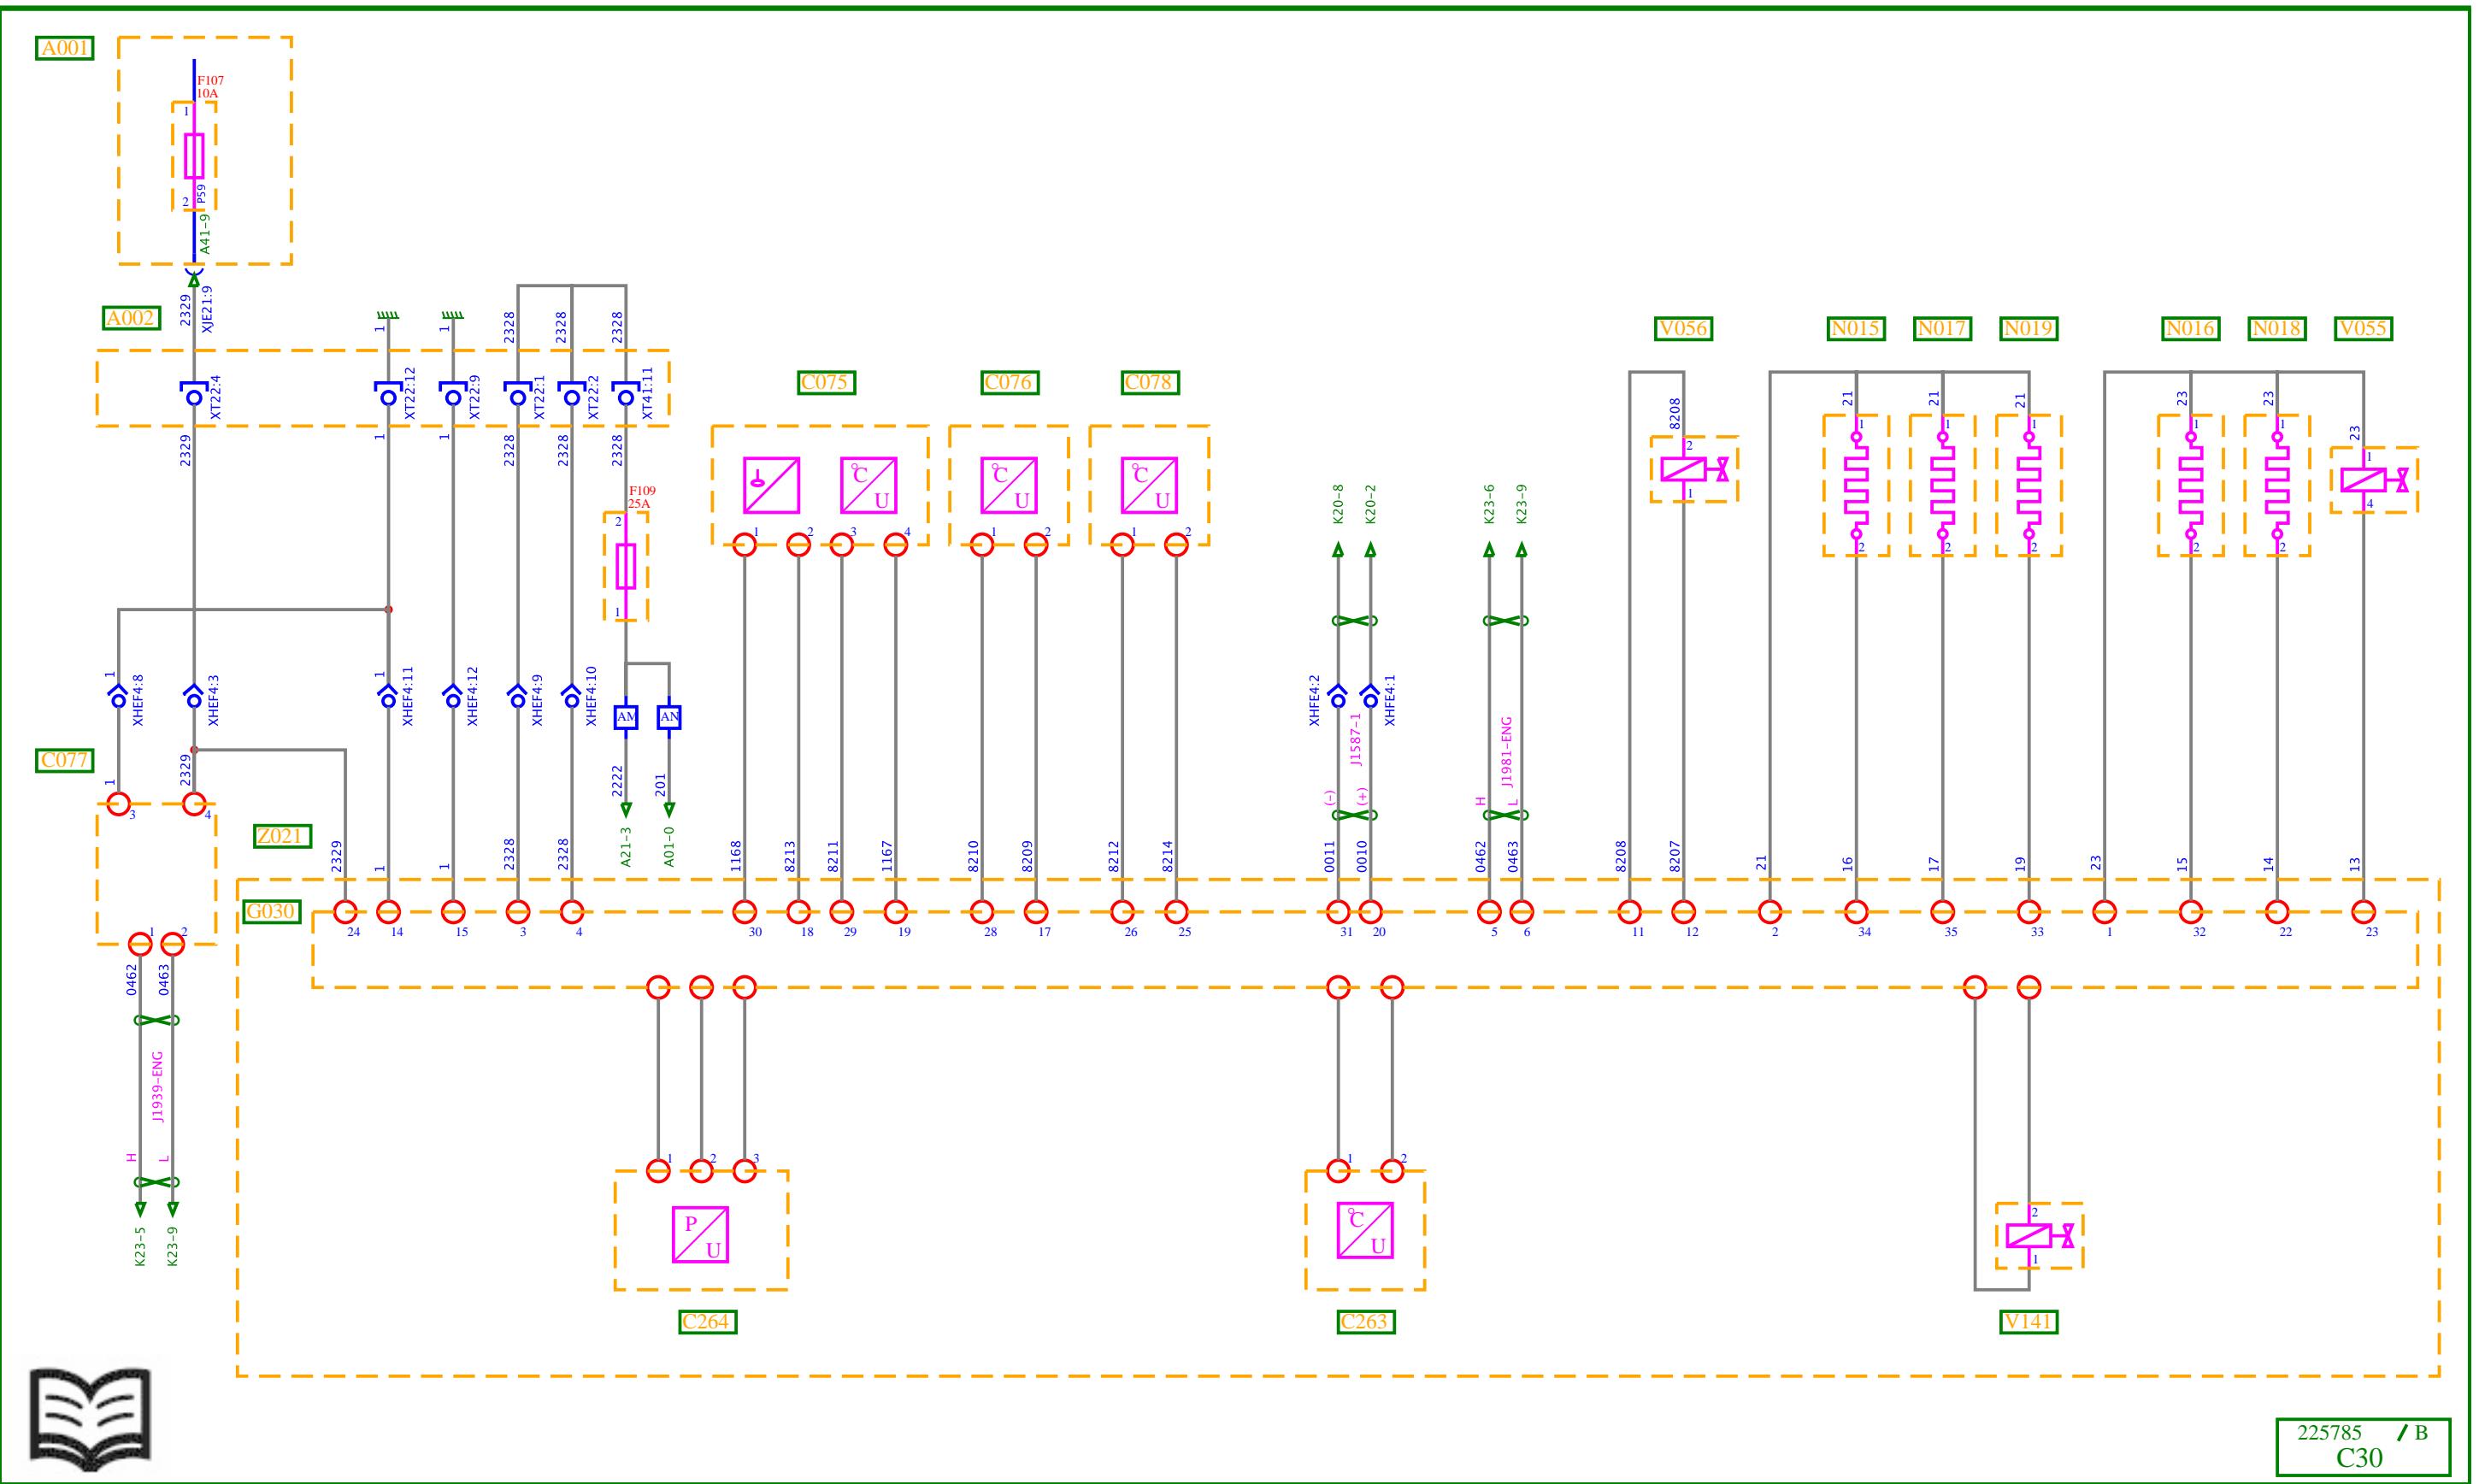

Urea inflow management


Key to appliances


| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| C075 | AdBlue tank temperature and level sensors | A4d |
| C076 | Exhaust gases temperature sensor | C4d |
| C077 | Nitrogen oxides gases concentration sensor | C4d |
| C078 | Exhaust gases after catalytic converter temperature sensor | C4d |
| C263 | AdBlue internal temperature sensor | C4d |
| C264 | AdBlue internal pressure sensor | C4d |
| G030 | AdBlue supply management pump module | C4d |
| N015 | AdBlue heating resistor (in tank to pump module circuit) | A4d |
| N016 | AdBlue heating resistor (in pump module to tank circuit) | A4d |
| N017 | AdBlue heating resistor (in pump module to metering solenoid valve circuit) | A4d |
| N018 | AdBlue heating resistor (in metering solenoid valve to pump module circuit) | A4d |
| N019 | AdBlue heating resistor (in filter on pump) | A4d |
| V055 | Engine water circuit by-pass solenoid valve | C4d |
| V056 | AdBlue supply metering solenoid valve | C4d |
| V141 | AdBlue cooling electrovalve | C4d |
| Z021 | Adblue pump module assembly | C4d |

AM: with ADR equipment

AN: without ADR equipment

Urea inflow management

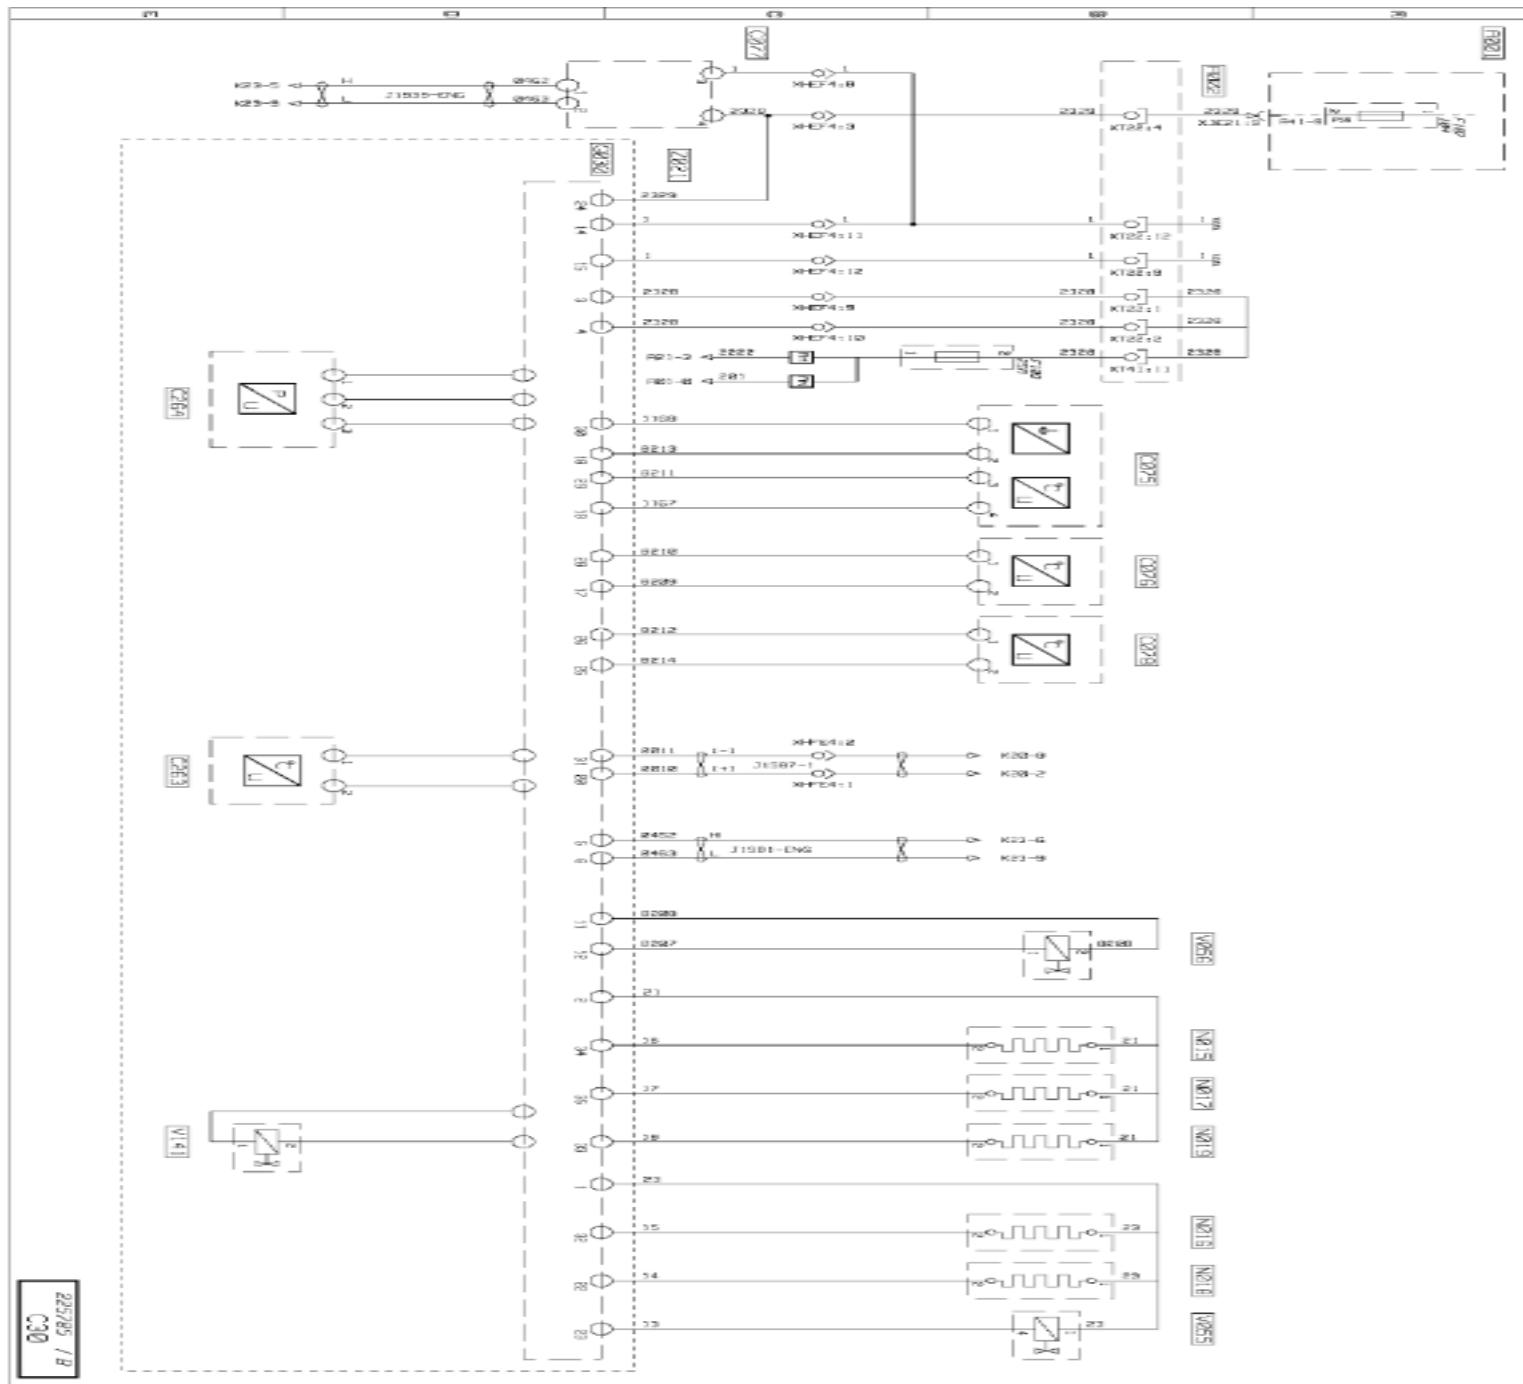

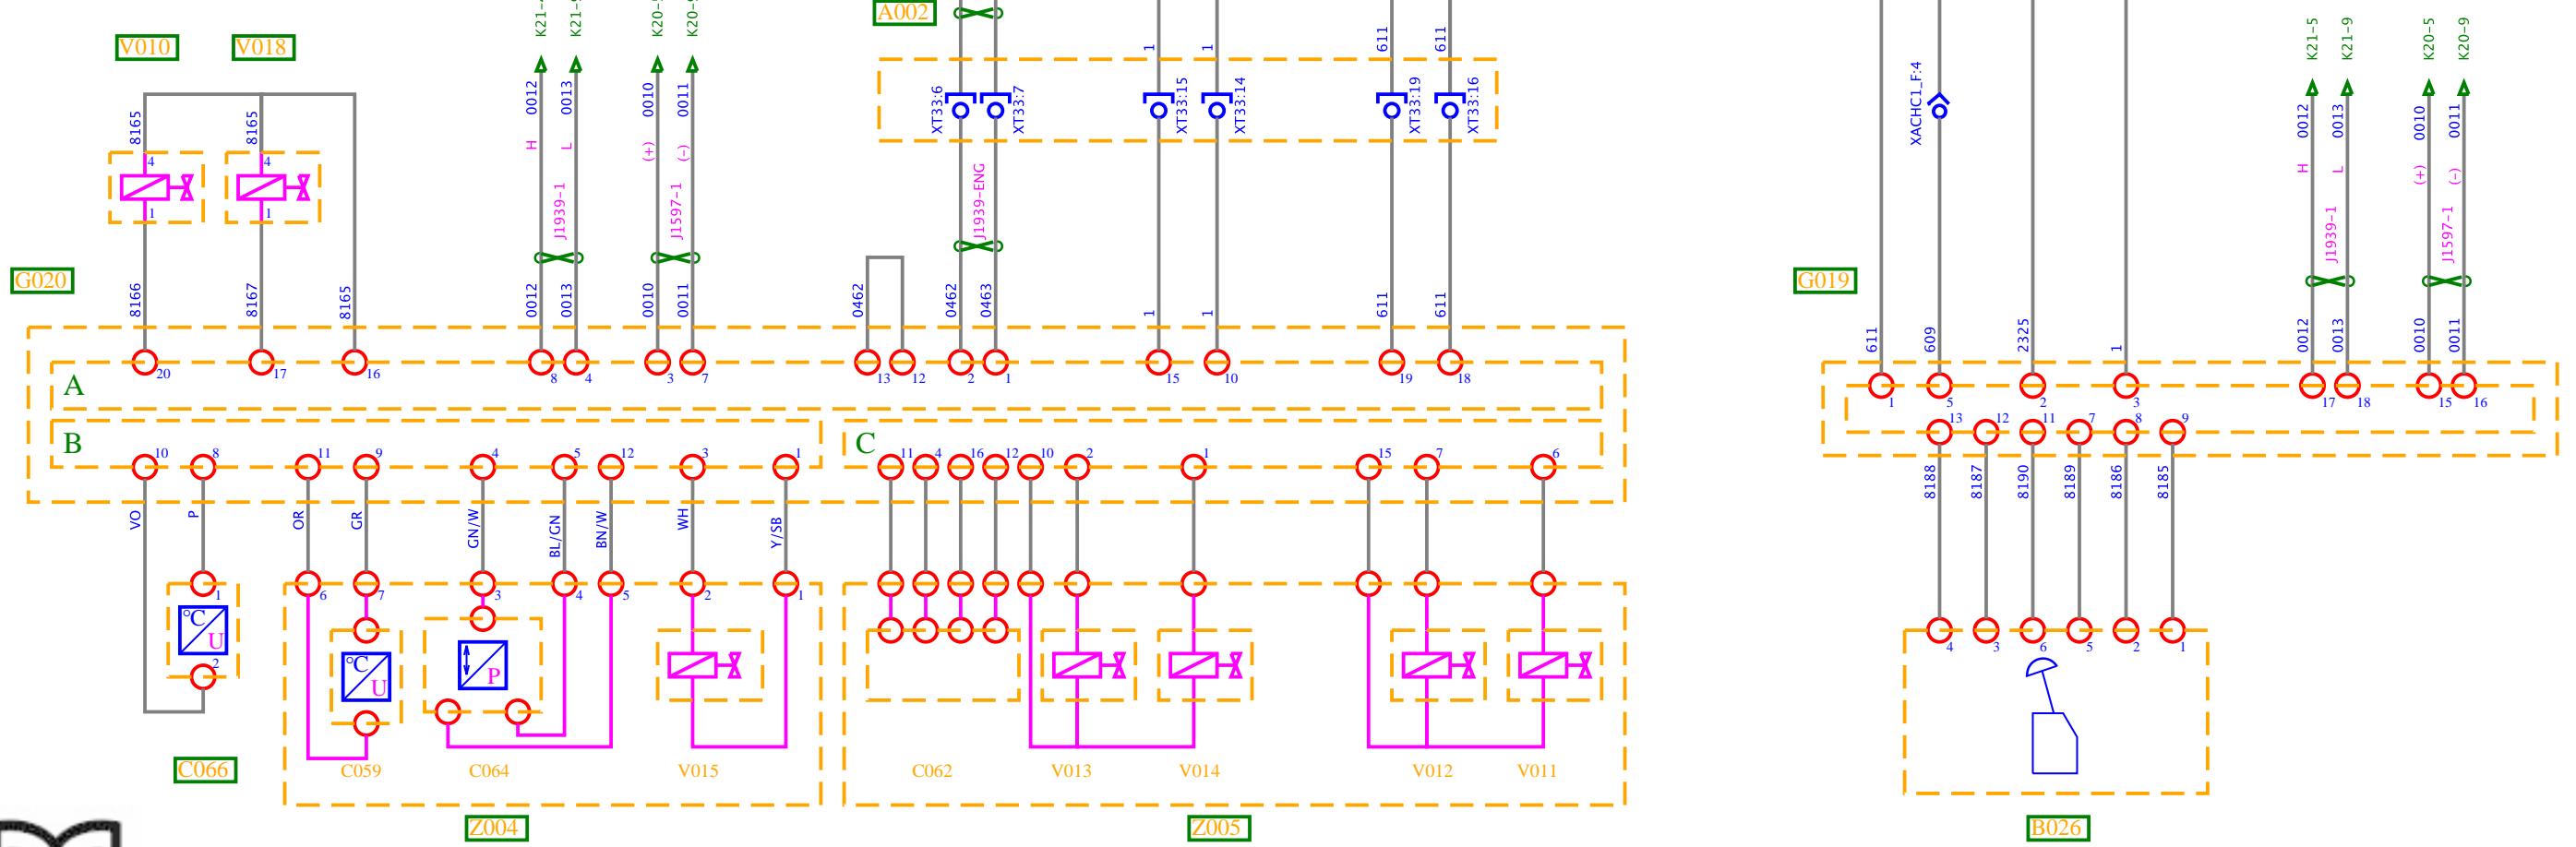

Automatic gearbox


Key to appliances


| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B026 | Automatic transmission gear selector | B2b |
| C059 | Retarder oil temperature sensor | B4d |
| C062 | Clutch position sensor | B4d |
| C064 | Retarder air pressure sensor | B4d |
| C066 | Retarder coolant temperature sensor | B4d |
| G019 | Gear selector ECU | B2b |
| G020 | Automatic transmission ECU | B2b |
| S200 | Automatic transmission management ECU power supply relay | B2b |
| V010 | PTO engagement electrovalve N° 1 | B4d |
| V011 | High speed disengagement solenoid valve | B4d |
| V012 | High speed engagement solenoid valve | B4d |
| V013 | Low speed engagement solenoid valve | B4d |
| V014 | Low speed disengagement solenoid valve | B4d |
| V015 | Retarder proportional electrovalve | B4d |
| V018 | PTO engagement electrovalve N° 2 | B4d |
| Z004 | Retarder unit | B4d |
| Z005 | Automatic transmission unit | B4d |

Automatic gearbox

OPTIDRIVER+

DOI
22572
R / B

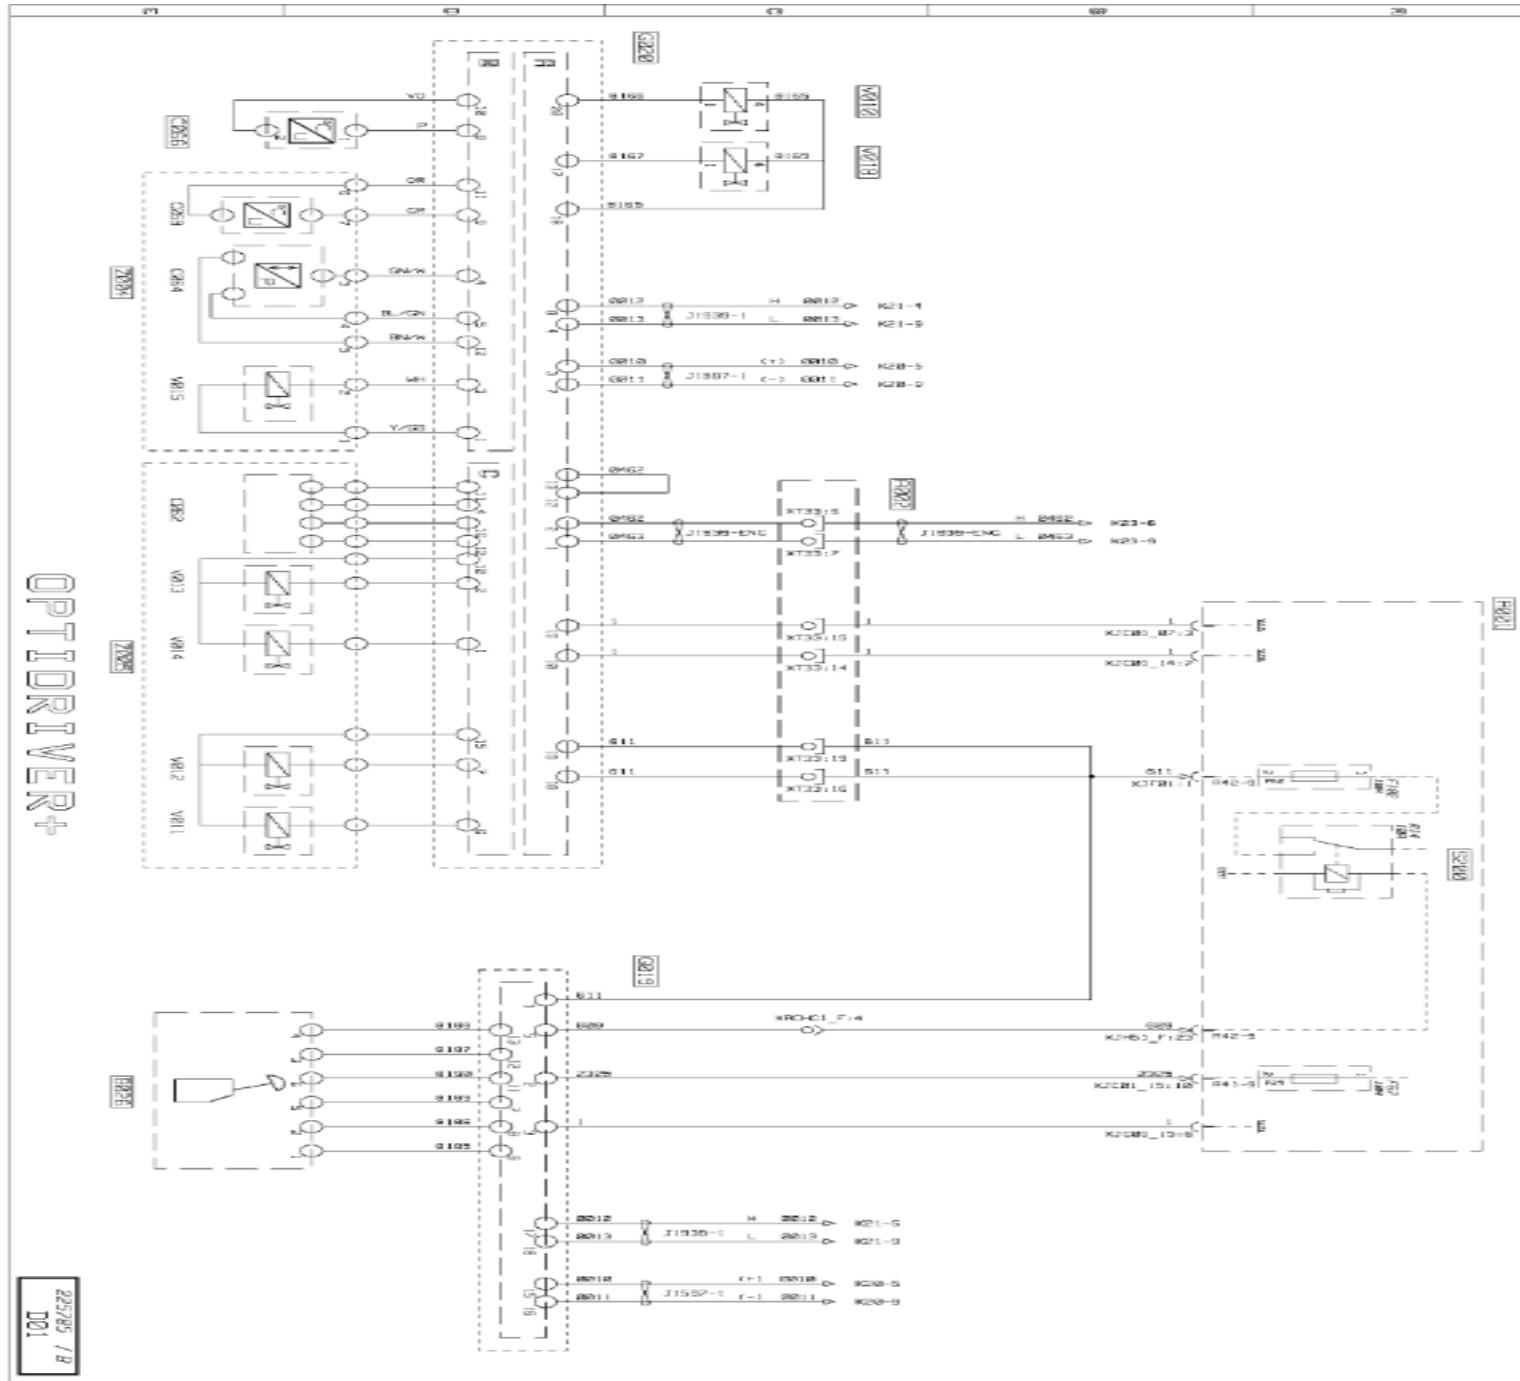

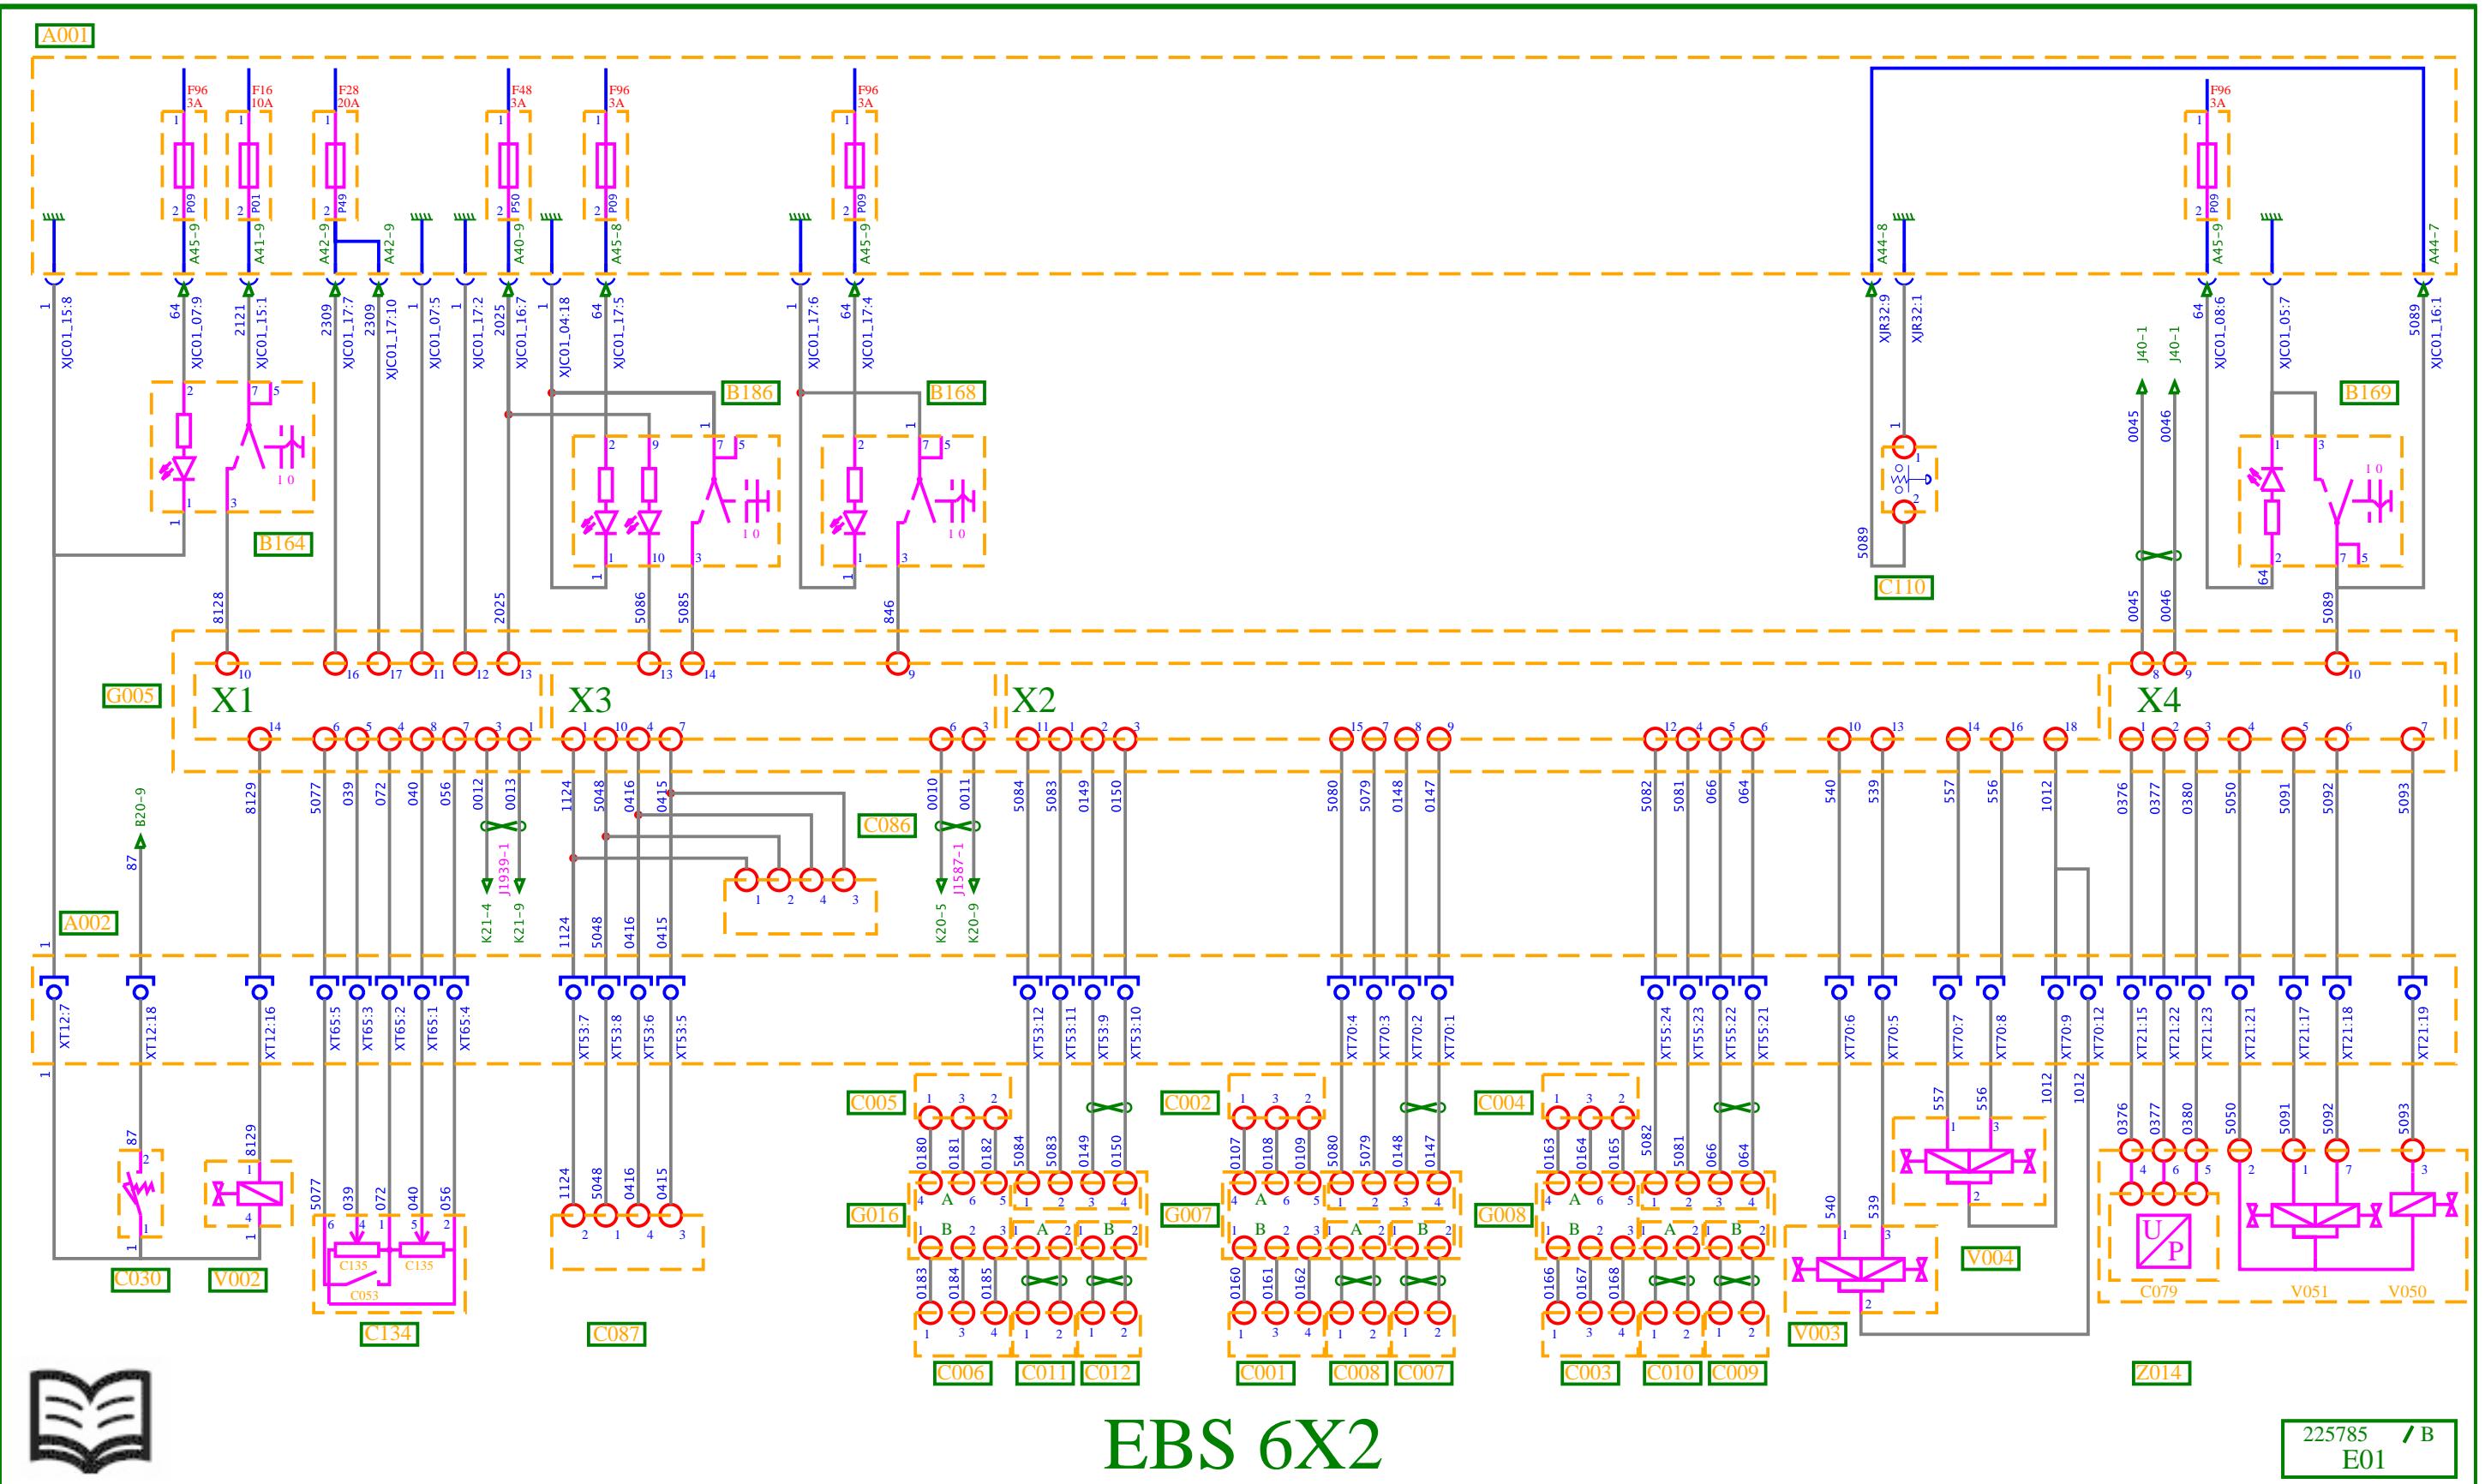


EBS 6x2 equipment


Key to appliances

| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B164 | Rear wheels diff lock control | C2b |
| B168 | Traction control enabling control | C2c |
| B169 | Trailer brake holding enabling control | C2c |
| B186 | Brake holding enabling control | C2c |
| C001 | LH front wheel brake linings wear sensor | C3d |
| C002 | RH front wheel brake linings wear sensor | A3d |
| C003 | LH rear wheel brake linings wear sensor | C7d |
| C004 | RH rear wheel brake linings wear sensor | A7d |
| C005 | Lift-up axle or second rear axle LH wheel brake linings wear sensor | C8d |
| C006 | Lift-up axle or second rear axle RH wheel brake linings wear sensor | A8d |
| C007 | LH front wheel speed sensor | C3d |
| C008 | RH front wheel speed sensor | A3d |
| C009 | LH rear wheel speed sensor | C7d |
| C010 | RH rear wheel speed sensor | A7d |
| C011 | Lift-up axle or second rear axle LH wheel speed sensor | C8d |
| C012 | Lift-up axle or second rear axle RH wheel speed sensor | A8d |
| C030 | Rear inter-axle diff lock engaged sensor | B7d |
| C053 | Stop lights switch | C2c |
| C079 | Trailer braking assistance pressure system sensor | B7d |
| C086 | Steering lockover angle sensor | C2c |
| C087 | Chassis lateral acceleration sensor | B6d |
| C110 | Parking brake indicator pressure sensor | B6d |
| C134 | Brake pedal sensor unit | C2c |
| C135 | Brake pedal position copying sensor | C2c |
| G005 | EBS braking management ECU | B2b |
| G007 | Front axle braking assistance modulator unit | B3d |
| G008 | Drive axle braking assistance modulator unit | B7d |
| G016 | Second rear axle braking assistance modulator unit | B7d |
| V002 | Rear wheels diff lock electrovalve | B7d |

| | | |
|------|--|-----|
| V003 | LH roadwheel ABS electrovalve | C3d |
| V004 | Front RH wheel ABS solenoid valve | A3d |
| V050 | Braking auxiliary electrovalve | B7d |
| V051 | Trailer braking inlet/exhaust electrovalve | B7d |
| Z014 | Trailer brake control EBS modulator unit | B7d |

EBS 6x2 equipment

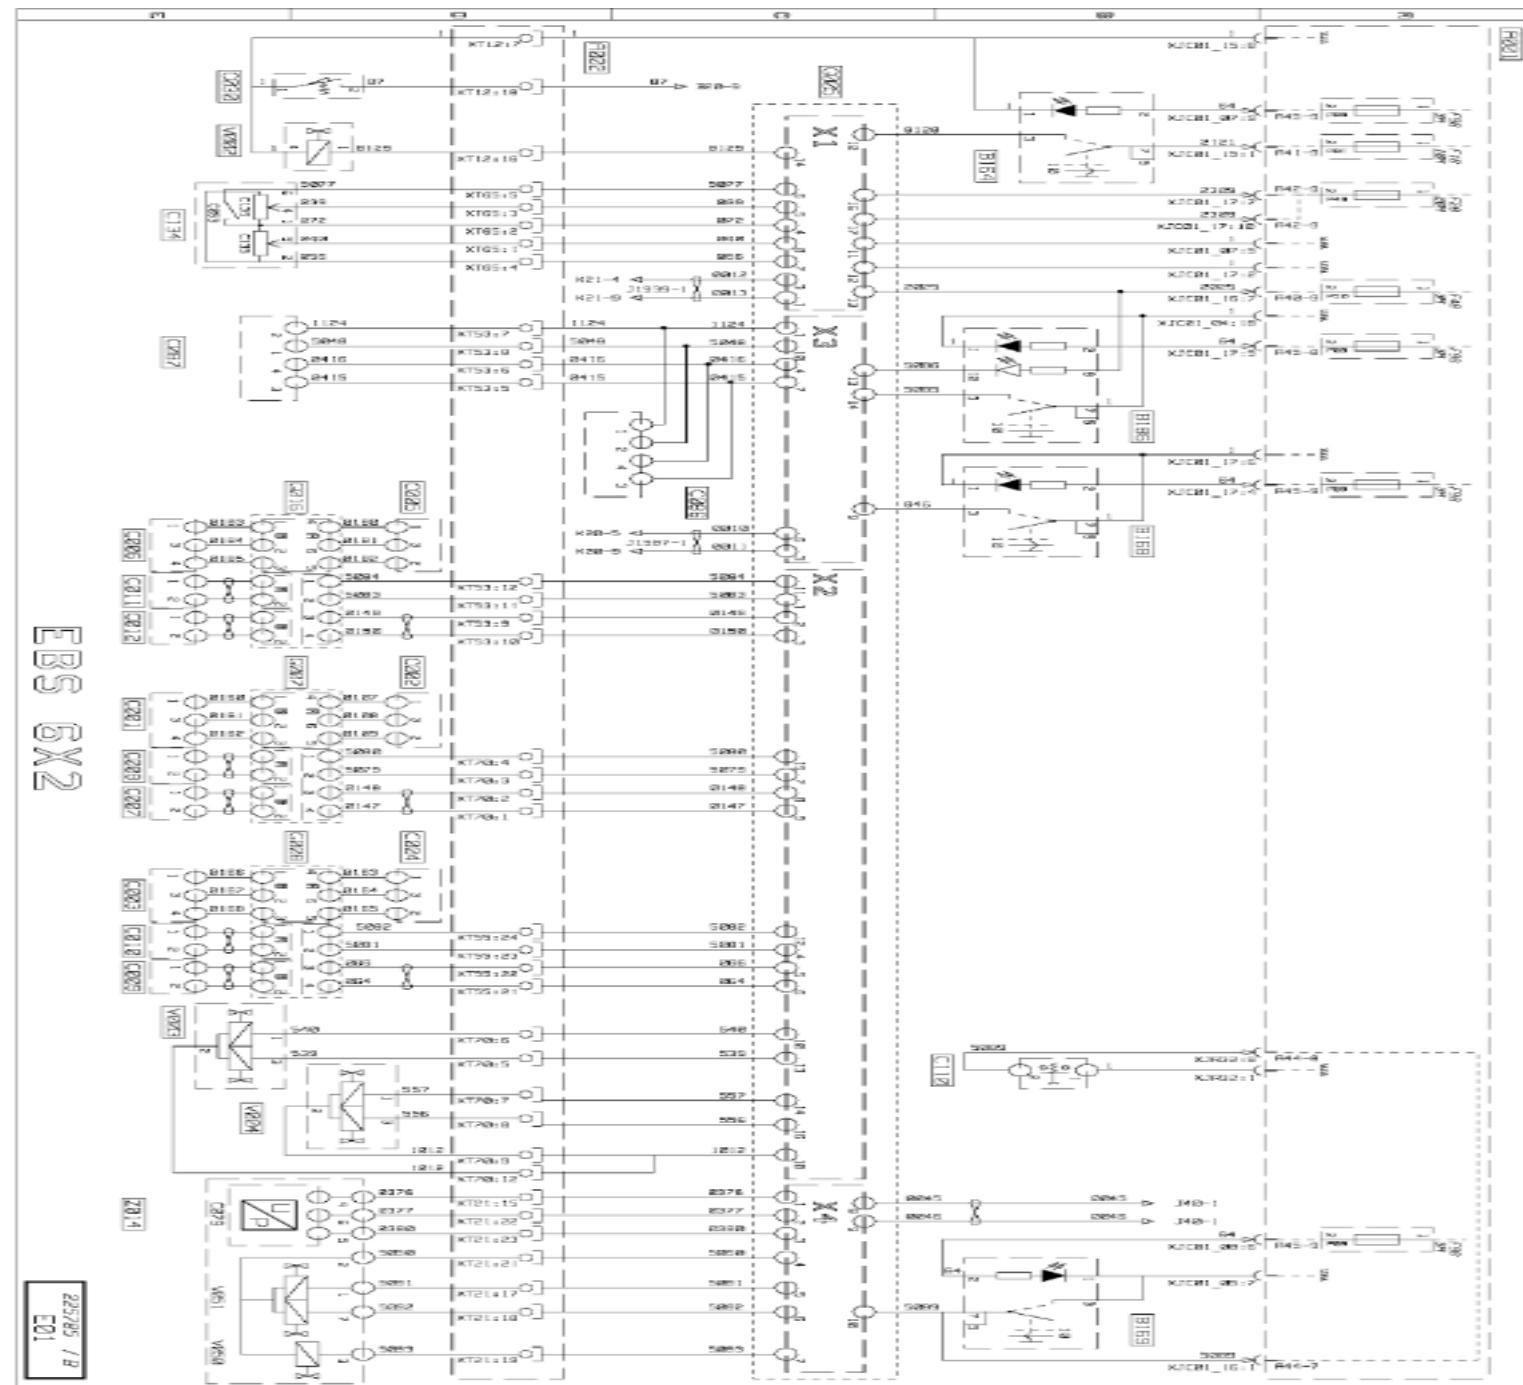

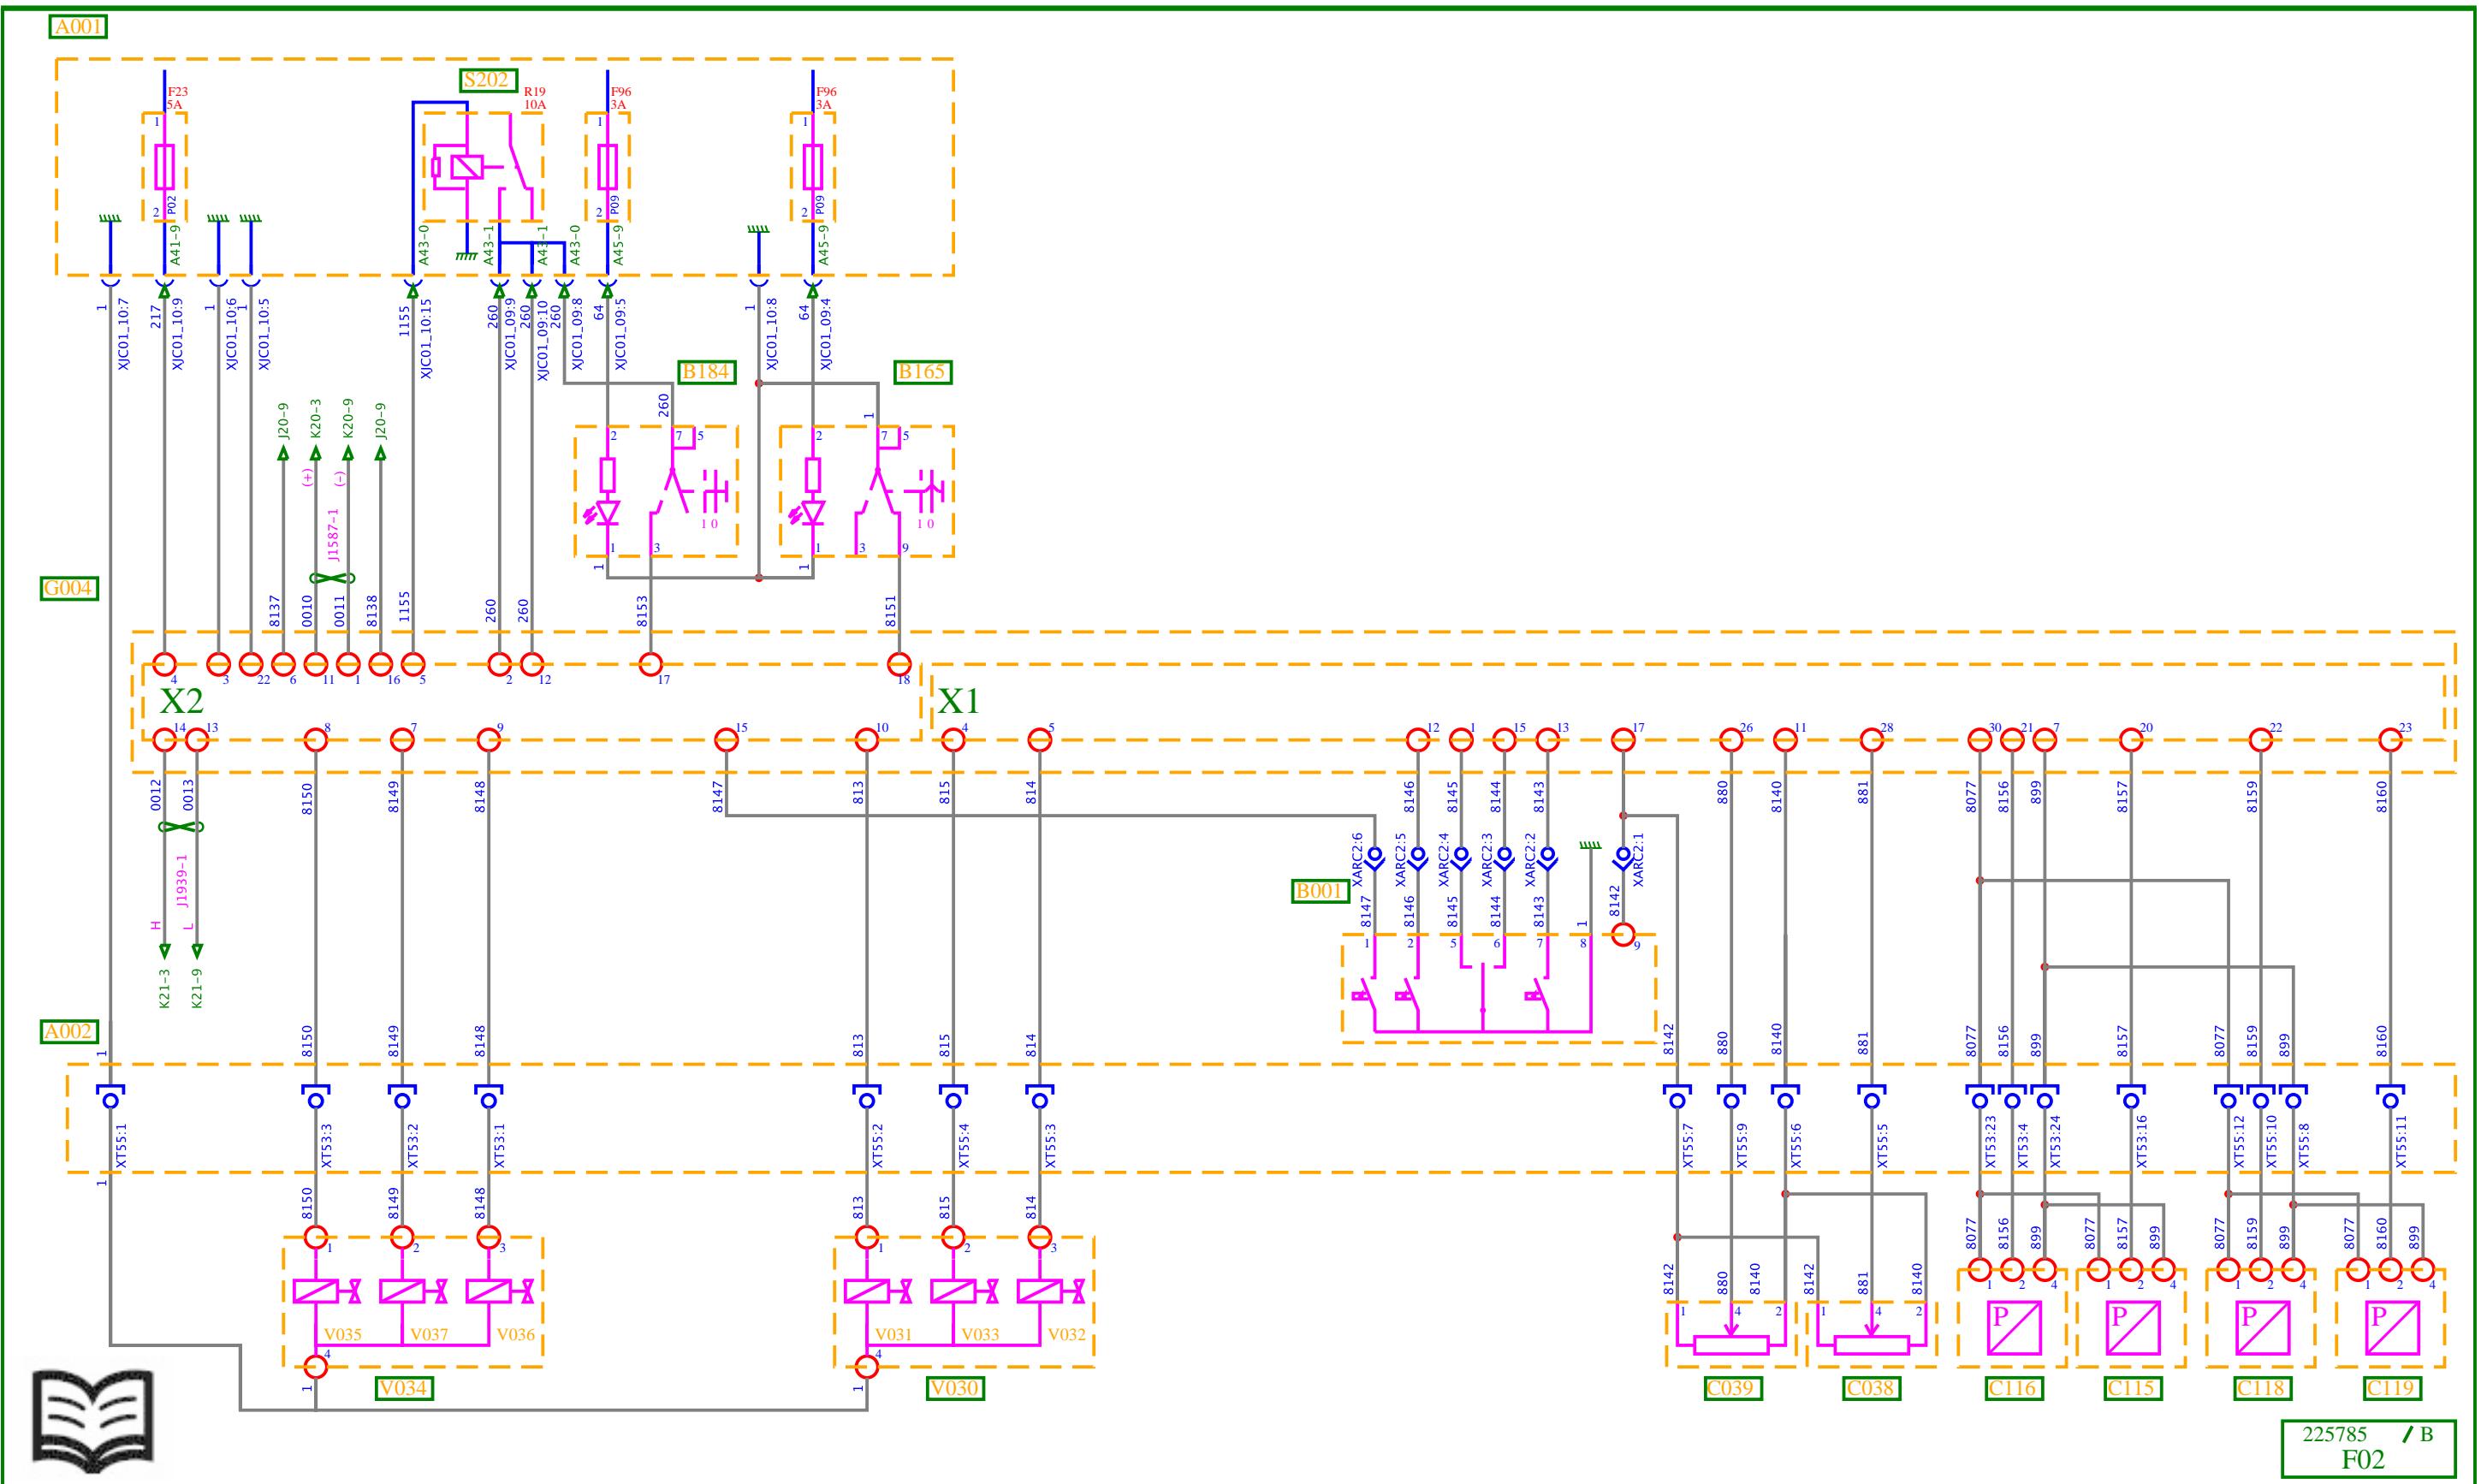



Rear air suspension - 4x2 / 6x2 (2 sensors)

Key to appliances

| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B001 | Air suspension remote control | C4c |
| B165 | Second rear axle lift-up control | B2b |
| B184 | Axle load-shedding activation control | B2b |
| C038 | Drive axle suspension RH position sensor | A7d |
| C039 | Drive axle suspension LH position sensor | C7d |
| C115 | Lift-up air spring pressure sensor | A8d |
| C116 | Middle axle suspension air pressure sensor | A8d |
| C118 | Drive axle suspension LH pressure sensor | C7d |
| C119 | Drive axle suspension RH pressure sensor | A7d |
| G004 | Air suspension ECU | B2b |
| S202 | Air suspension power supply relay | B2c |
| V030 | Drive axle suspension control solenoid valve unit | B7d |
| V031 | Drive axle rear suspension main electrovalve | B7d |
| V032 | Drive axle rear suspension (RH side) electrovalve | B7d |
| V033 | Drive axle rear suspension (LH side) electrovalve | B7d |
| V034 | Rear axle suspension control solenoid valve unit | B7d |
| V035 | Rear axle suspension main electrovalve | B7d |
| V036 | Rear axle suspension electrovalve | B7d |
| V037 | Lift-up air spring control electrovalve | B7d |

Rear air suspension - 4x2 / 6x2 (2 sensors)

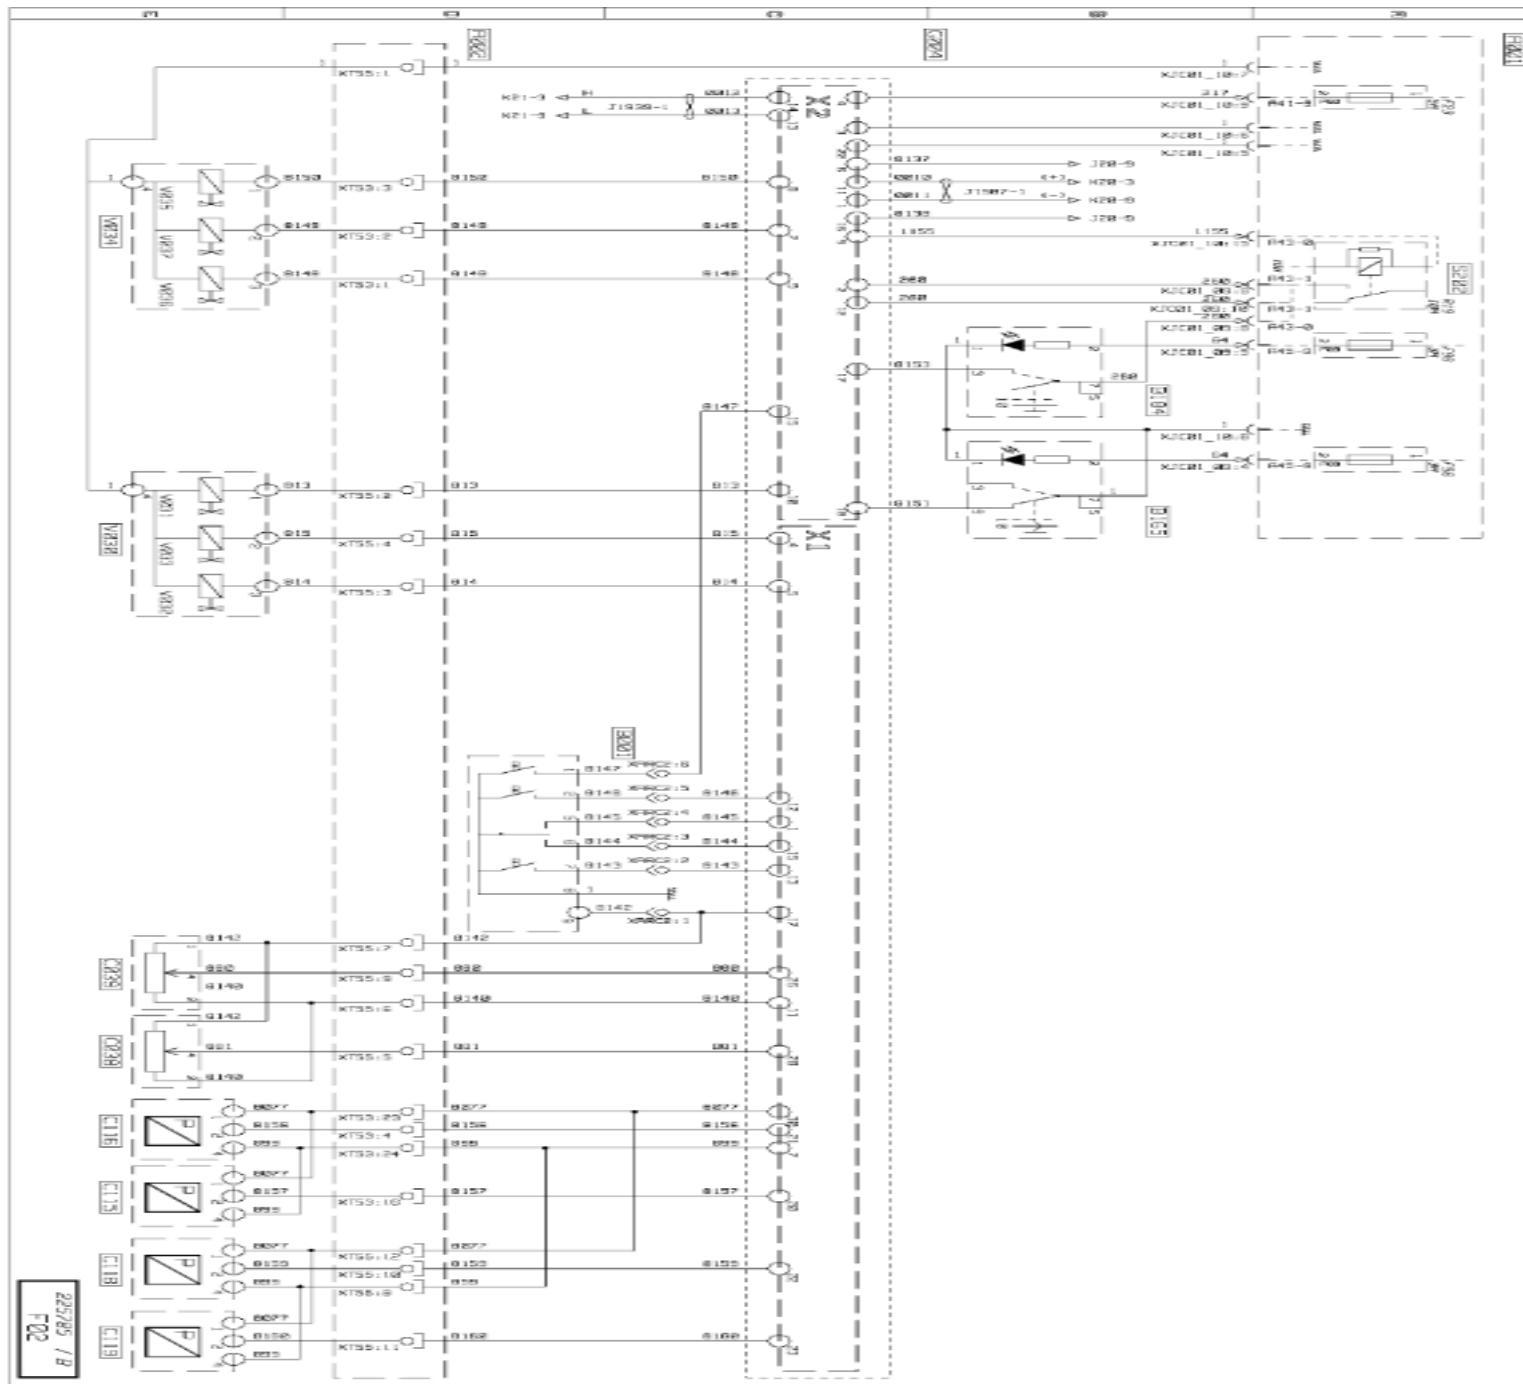

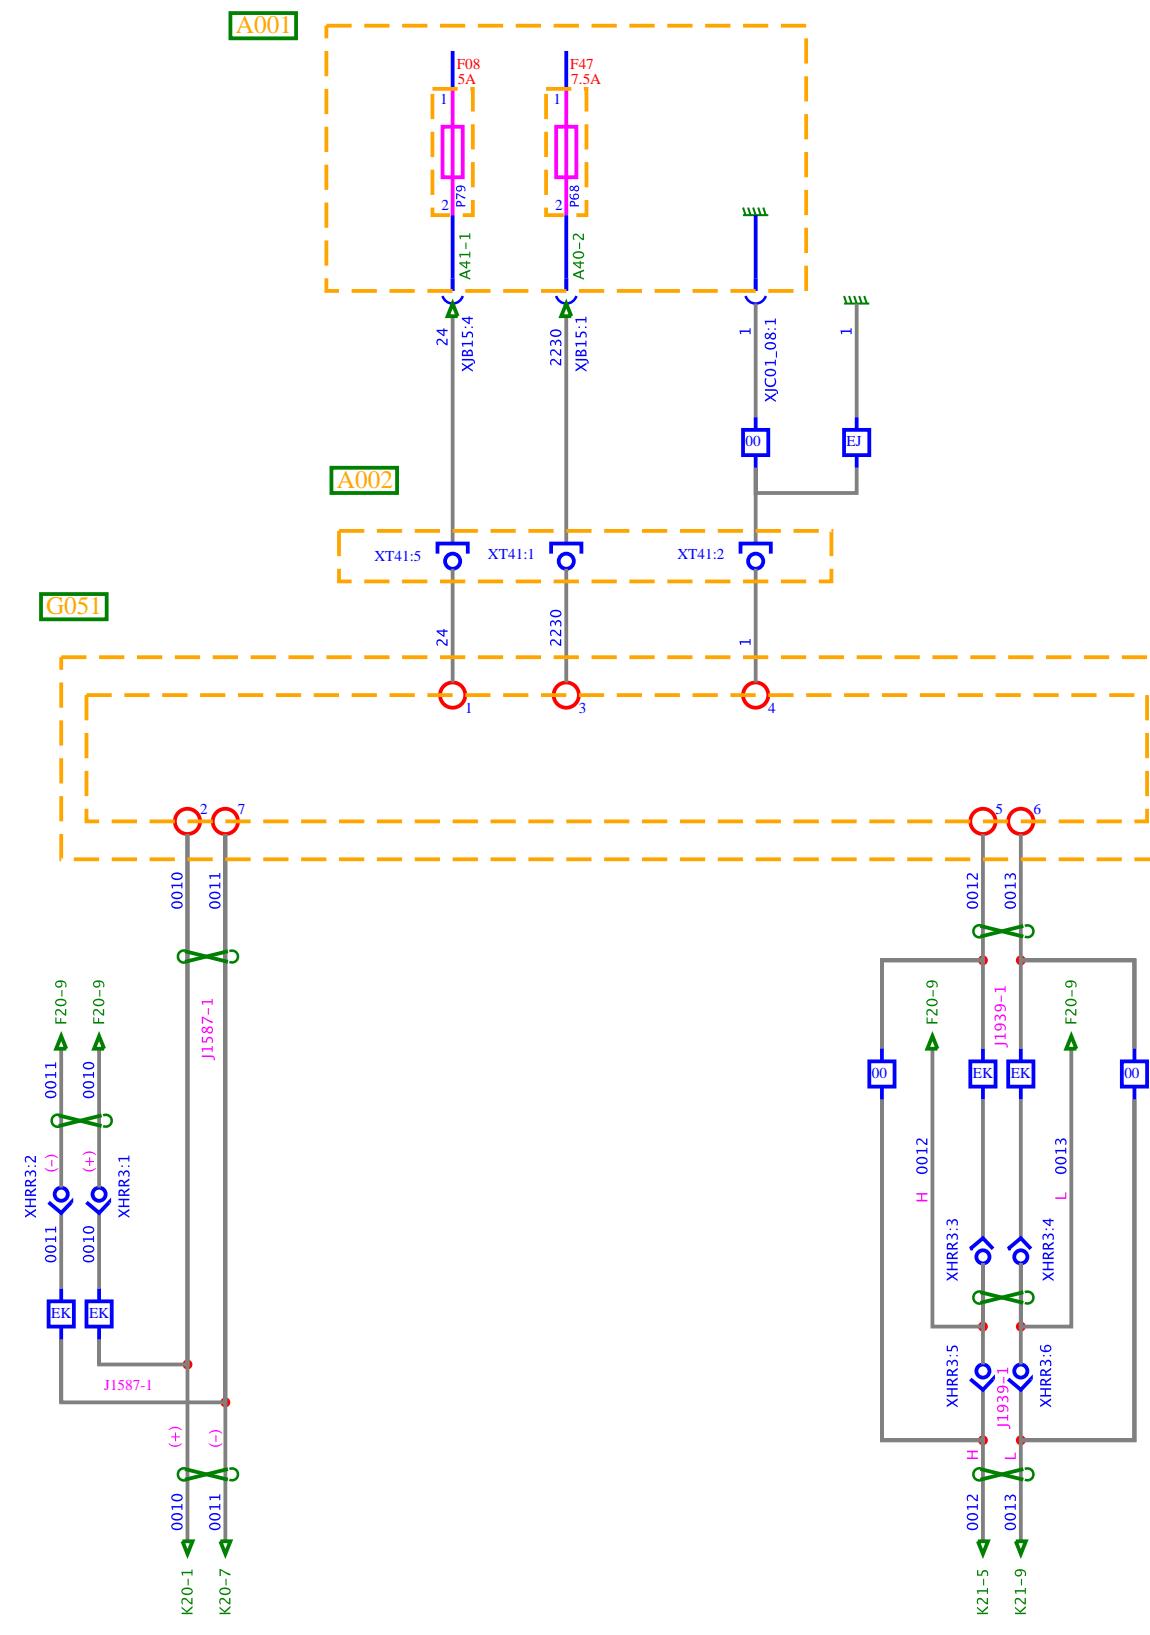

225785 / B
F40

Air production management

Key to appliances


| Code | Function | Location |
|------|---------------------------------|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| G051 | Air production management ECU | C4d |

EJ: with battery box on the right


EK: with rear steering axle

OO: other cases of use

Air production management

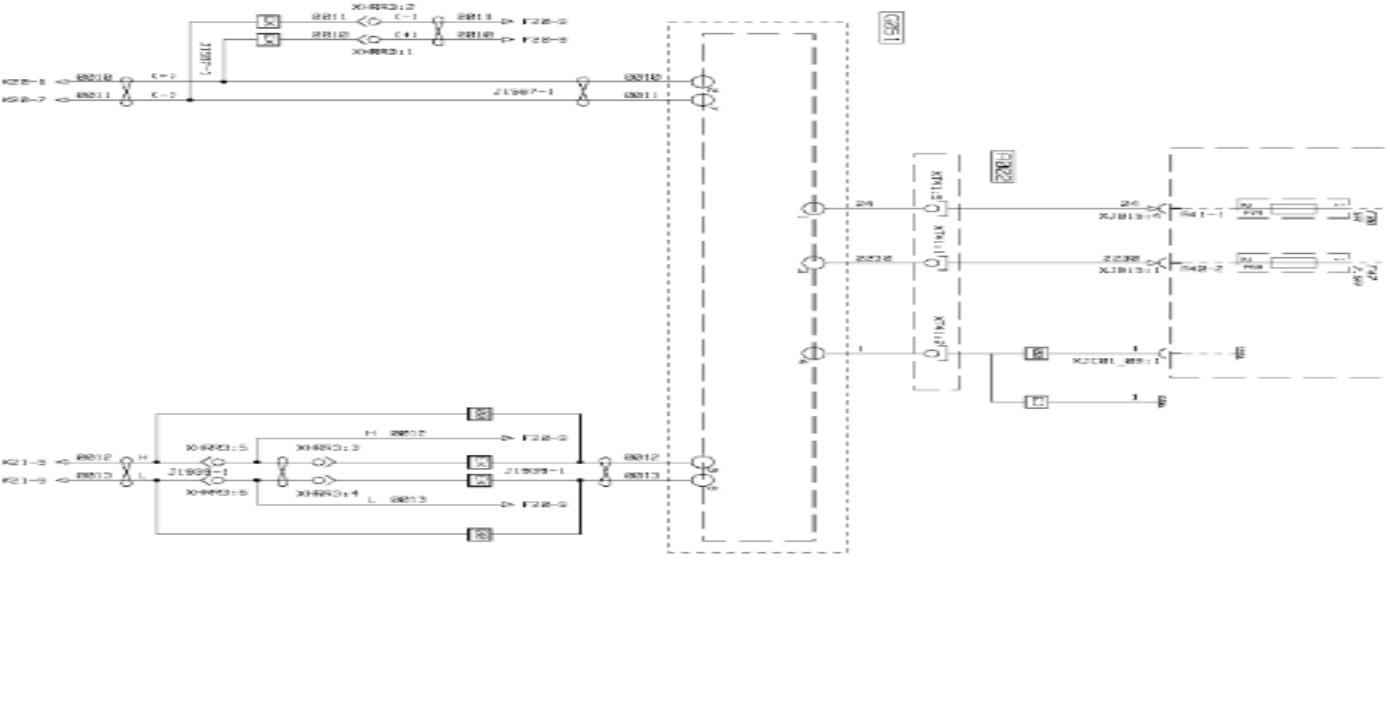

225/35 / R
F40

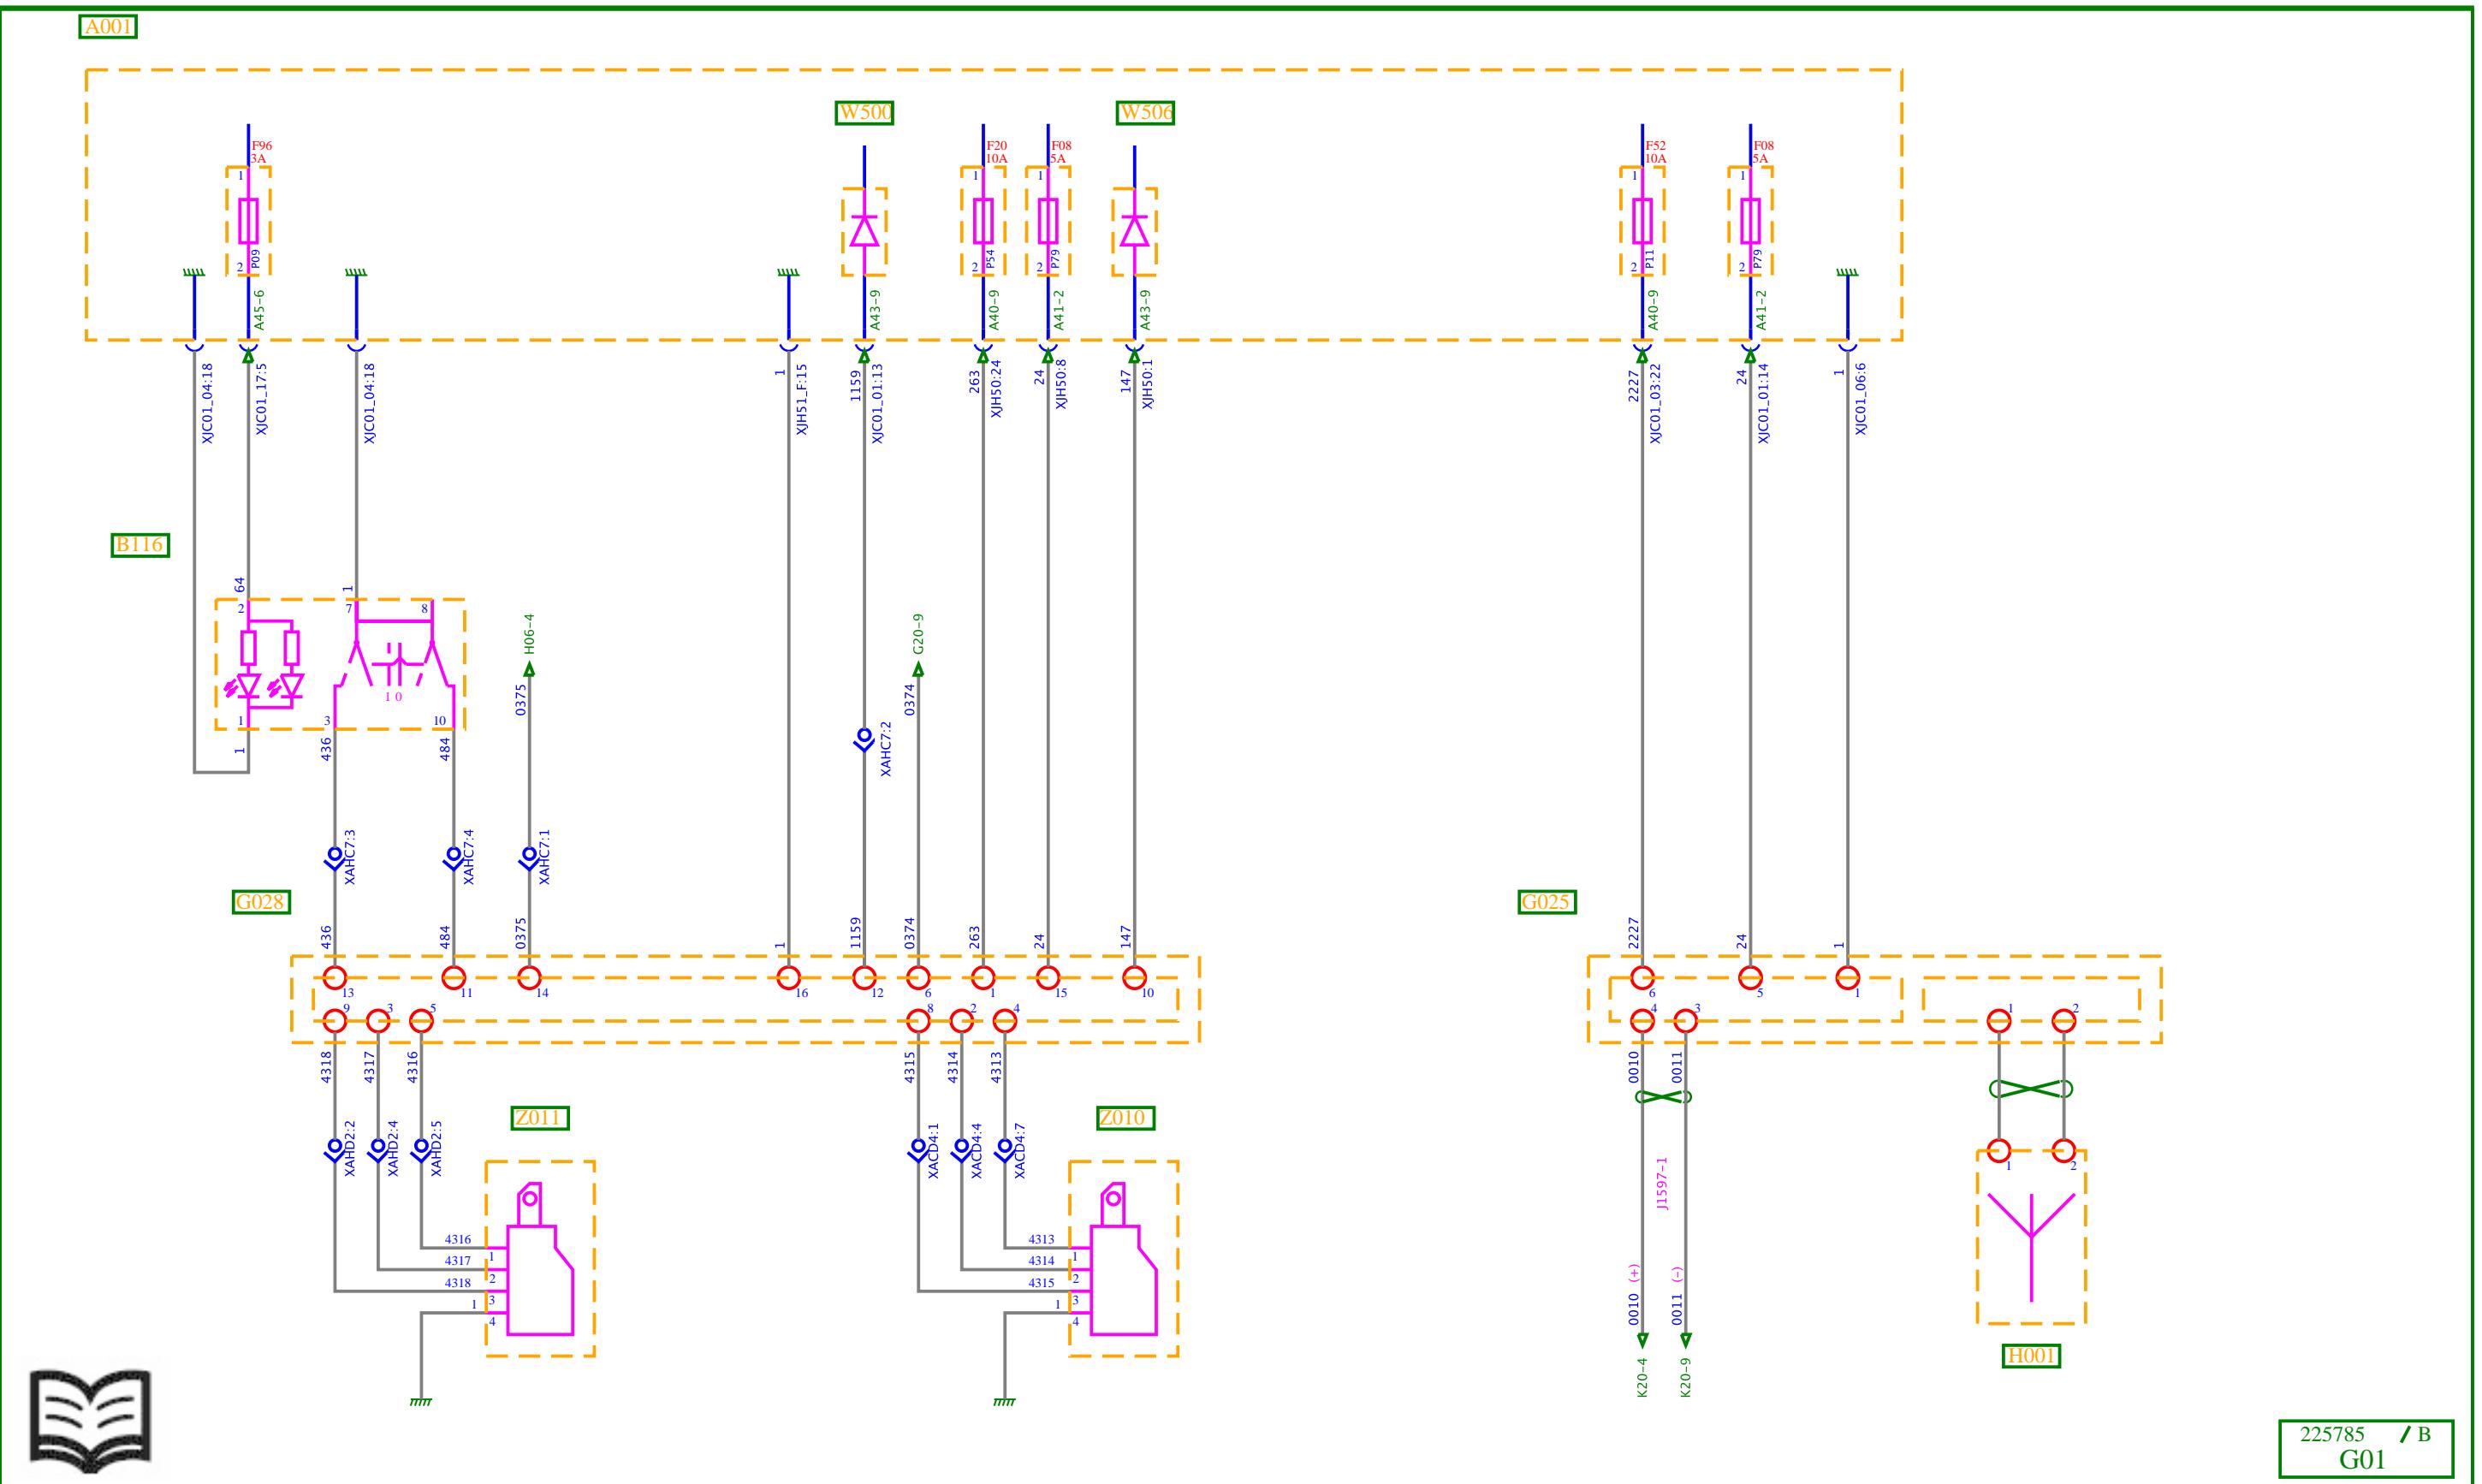



Doors / engine immobilizer controls

Key to appliances

| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| B116 | Doors locking control | B2b |
| G025 | Engine immobilizer ECU | C2c |
| G028 | Doors central locking ECU | A2c |
| H001 | Engine immobilizer antenna | C2c |
| W500 | Diode(s) | B2c |
| W506 | Doors central locking diode | B2c |
| Z010 | Front passenger's door locking striker unit | A3c |
| Z011 | Driver's door locking striker unit | C3c |

Doors / engine immobilizer controls

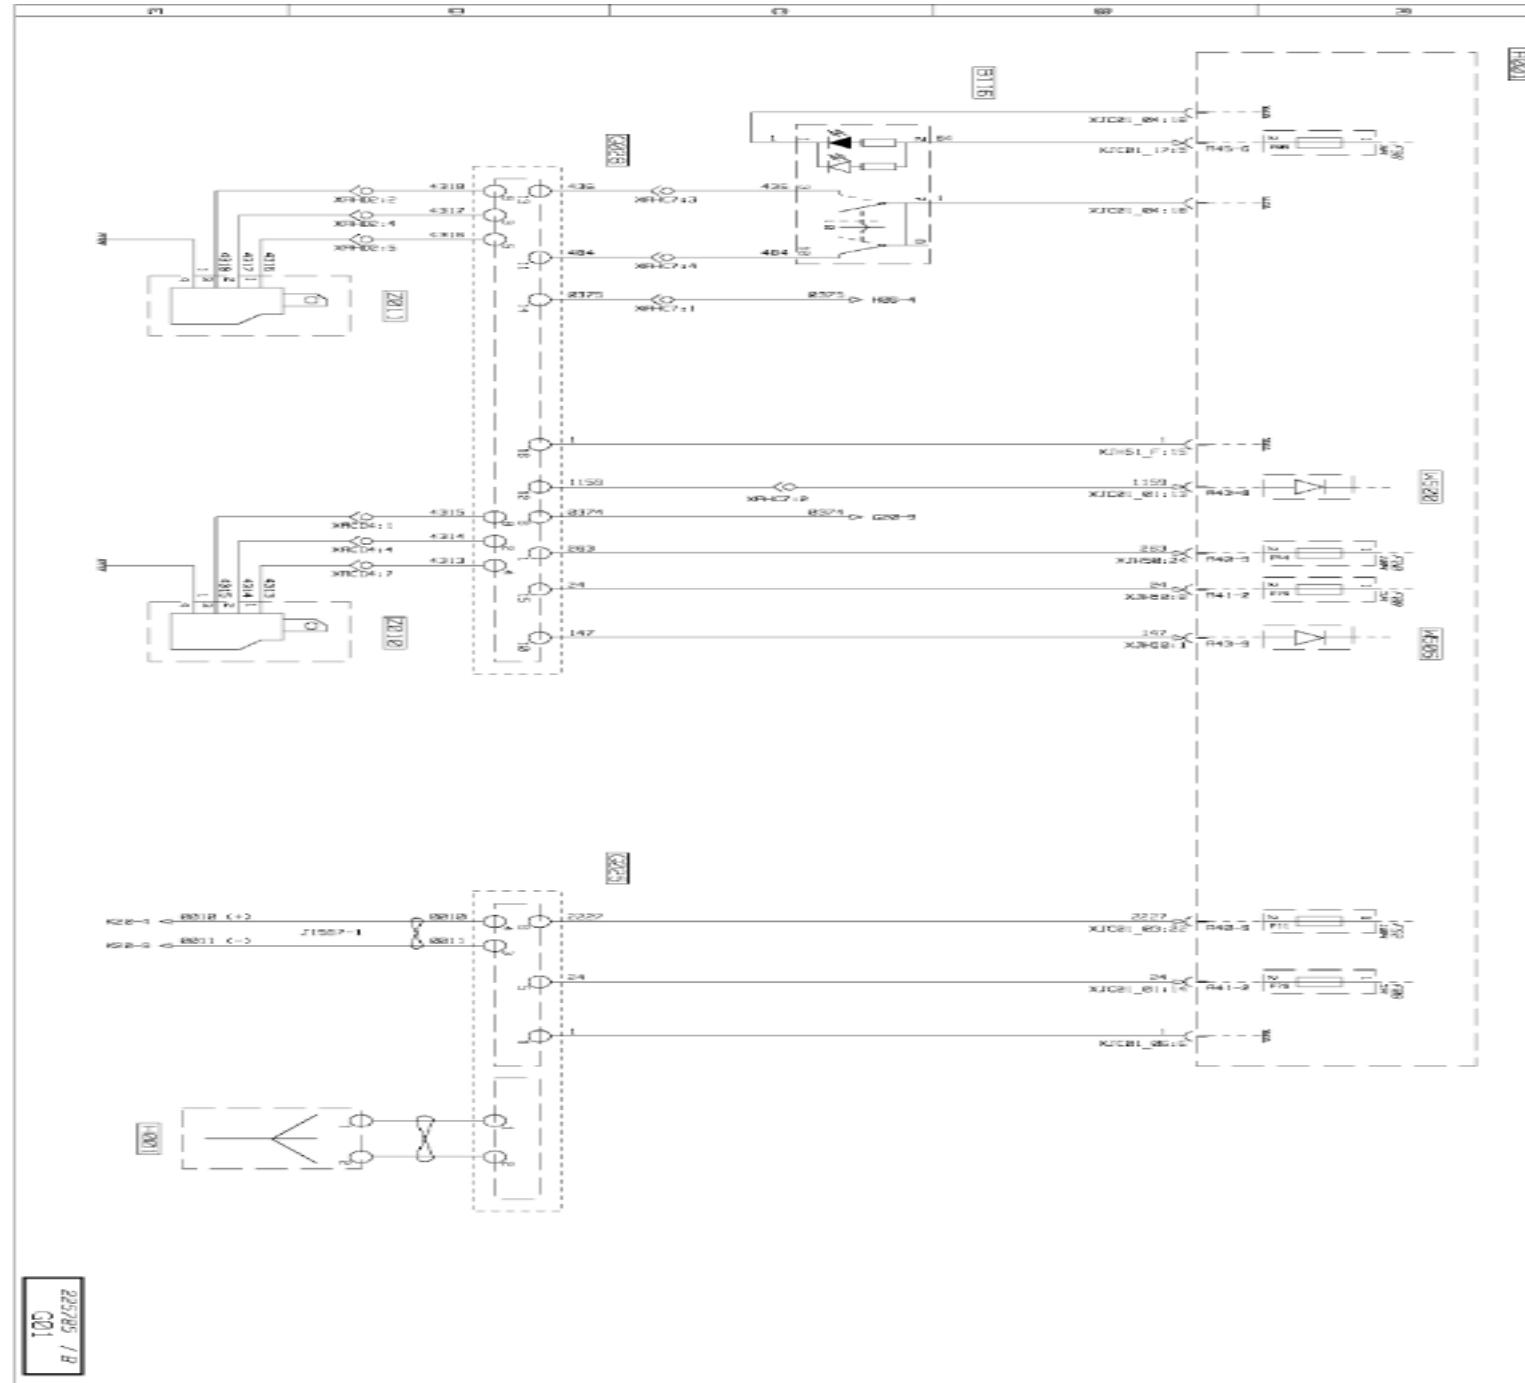

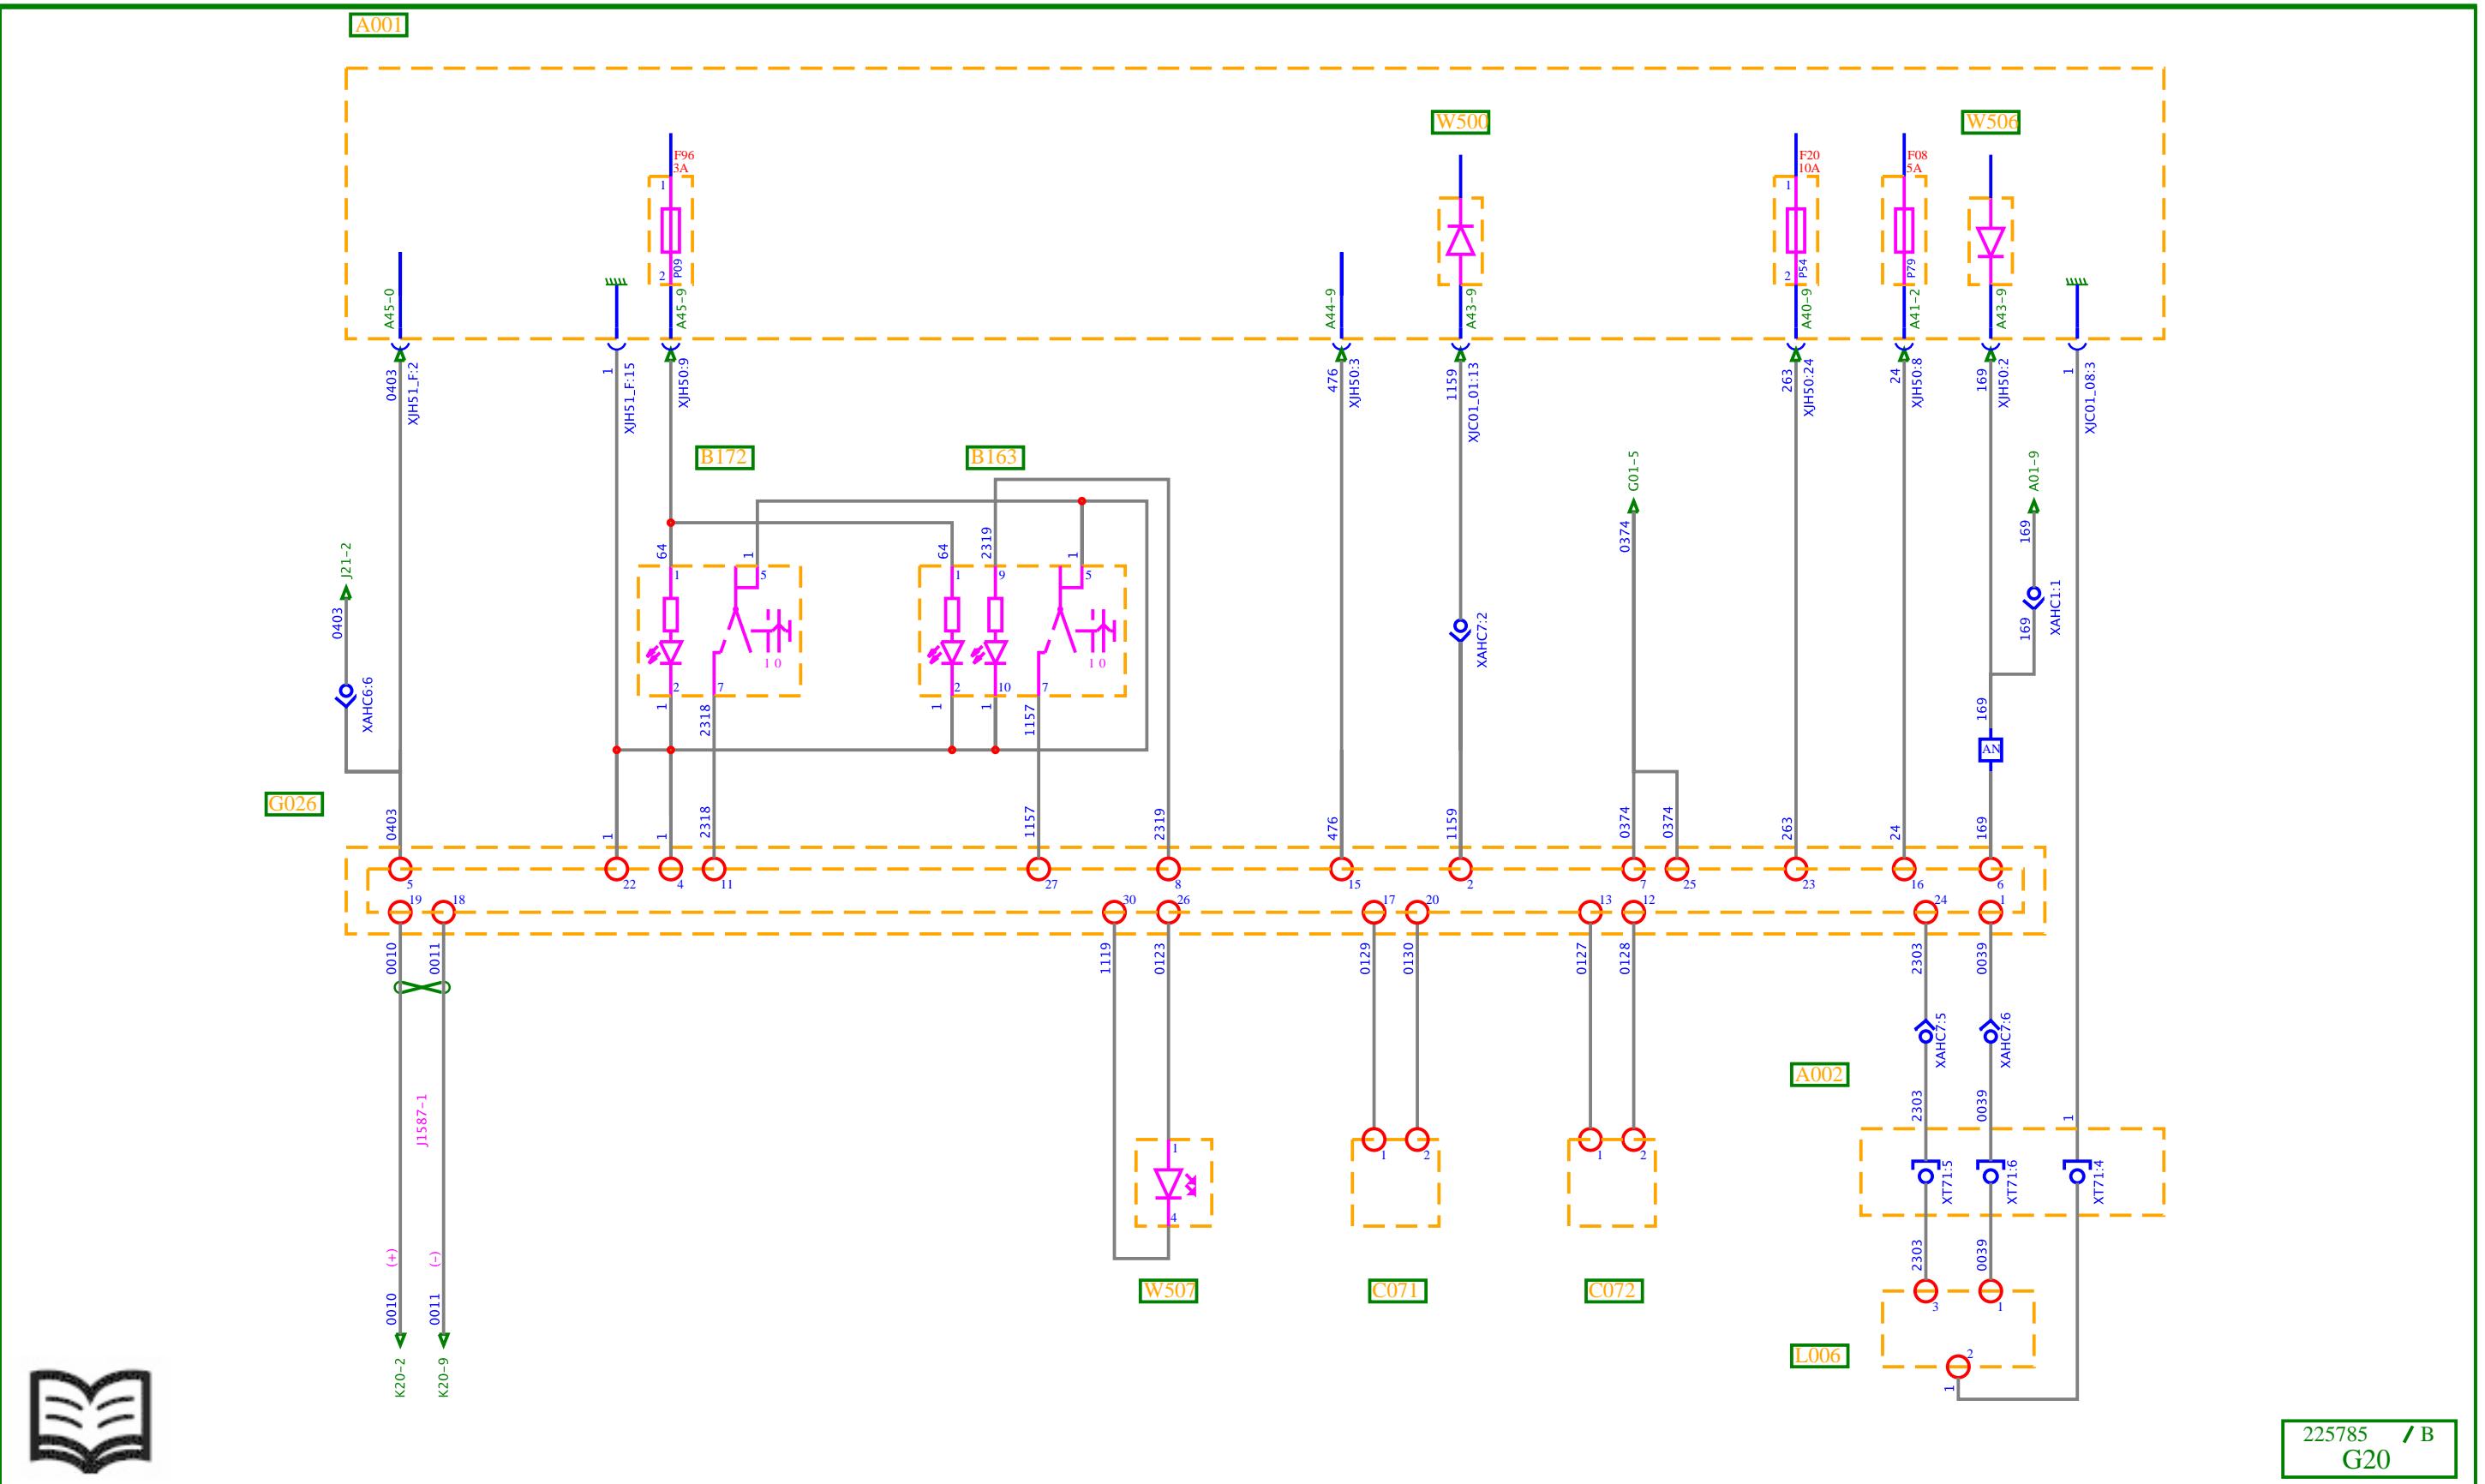


Alarm


Key to appliances

| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B163 | Alarm anti-panic control | B2b |
| B172 | Alarm siren sound level reduction control | B2b |
| C071 | Alarm ultra-sonic transmitter sensor | C2c |
| C072 | Alarm ultra-sonic receiver sensor | A2c |
| G026 | Alarm ECU | A2a |
| L006 | Horn - Alarm siren | C2d |
| W500 | Diode(s) | B2c |
| W506 | Doors central locking diode | B2c |
| W507 | Vehicle alarm sounding diode | B2a |

AN: without ADR equipment

Alarm

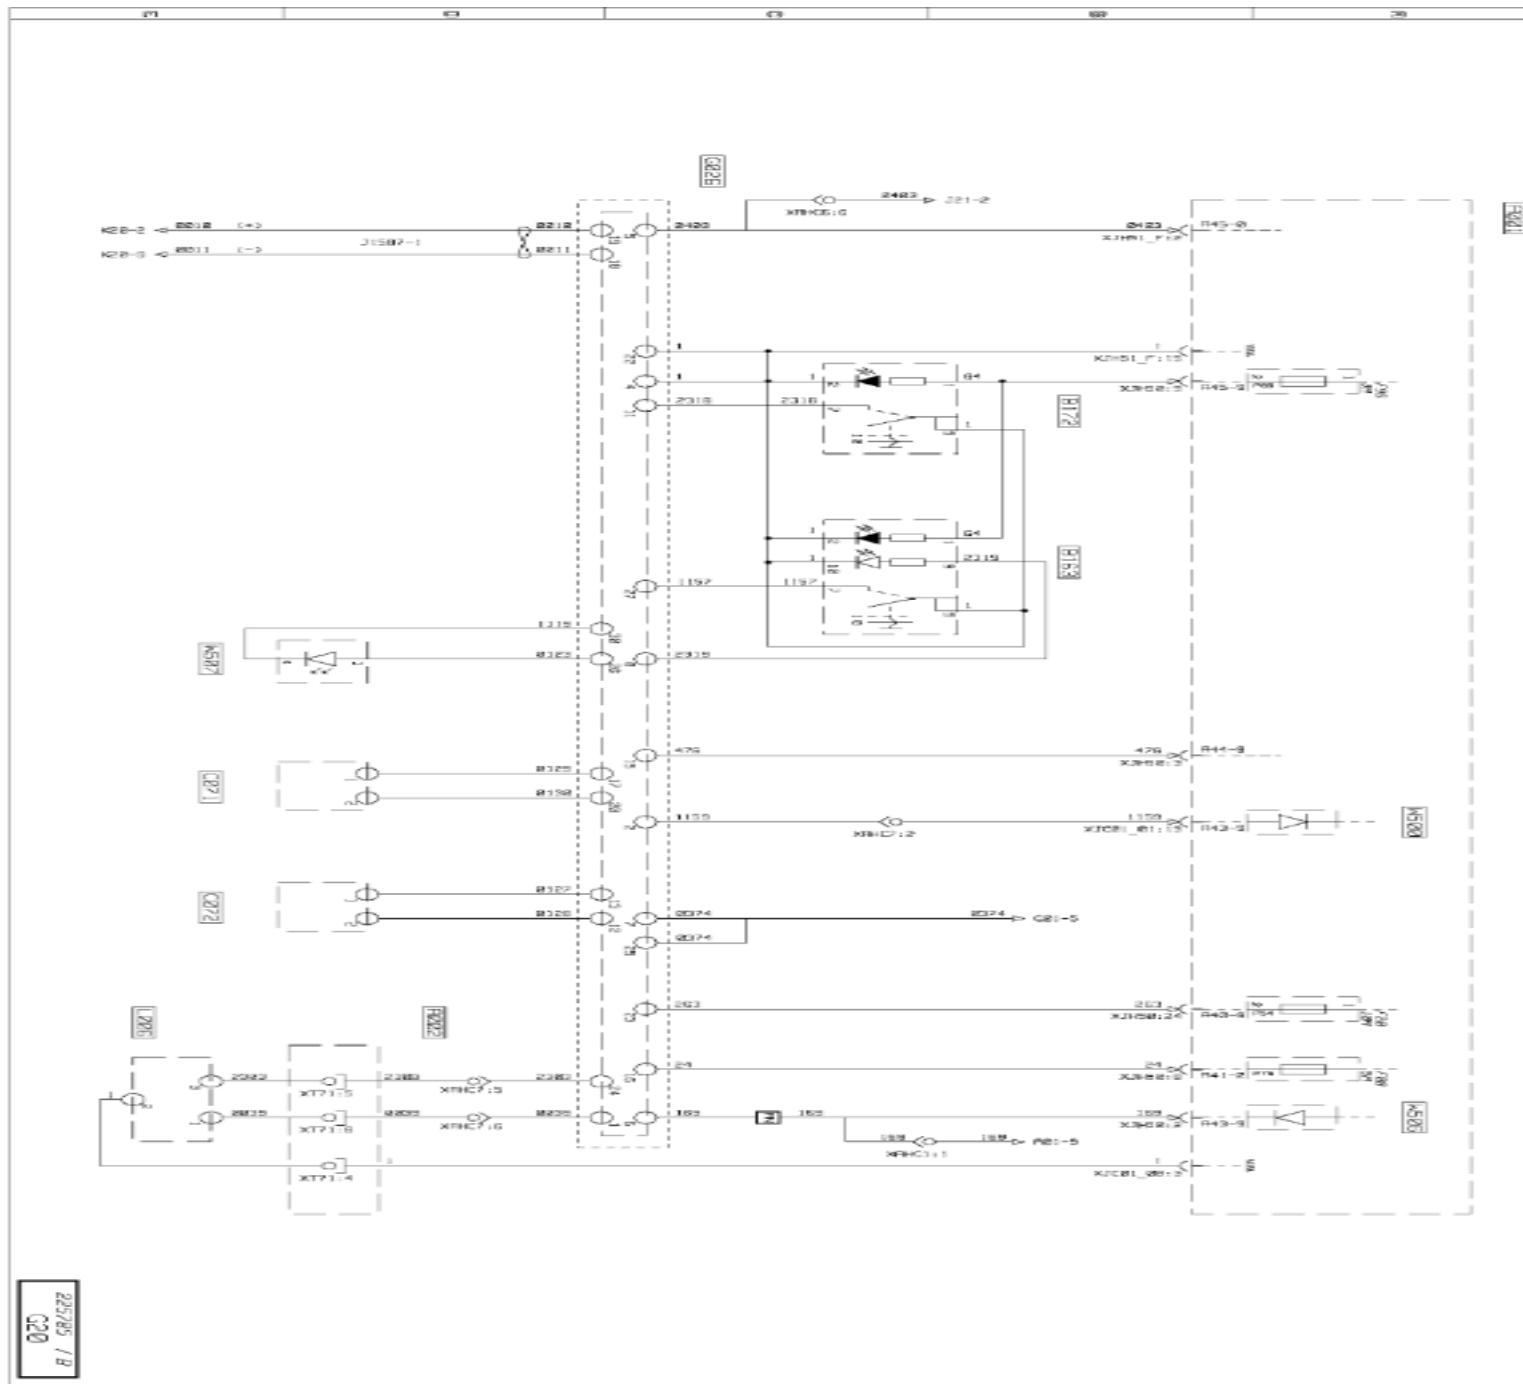

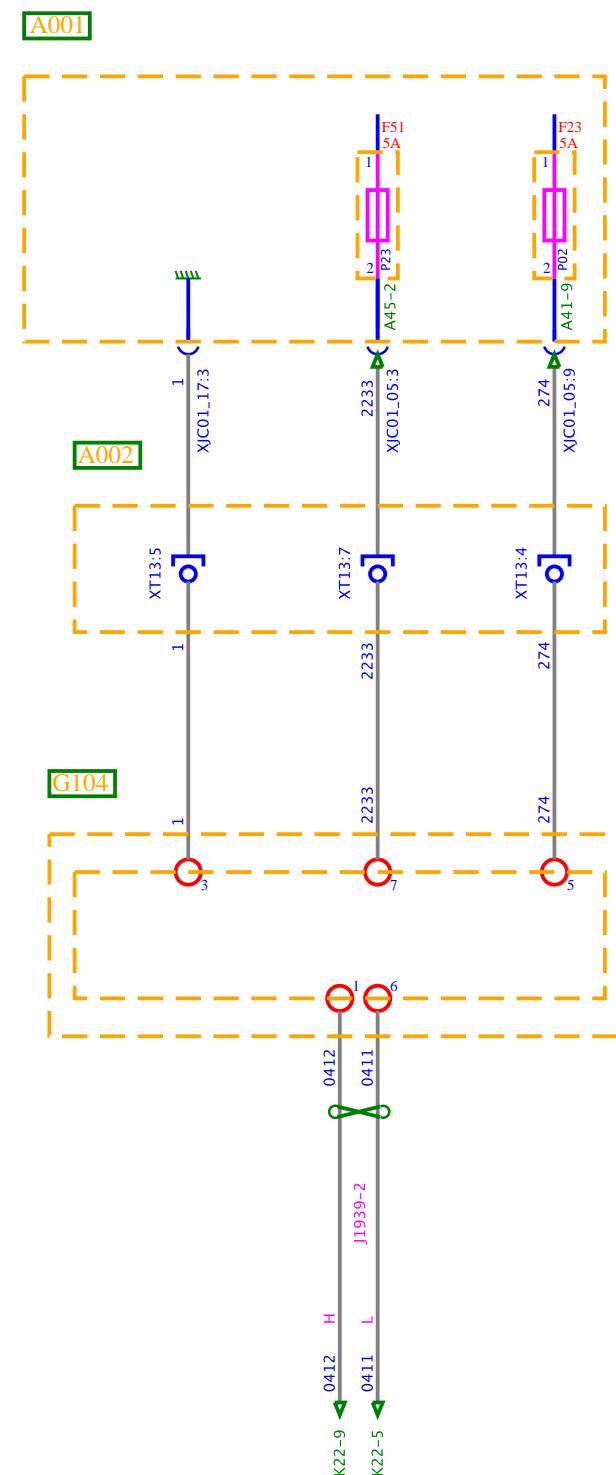


225785 /B
G60

Checking tyre pressures


Key to appliances

| Code | Function | Location |
|------|---------------------------------|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| G104 | Tyre pressures monitoring ECU | B7d |

Checking tyre pressures

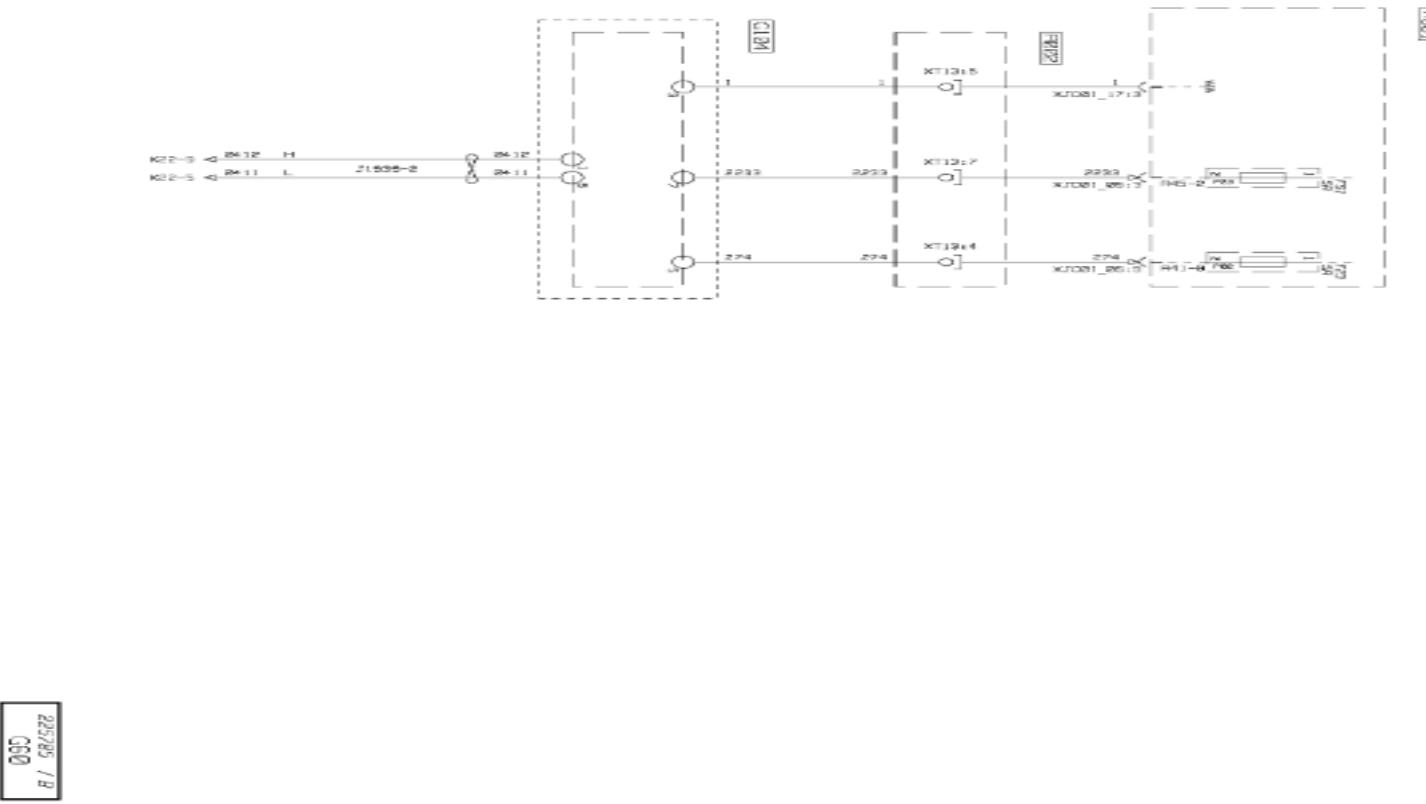

060
22573C
R / B

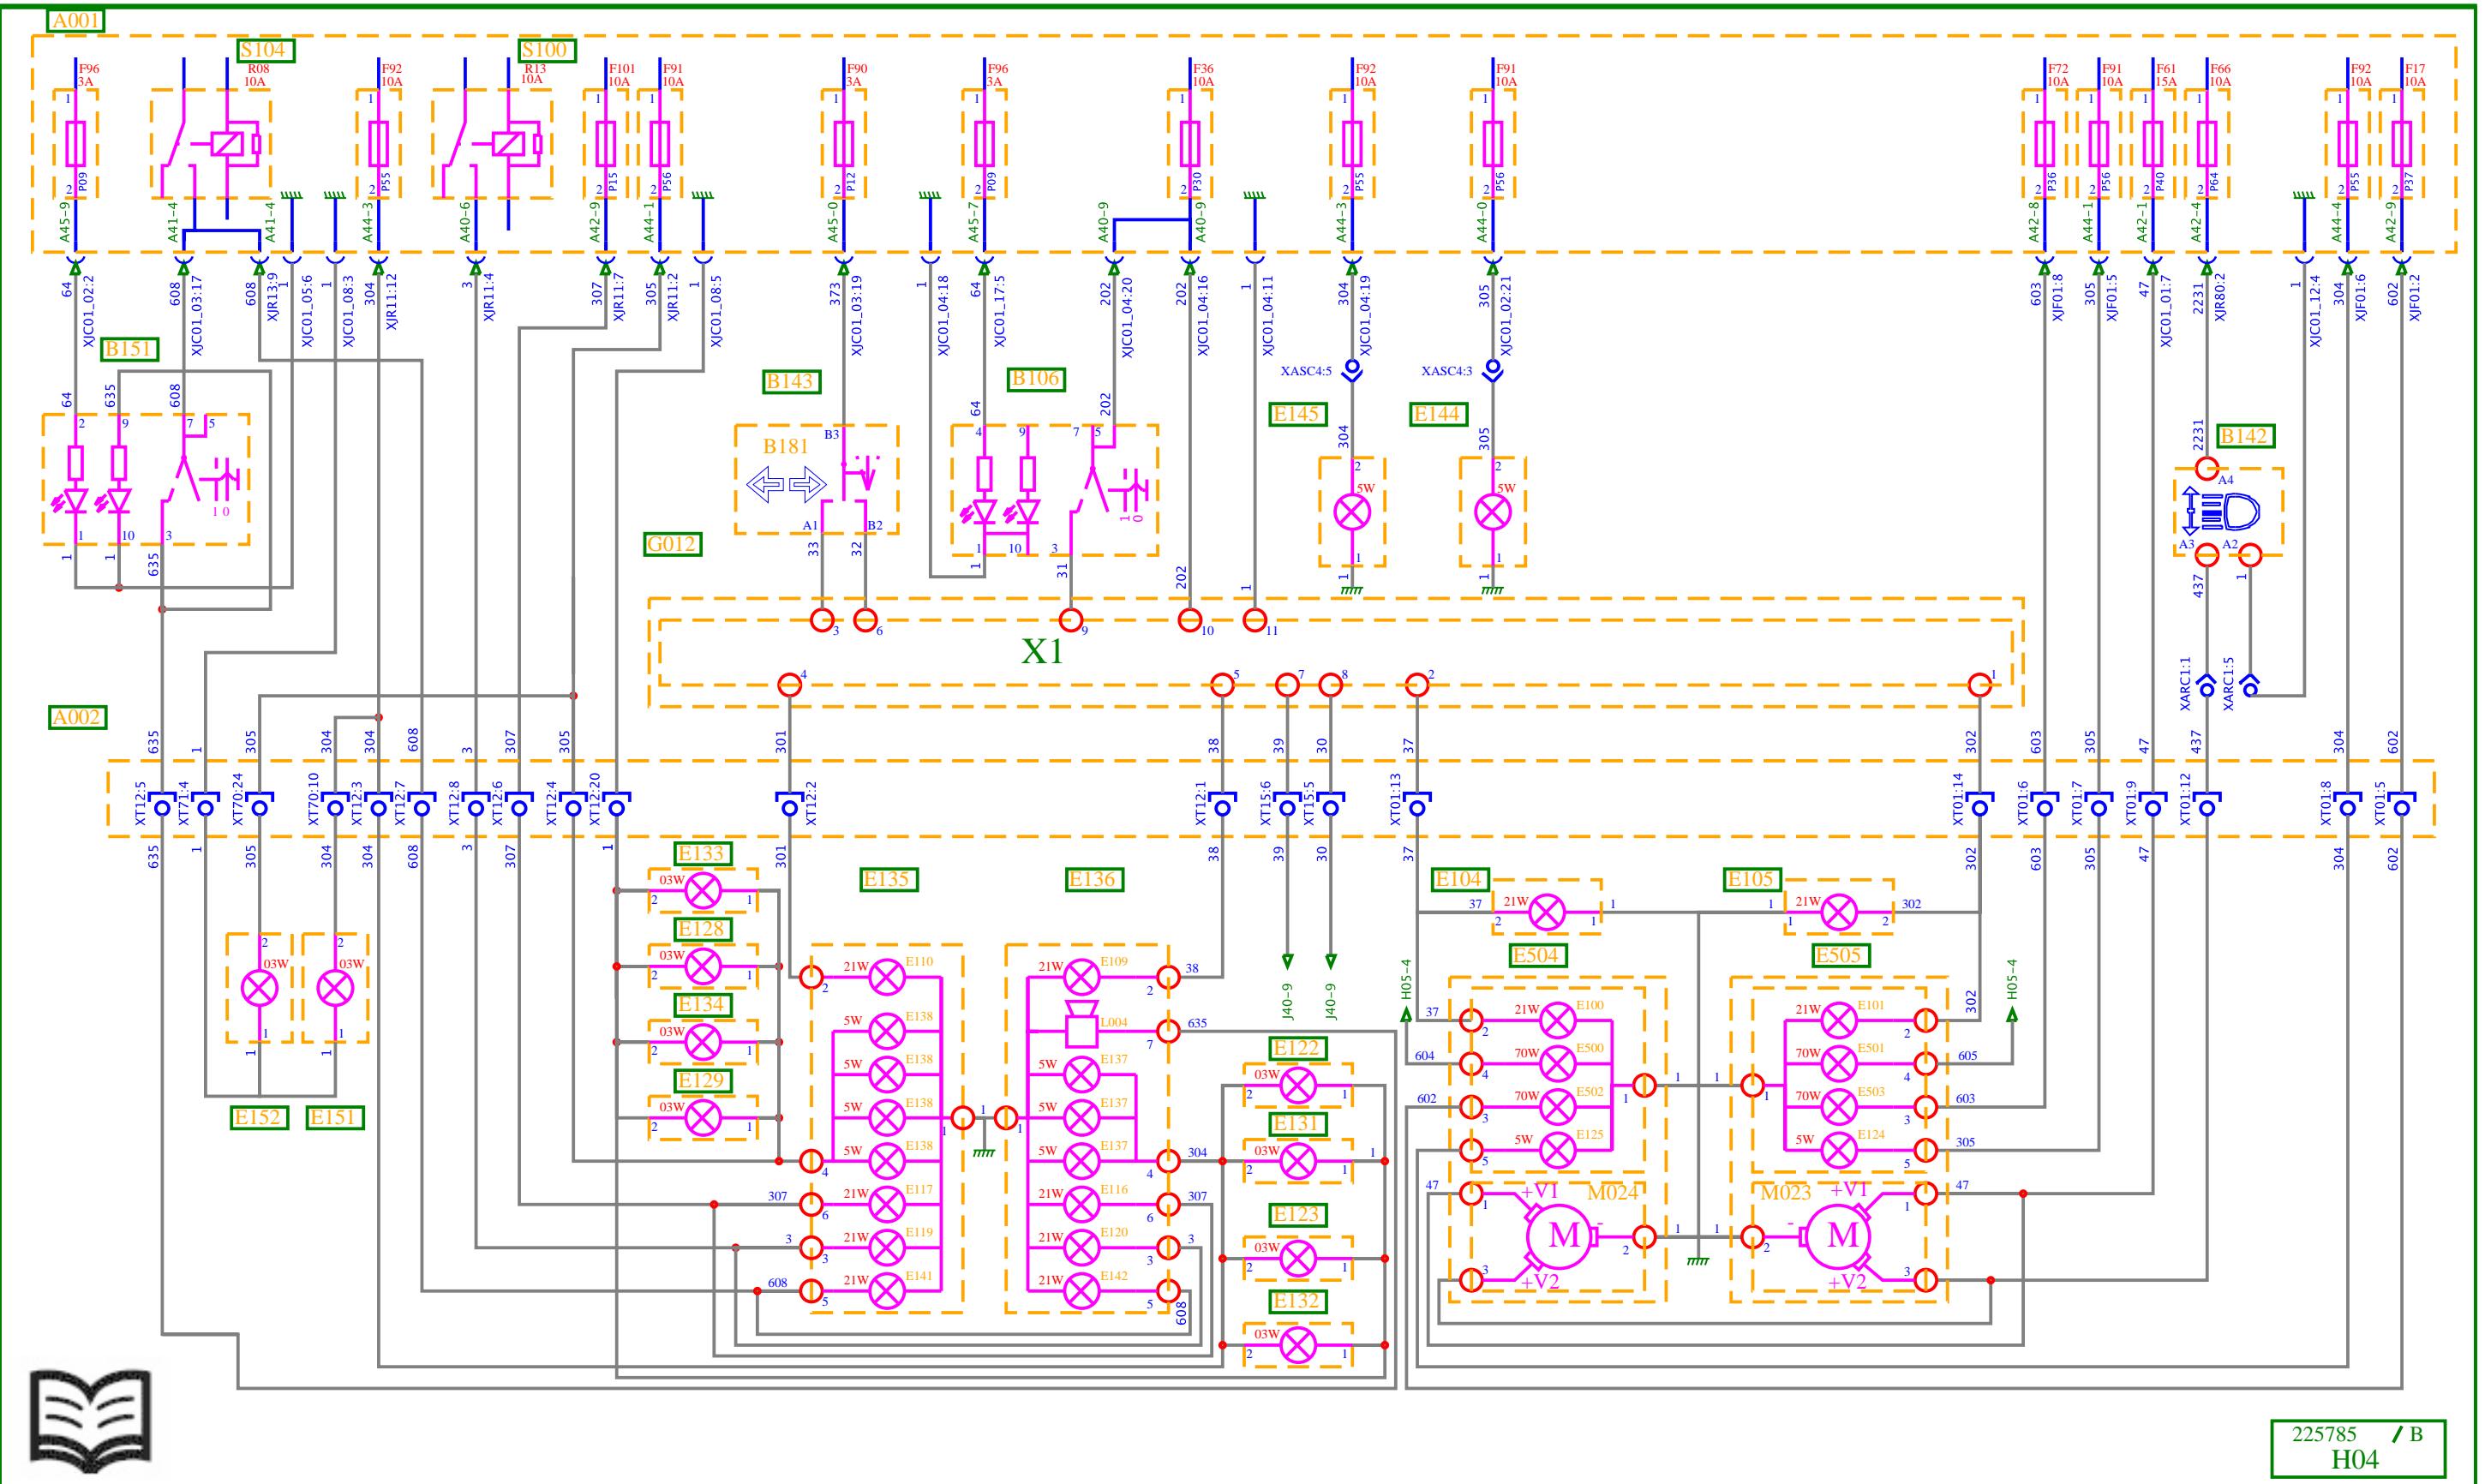

225785 / B
H04


Lighting and signalling management (1/3)


Key to appliances

| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B106 | Hazard lights control | C2b |
| B142 | Headlamps ride corrector control | C2b |
| B143 | Steering wheel fingertip controls N° 1 | C2b |
| B151 | Reversing buzzer inhibition control | C2b |
| B181 | Direction indicator control | C2b |
| E100 | RH front direction change indicator lights | A1d |
| E101 | LH front direction change indicator lights | C1d |
| E104 | Roof RH front direction change indicator lights | A2a |
| E105 | Roof LH front direction change indicator lights | C2a |
| E109 | RH rear direction change indicator lights | A9d |
| E110 | LH rear direction change indicator lights | C9d |
| E116 | RH rear fog light | A9d |
| E117 | LH rear fog light | C9d |
| E119 | LH stop lights | C9d |
| E120 | RH stop lights | A9d |
| E122 | RH clearance light N° 1 | A2d |
| E123 | RH clearance light N° 2 | A4d |
| E124 | LH front side/parking lights | C1d |
| E125 | RH front side/parking lights | A1d |
| E128 | LH clearance lights N° 3 | C2d |
| E129 | LH clearance lights N° 4 | C4d |
| E131 | RH clearance lights N° 3 | A6d |
| E132 | RH clearance lights N° 4 | A8d |
| E133 | LH clearance lights N° 1 | C6d |
| E134 | LH clearance lights N° 2 | C8d |
| E135 | LH tail lights unit | C9d |
| E136 | RH tail lights unit | A9d |
| E137 | RH rear side/parking lights | A9d |
| E138 | LH rear side/parking lights | C9d |

| | | |
|------|---|-----|
| E141 | LH reversing lights | C9d |
| E142 | RH reversing lights | A9d |
| E144 | Roof LH side/parking lights | C2a |
| E145 | Roof LH side/parking lights | A2a |
| E151 | Right-hand side marker lamp N° 5 | A8d |
| E152 | Left-hand side marker lamp N° 5 | A8d |
| E500 | RH dipped beam headlight | A1d |
| E501 | LH dipped beam headlight | C1d |
| E502 | RH main beam headlight | A1d |
| E503 | LH dipped beam headlight | C1d |
| E504 | RH headlamp insert | A1d |
| E505 | LH headlamp insert | C1d |
| G012 | Lighting and signalling management ECU | B2c |
| L004 | External horn | A9d |
| M023 | LH headlamp ride correction motor | C1d |
| M024 | RH headlamp ride correction motor | A1d |
| S100 | Stop lights power supply relay | B2c |
| S104 | Reversing lights power supply relay | B2c |

Lighting and signalling management (1/3)

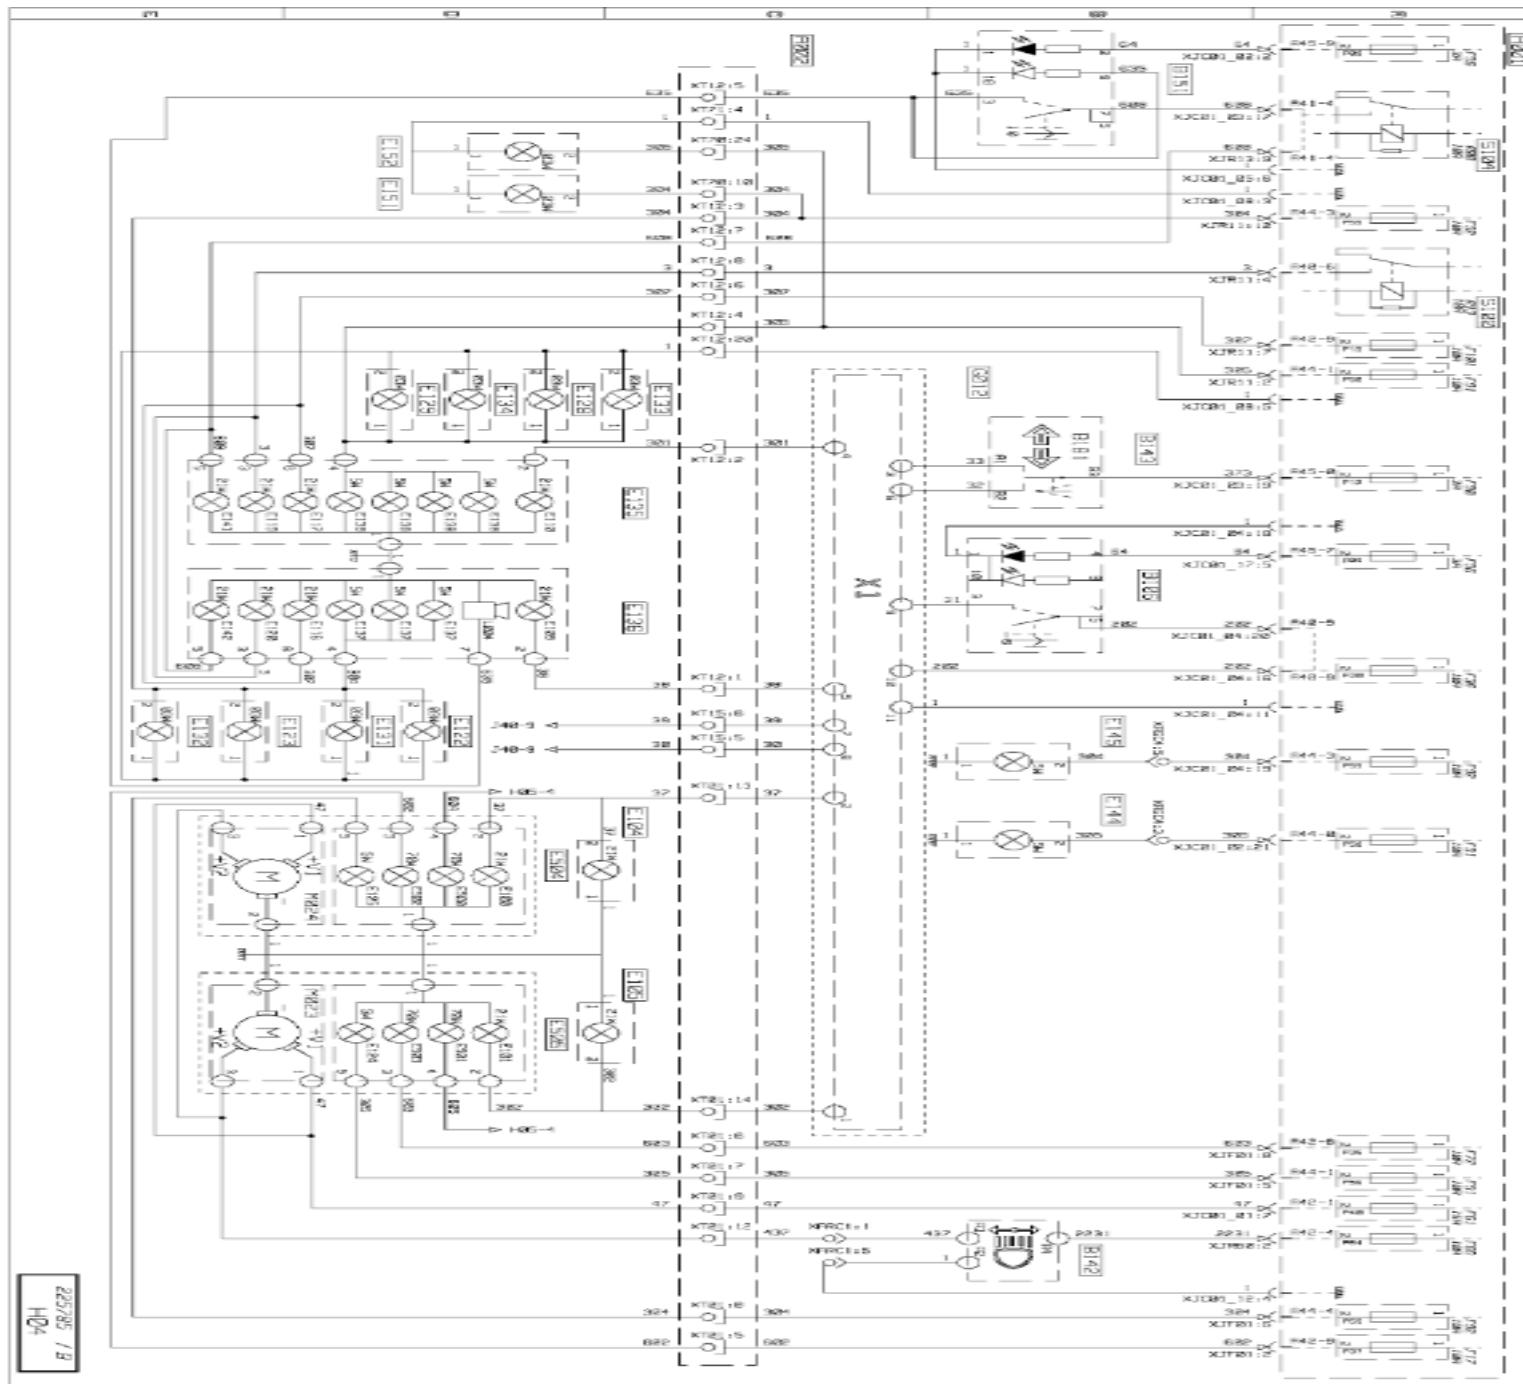

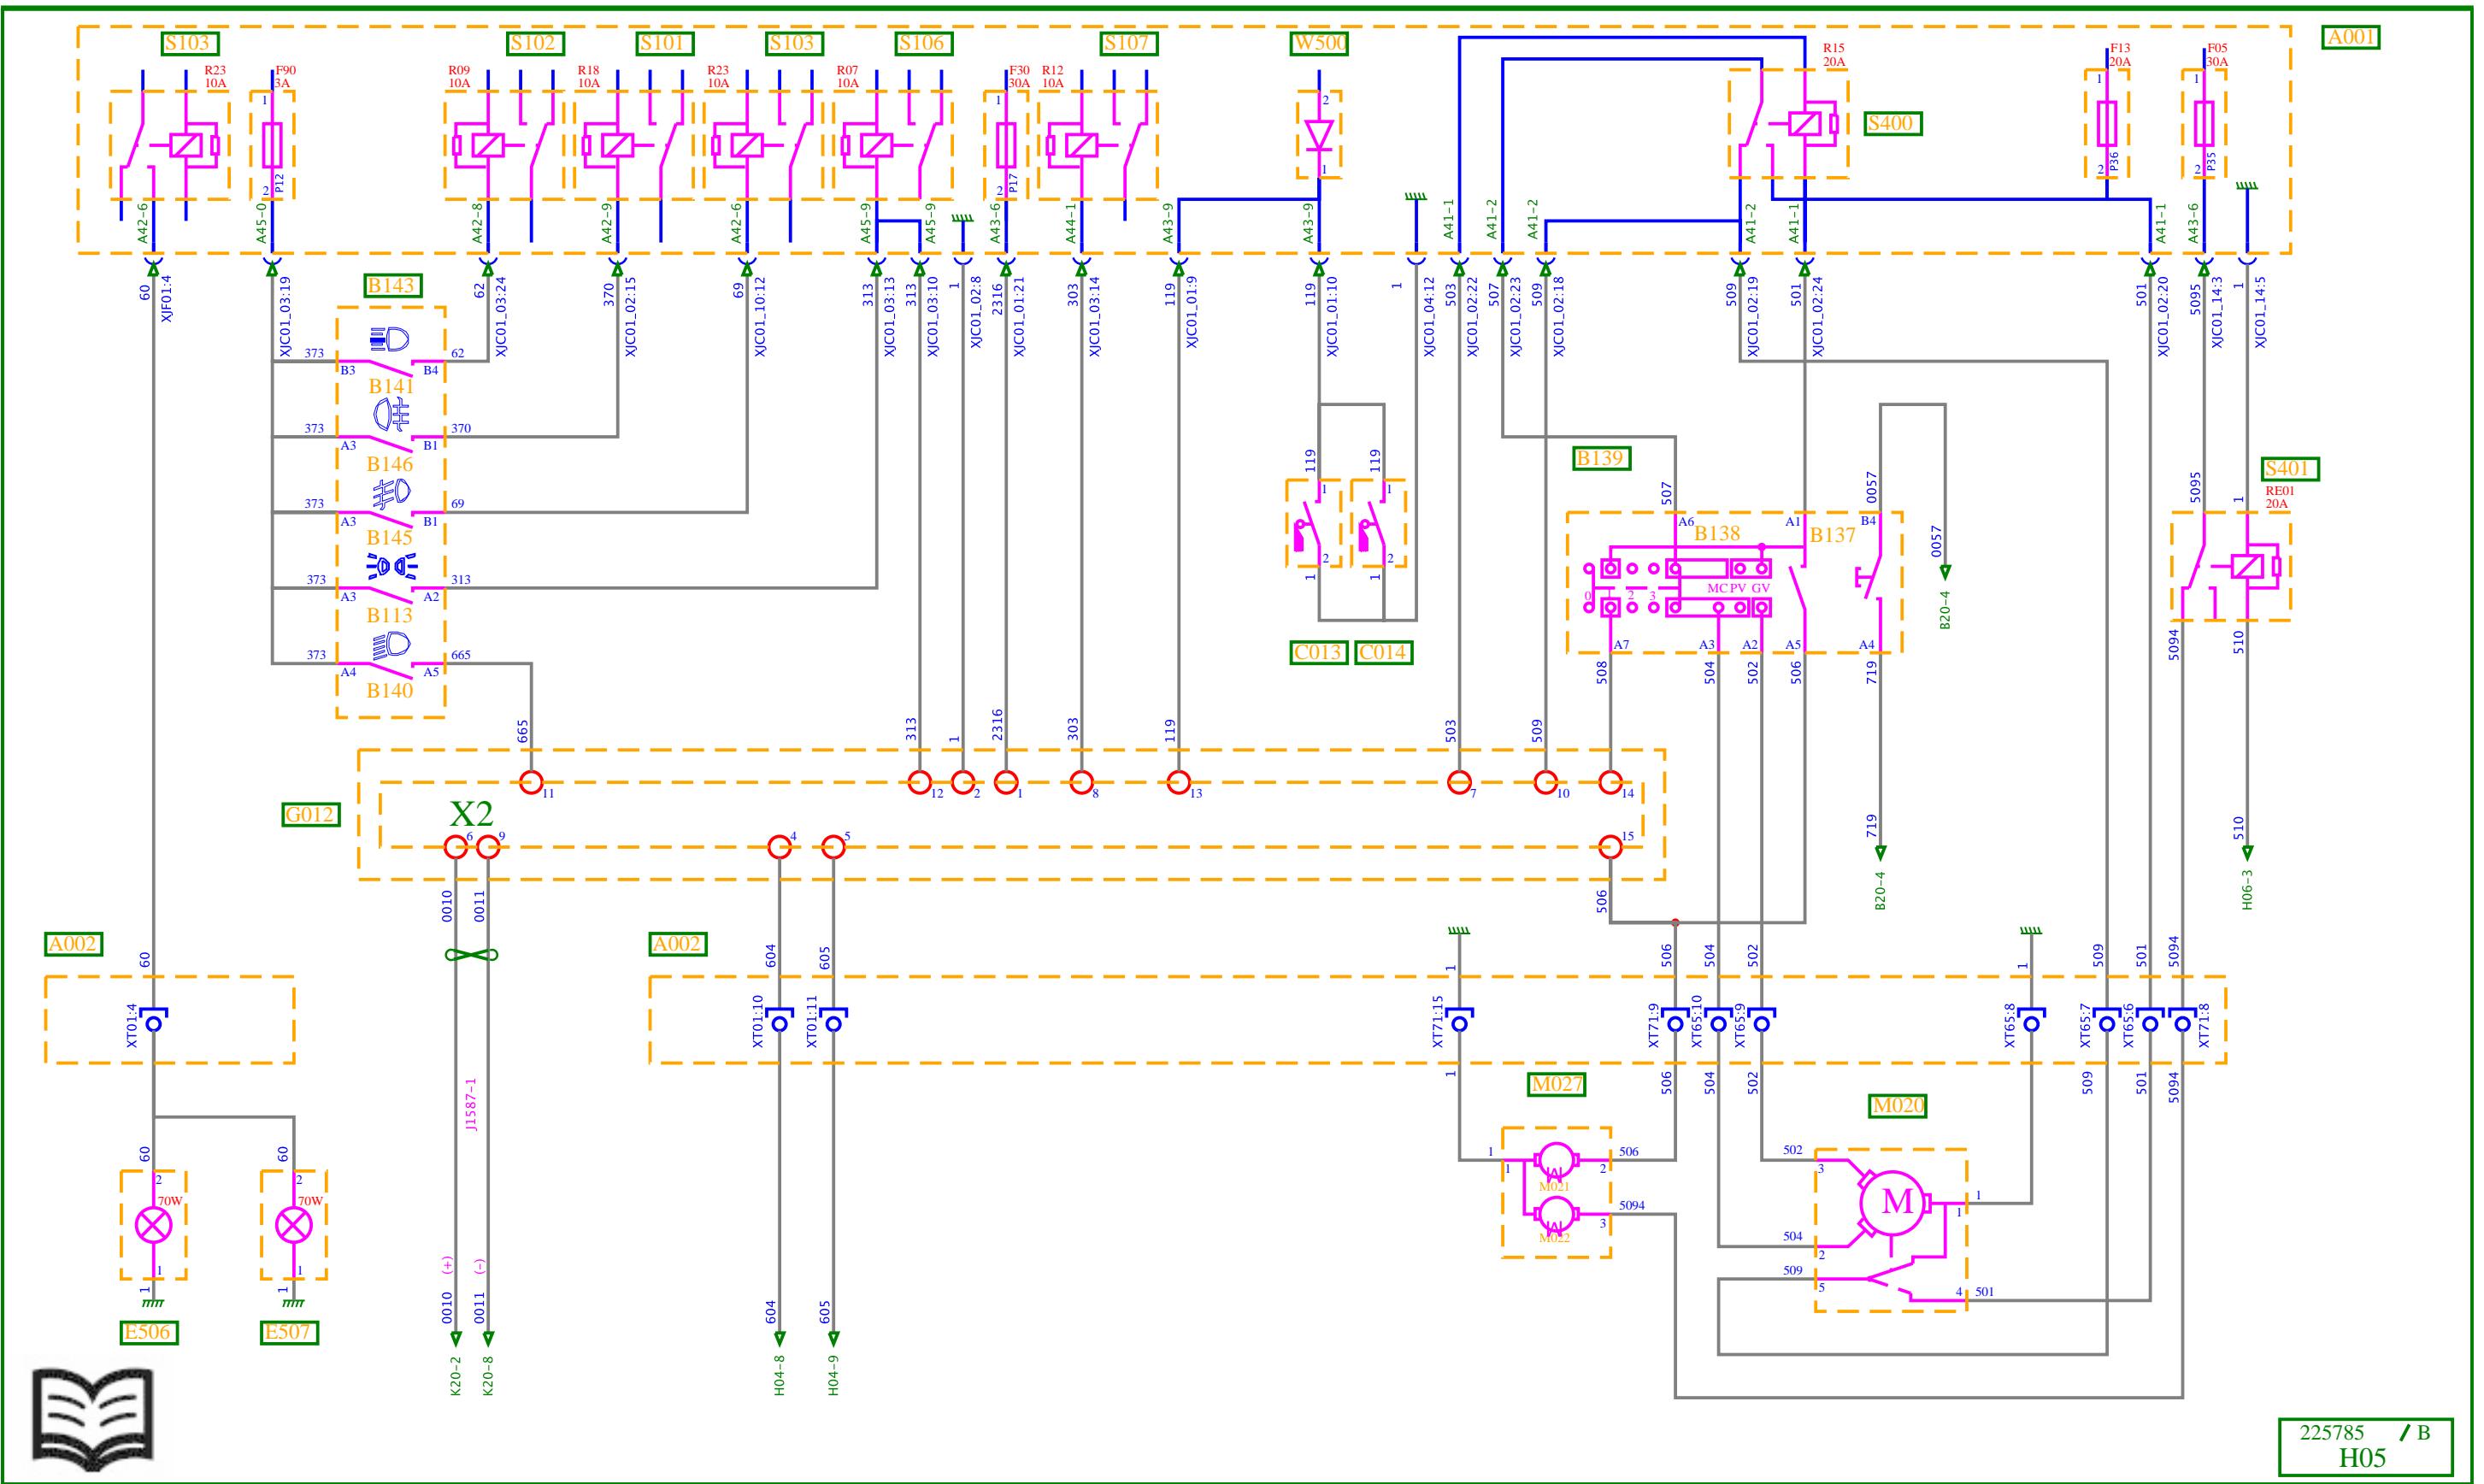



Lighting and signalling management (2/3)

Key to appliances

| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B113 | Side/parking lights control | C2b |
| B137 | Windscreen wash control | C2b |
| B138 | Windscreen wipers control | C2b |
| B139 | Windscreen / headlamps wash/wipe control | C2b |
| B140 | Dipped beam headlights control | C2b |
| B141 | Main beam headlights control | C2b |
| B143 | Steering wheel fingertip controls N° 1 | C2b |
| B145 | Fog driving lights control | C2b |
| B146 | Fog lights control | C2b |
| C013 | Driver's door open position information sensor | C2c |
| C014 | Passenger's front door open position information sensor | A2c |
| E506 | LH fog driving light | C1d |
| E507 | RH fog driving light | A1d |
| G012 | Lighting and signalling management ECU | B2c |
| M020 | Windscreen wipers drive motor | B1c |
| M021 | Windscreen wash pump motor | B1c |
| M022 | Headlamps wash pump motor | B1c |
| M027 | Windscreen wash motor / headlamps wash motor unit | C4c |
| S101 | Rear fog lights power supply relay | B2c |
| S102 | Main beam headlights power supply relay | B2c |
| S103 | Fog driving lights power supply relay | B2c |
| S106 | Switches night lighting power supply relay | B2c |
| S107 | RH and LH side/parking and marker lights power supply relay (trailer and bodybuilder) | B2c |
| S400 | Windscreen wipers motor time-delay relay | B2c |
| S401 | Headlamps wash pump motor power supply relay | B2c |
| W500 | Diode(s) | B2c |

Lighting and signalling management (2/3)

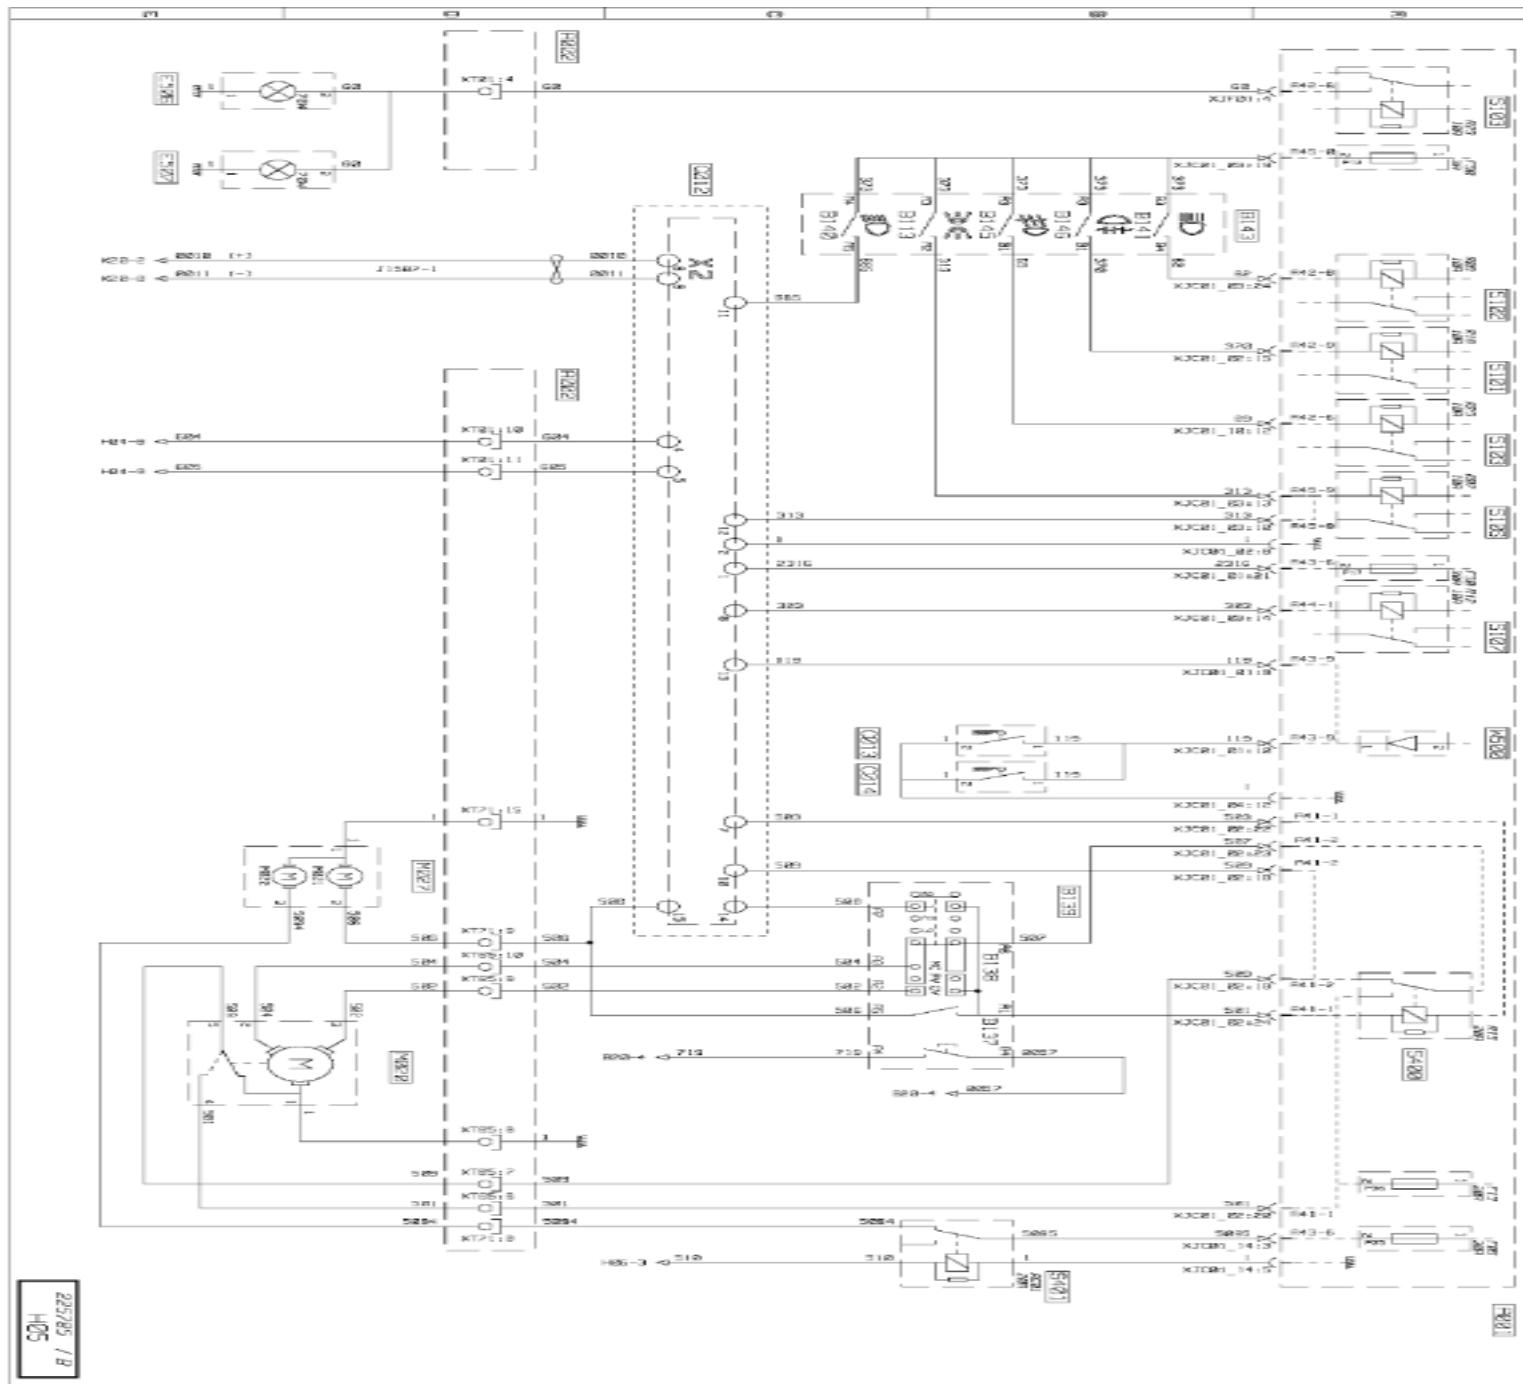

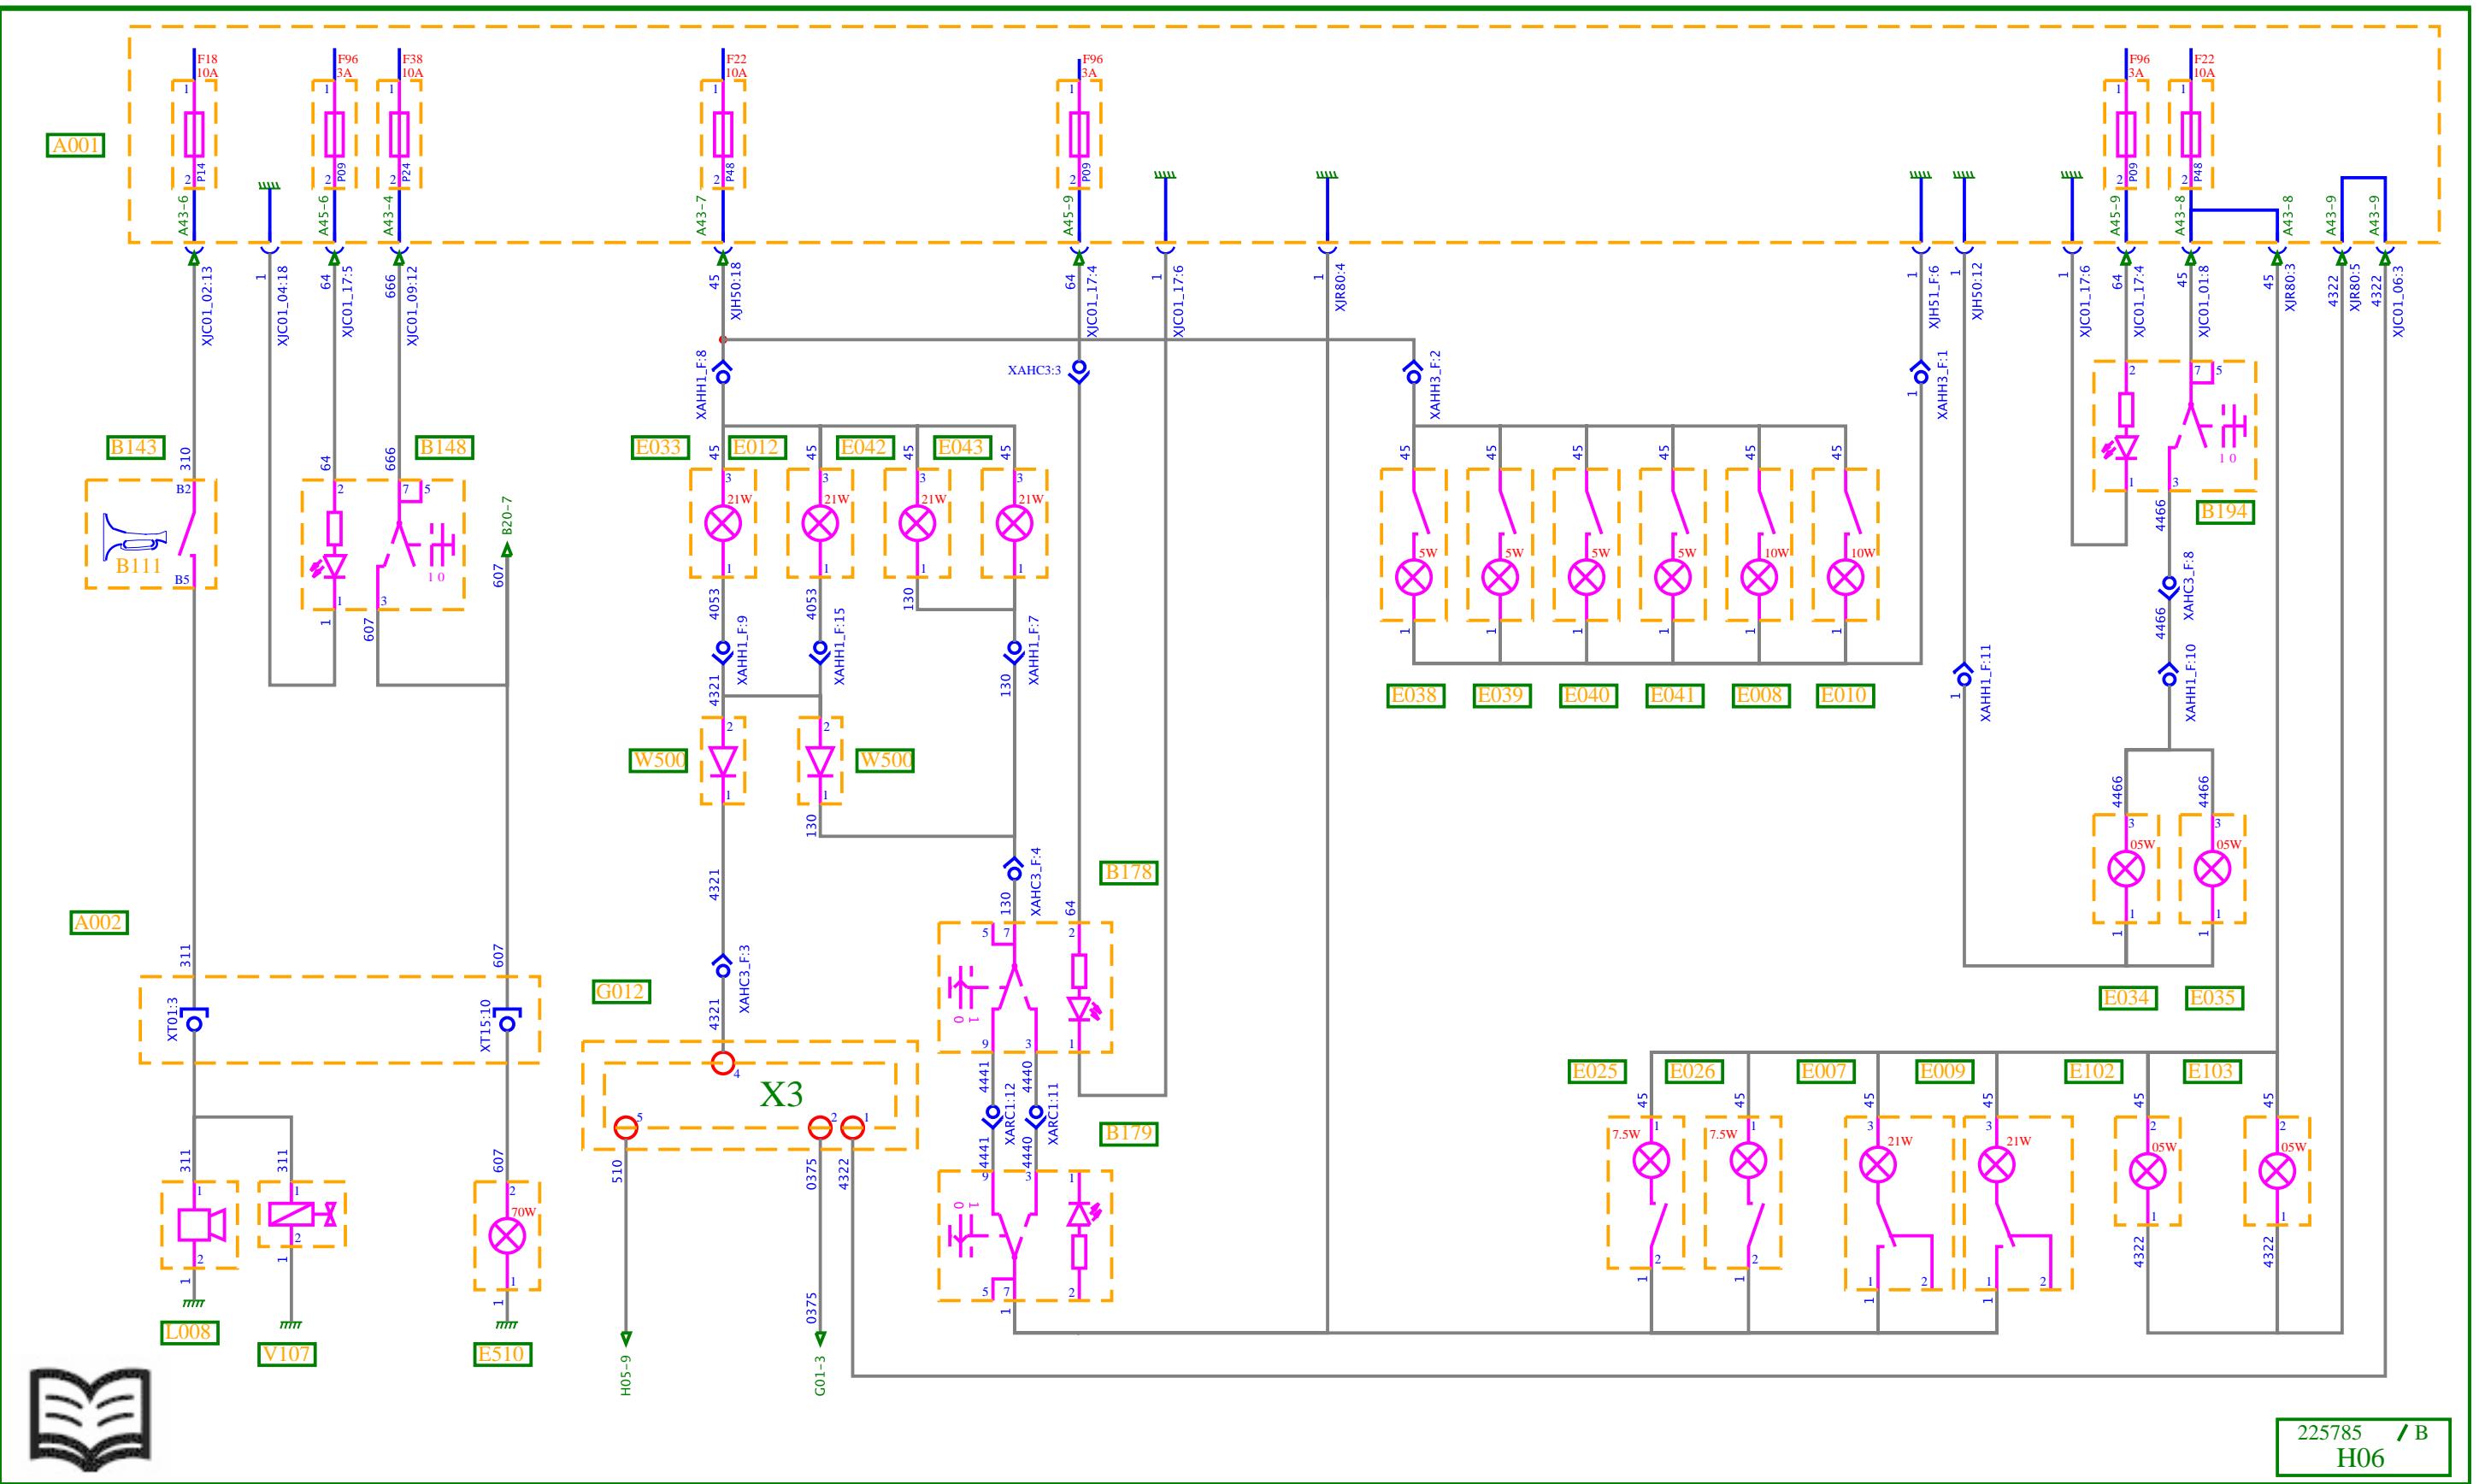



Lighting and signalling management (3/3)

Key to appliances

| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B111 | Horn control | C2b |
| B143 | Steering wheel fingertip controls N° 1 | C2b |
| B148 | Working lights control | C2b |
| B178 | Cab interior lighting control (on dashboard) | C2b |
| B179 | Cab interior lighting control (in cab) | B4b |
| B194 | Overhead lighting control (ambience) | C2b |
| E007 | Bunk lower RH overhead light | C4c |
| E008 | Driver's side single overhead light | C2a |
| E009 | Bunk lower LH overhead light | C4c |
| E010 | Front passenger's side single overhead light | A2a |
| E012 | RH upper overhead lighting (door) | A3a |
| E025 | Driver's reading spotlight | C2a |
| E026 | Front passenger's reading spotlight | A2a |
| E033 | LH upper overhead lighting (door) | C3a |
| E034 | LH overhead lighting (ambience) | C3a |
| E035 | RH overhead lighting (ambience) | A3a |
| E038 | Row 1 lighting | B2a |
| E039 | Row 2 lighting | C2a |
| E040 | Row 3 lighting | A2a |
| E041 | Row 4 lighting | A2a |
| E042 | Upper left-hand side overhead lamp lighting | C2a |
| E043 | Upper right-hand side overhead lamp lighting | A2a |
| E102 | Driver's side stepwell lighting | C2d |
| E103 | Front passenger's side stepwell lighting | A2d |
| E510 | Working spotlight | B4d |
| G012 | Lighting and signalling management ECU | B2c |
| L008 | Electric horn | C2d |
| V107 | Air horn | C2d |
| W500 | Diode(s) | B2c |

Lighting and signalling management (3/3)

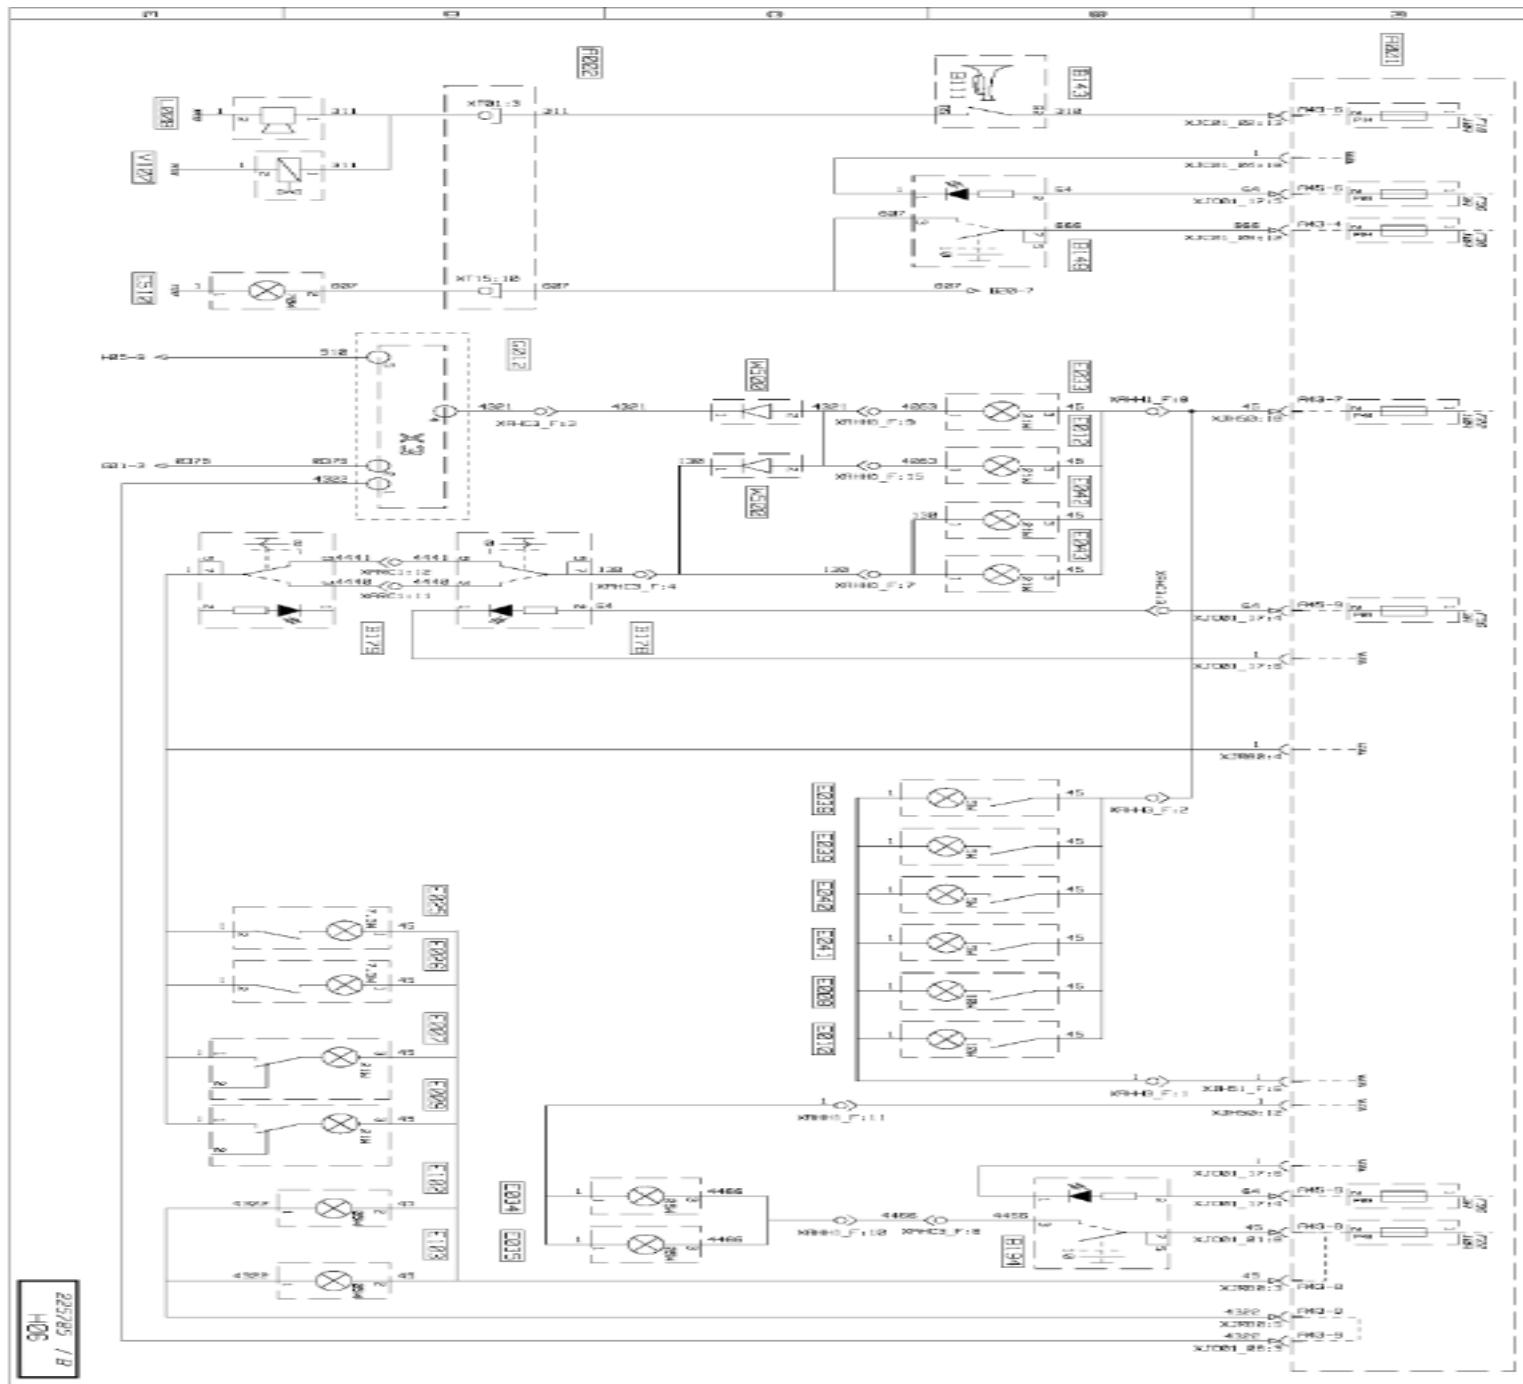

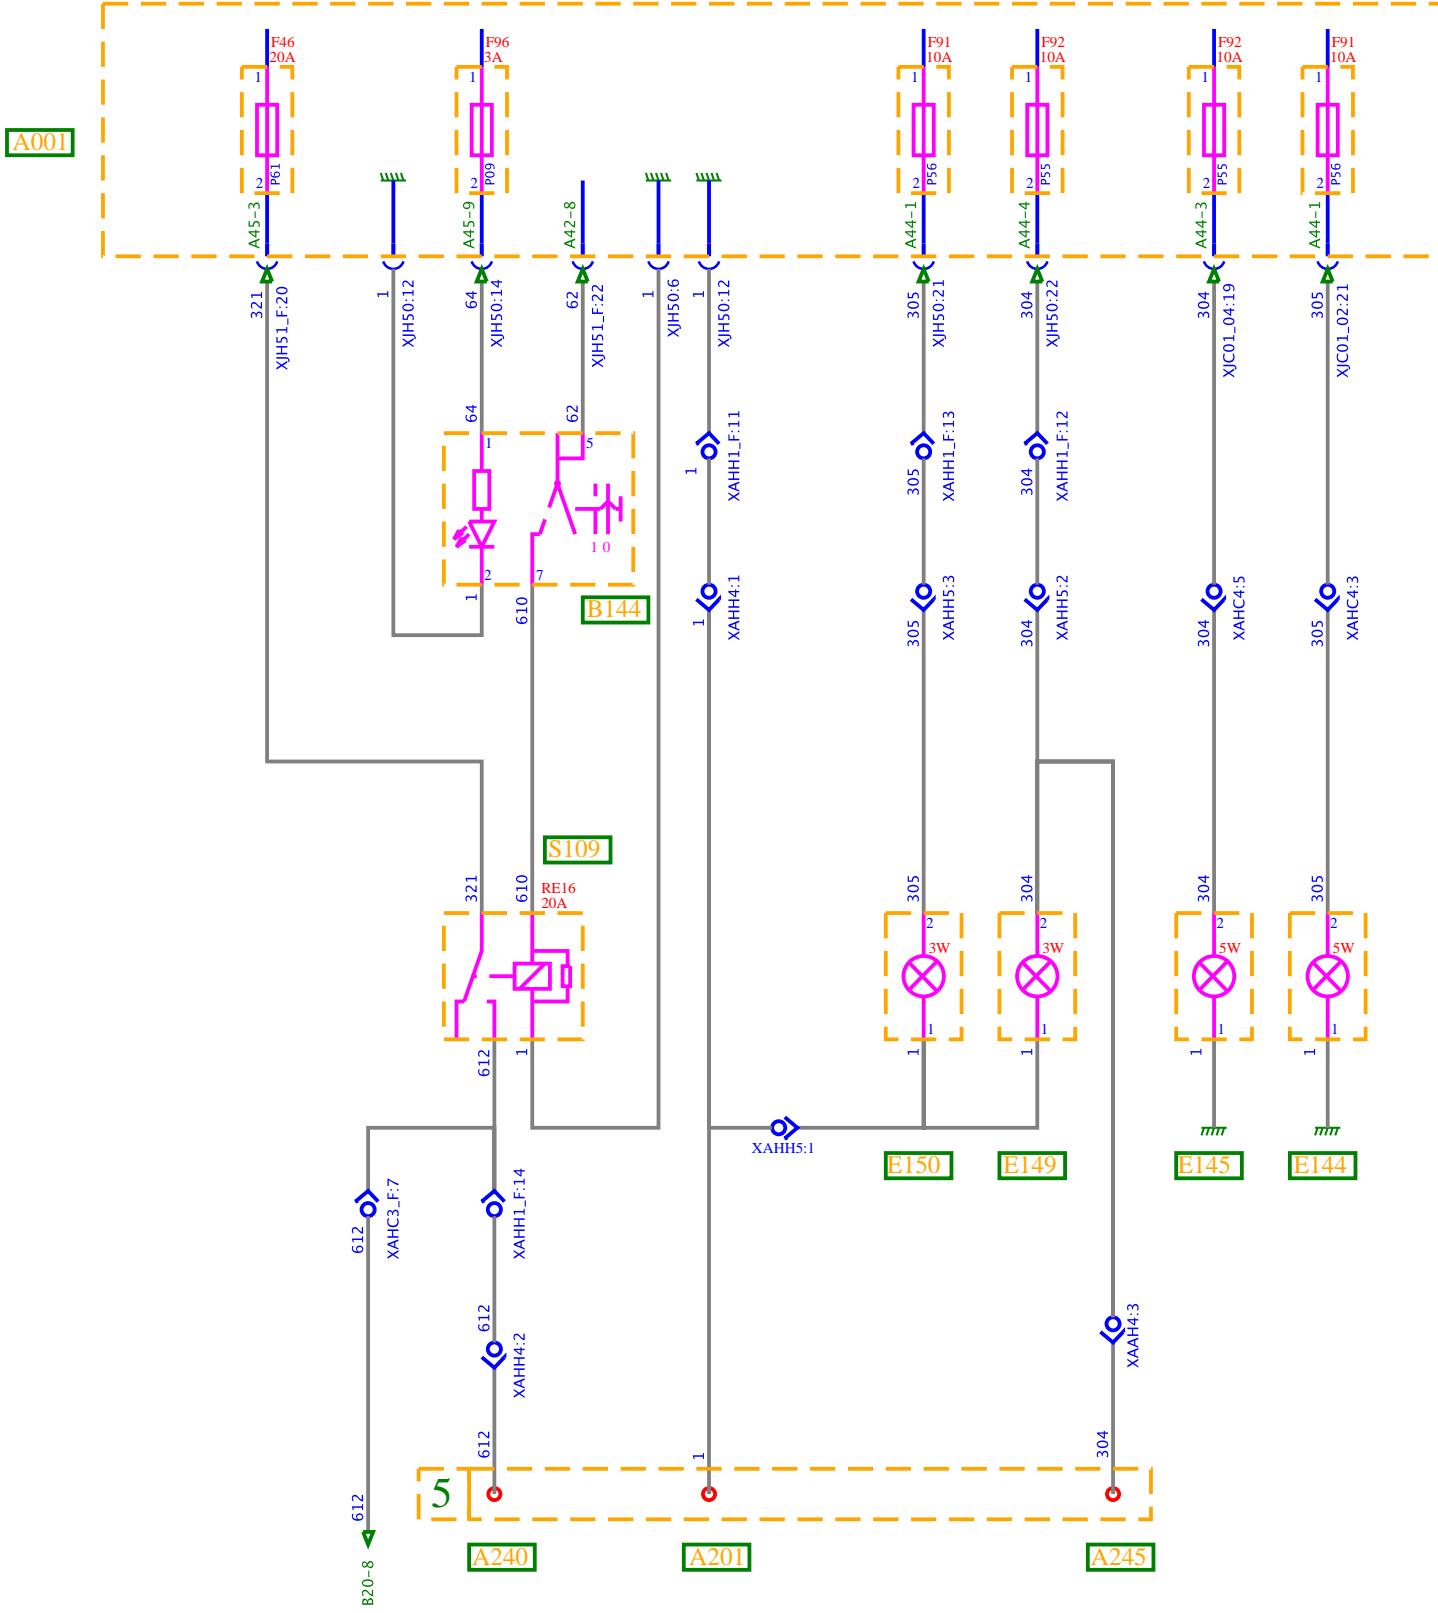


225785 / B
H30


Side, marker, identification and parking lights

Key to appliances

| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| A201 | Available power supply (vehicle earth) | B2a |
| A240 | Available power supply (lighting) | B2a |
| A245 | Available power supply (lighting and side/parking lights) | B2a |
| B144 | Long range driving lights control | C2b |
| E144 | Roof LH side/parking lights | C2a |
| E145 | Roof LH side/parking lights | A2a |
| E149 | Anti-glare strip-mounted LH marker lights | C2a |
| E150 | Anti-glare strip-mounted RH marker lights | A2a |
| S109 | Long range driving lights power supply relay | B2c |

Side, marker, identification and parking lights

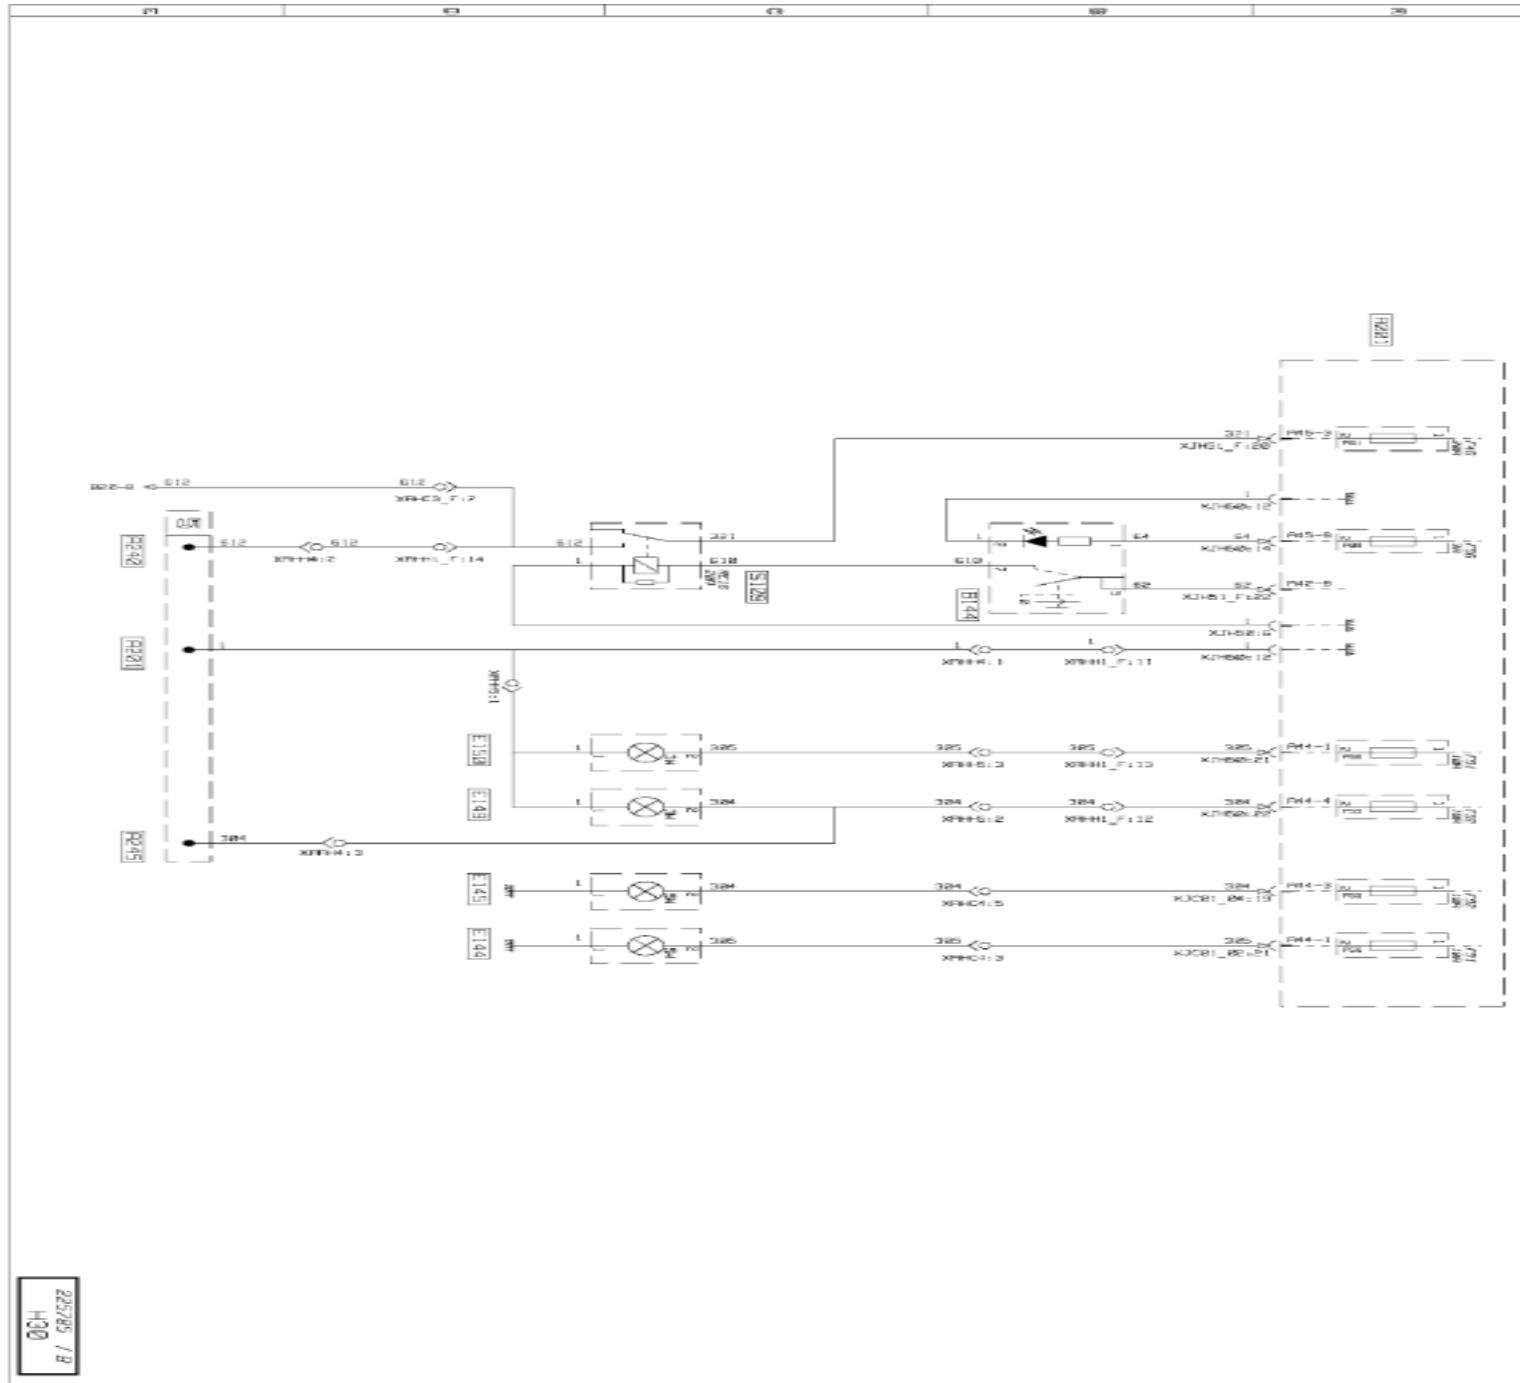

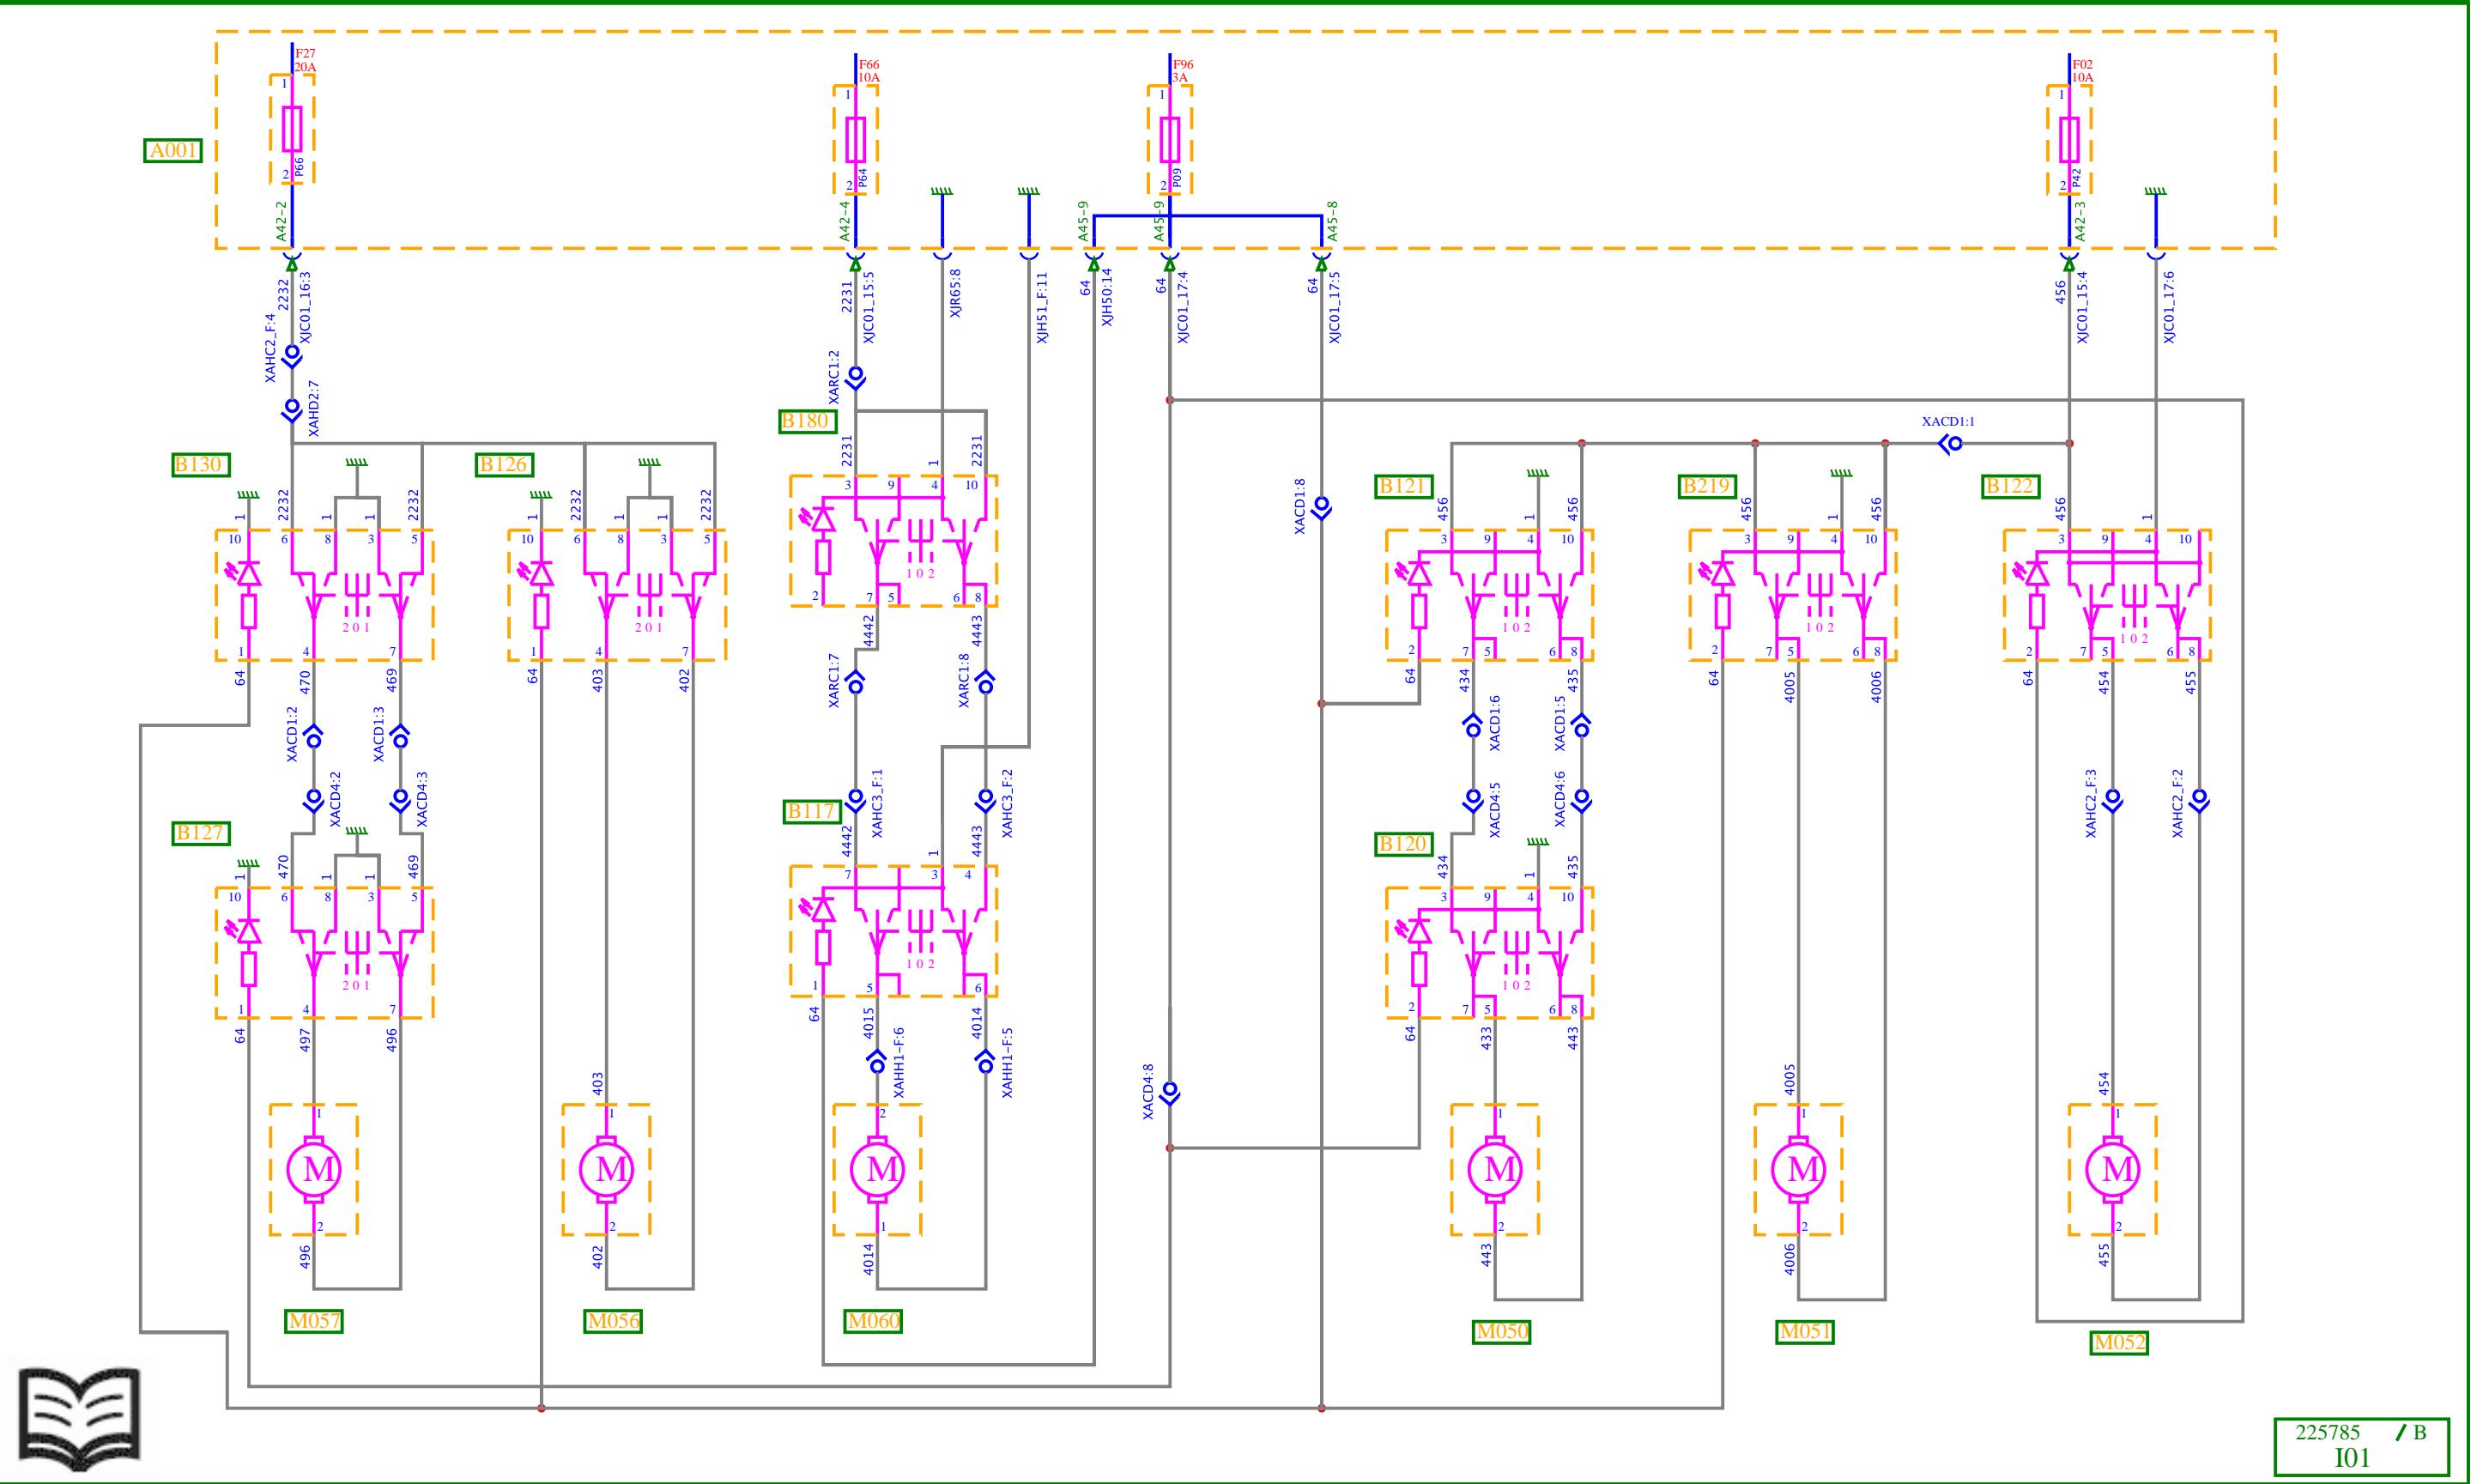



Electric window winder, sun-roof

Key to appliances

| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| B117 | Sun-roof opening / closing control (on dashboard) | B2b |
| B120 | Passenger's electric curtain motor control (passenger side) | A3c |
| B121 | Passenger's electric curtain motor control (driver side) | C3c |
| B122 | Front curtain motor control (driver side) | C3c |
| B126 | Driver's window winder motor control (driver side) | C2b |
| B127 | Front passenger window winder motor control (front passenger side) | A2b |
| B130 | Front passenger window winder motor control (driver side) | C2b |
| B180 | Sun-roof opening / closing control (on cab rear control console) | B4b |
| B219 | Driver's side electric curtain motor control | C3c |
| M050 | Front passenger's sun visor motor | A3a |
| M051 | Driver's sun visor motor | C3a |
| M052 | Front sun visor motor | C3a |
| M056 | Driver's door window winder motor | C3c |
| M057 | Front passenger's door window winder motor | A3c |
| M060 | Electric roof air vent motor | B3a |

Electric window winder, sun-roof

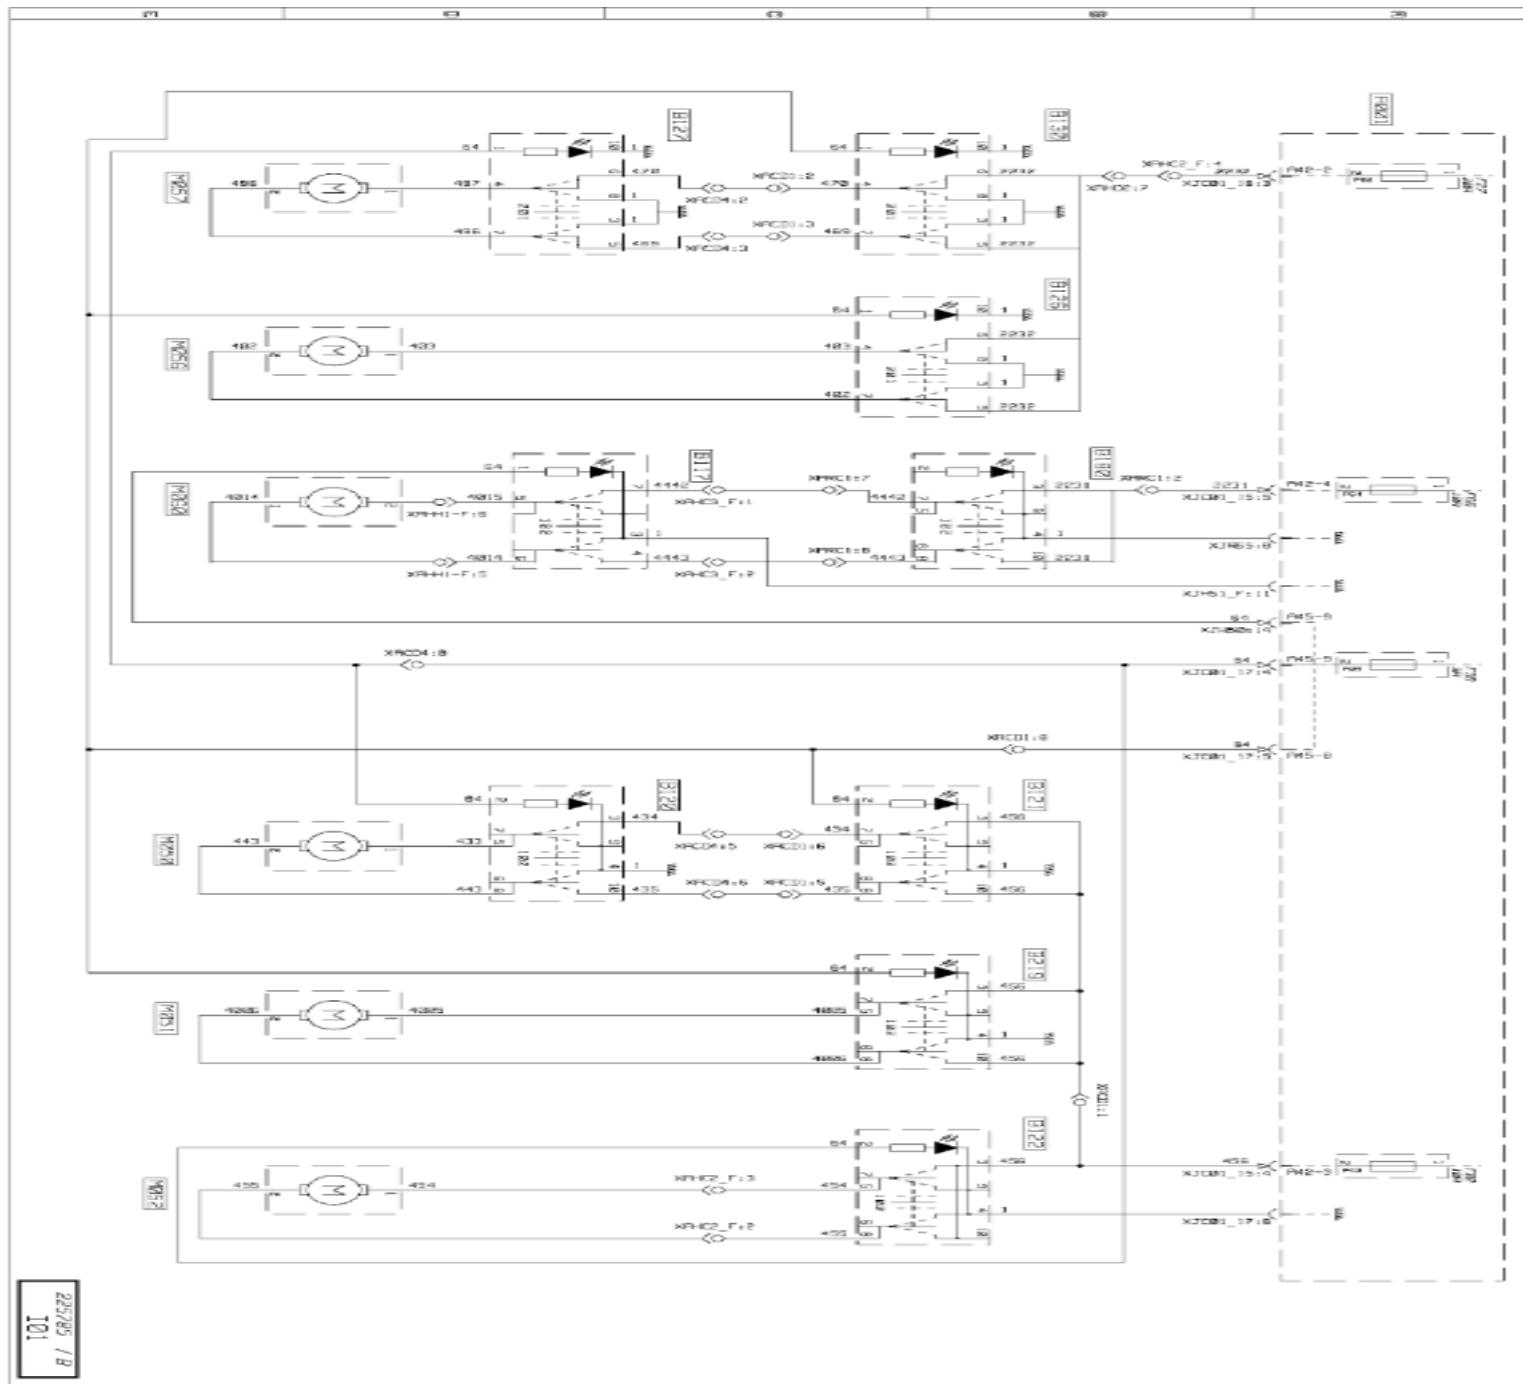

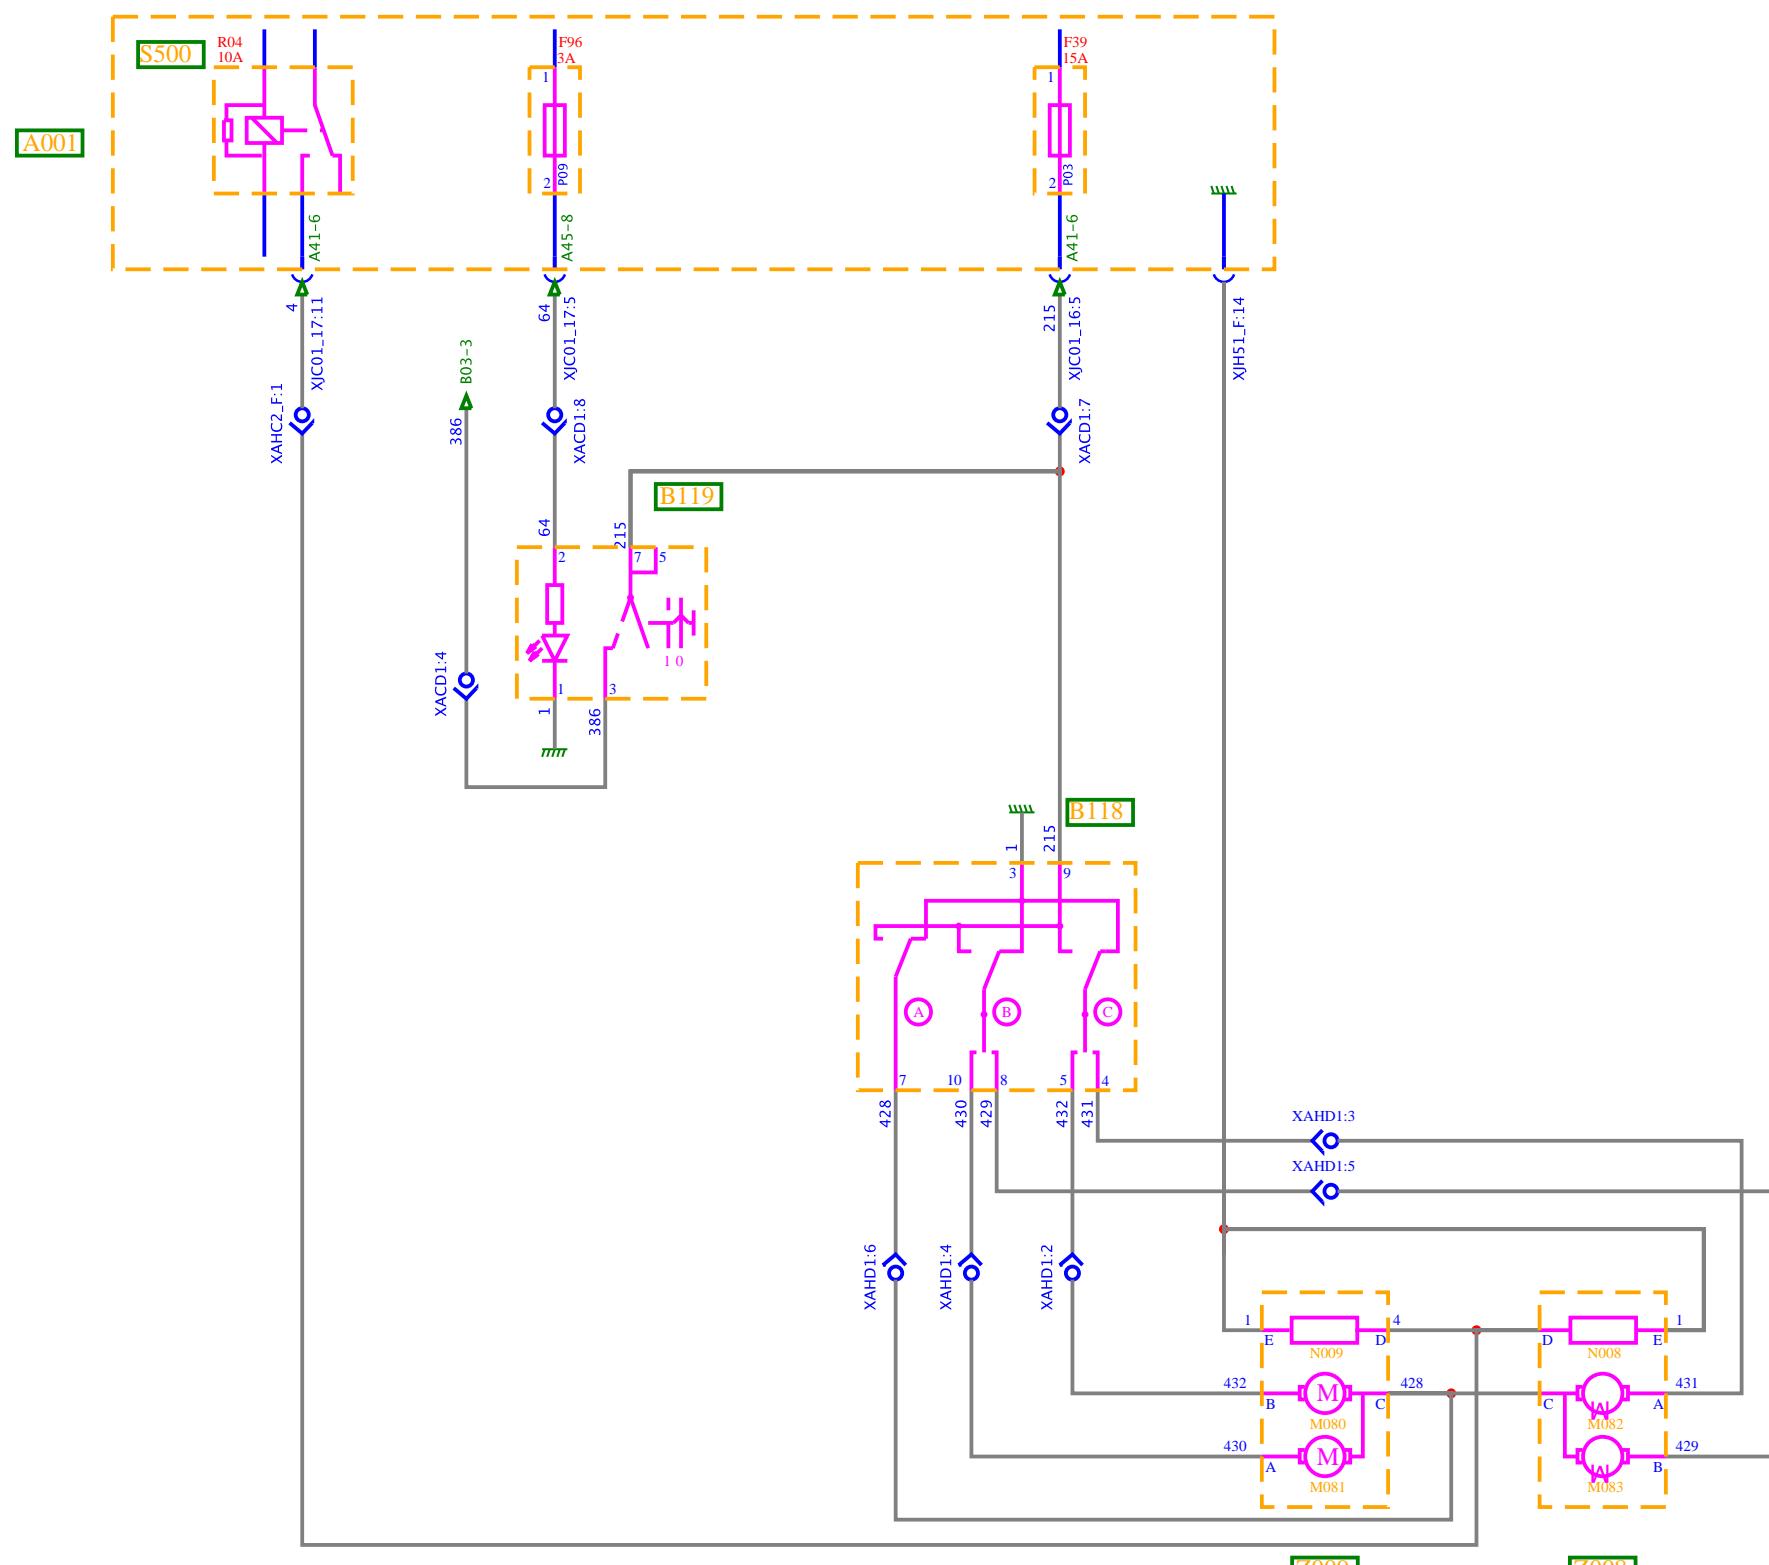


225785 / B
I02

Swivelling defrosting rearview mirrors


Key to appliances

| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| B118 | Swivelling rearview mirrors and alarm siren adjustment control | C2b |
| B119 | Rearview mirrors and windscreen defrosting control | C2b |
| M080 | RH rearview mirror horizontal swivelling motor | A2a |
| M081 | RH rearview mirror vertical swivelling motor | A2a |
| M082 | LH rearview mirror horizontal swivelling motor | C2a |
| M083 | LH rearview mirror vertical swivelling motor | C2a |
| N008 | LH defrosting rearview mirror resistor | C2a |
| N009 | RH defrosting rearview mirror resistor | A2a |
| S500 | Heated and swivelling rearview mirror power supply relay | B2c |
| Z008 | Driver's swivelling defrosting rearview mirror | C2a |
| Z009 | Passenger's swivelling defrosting rearview mirror | A2a |

Swivelling defrosting rearview mirrors

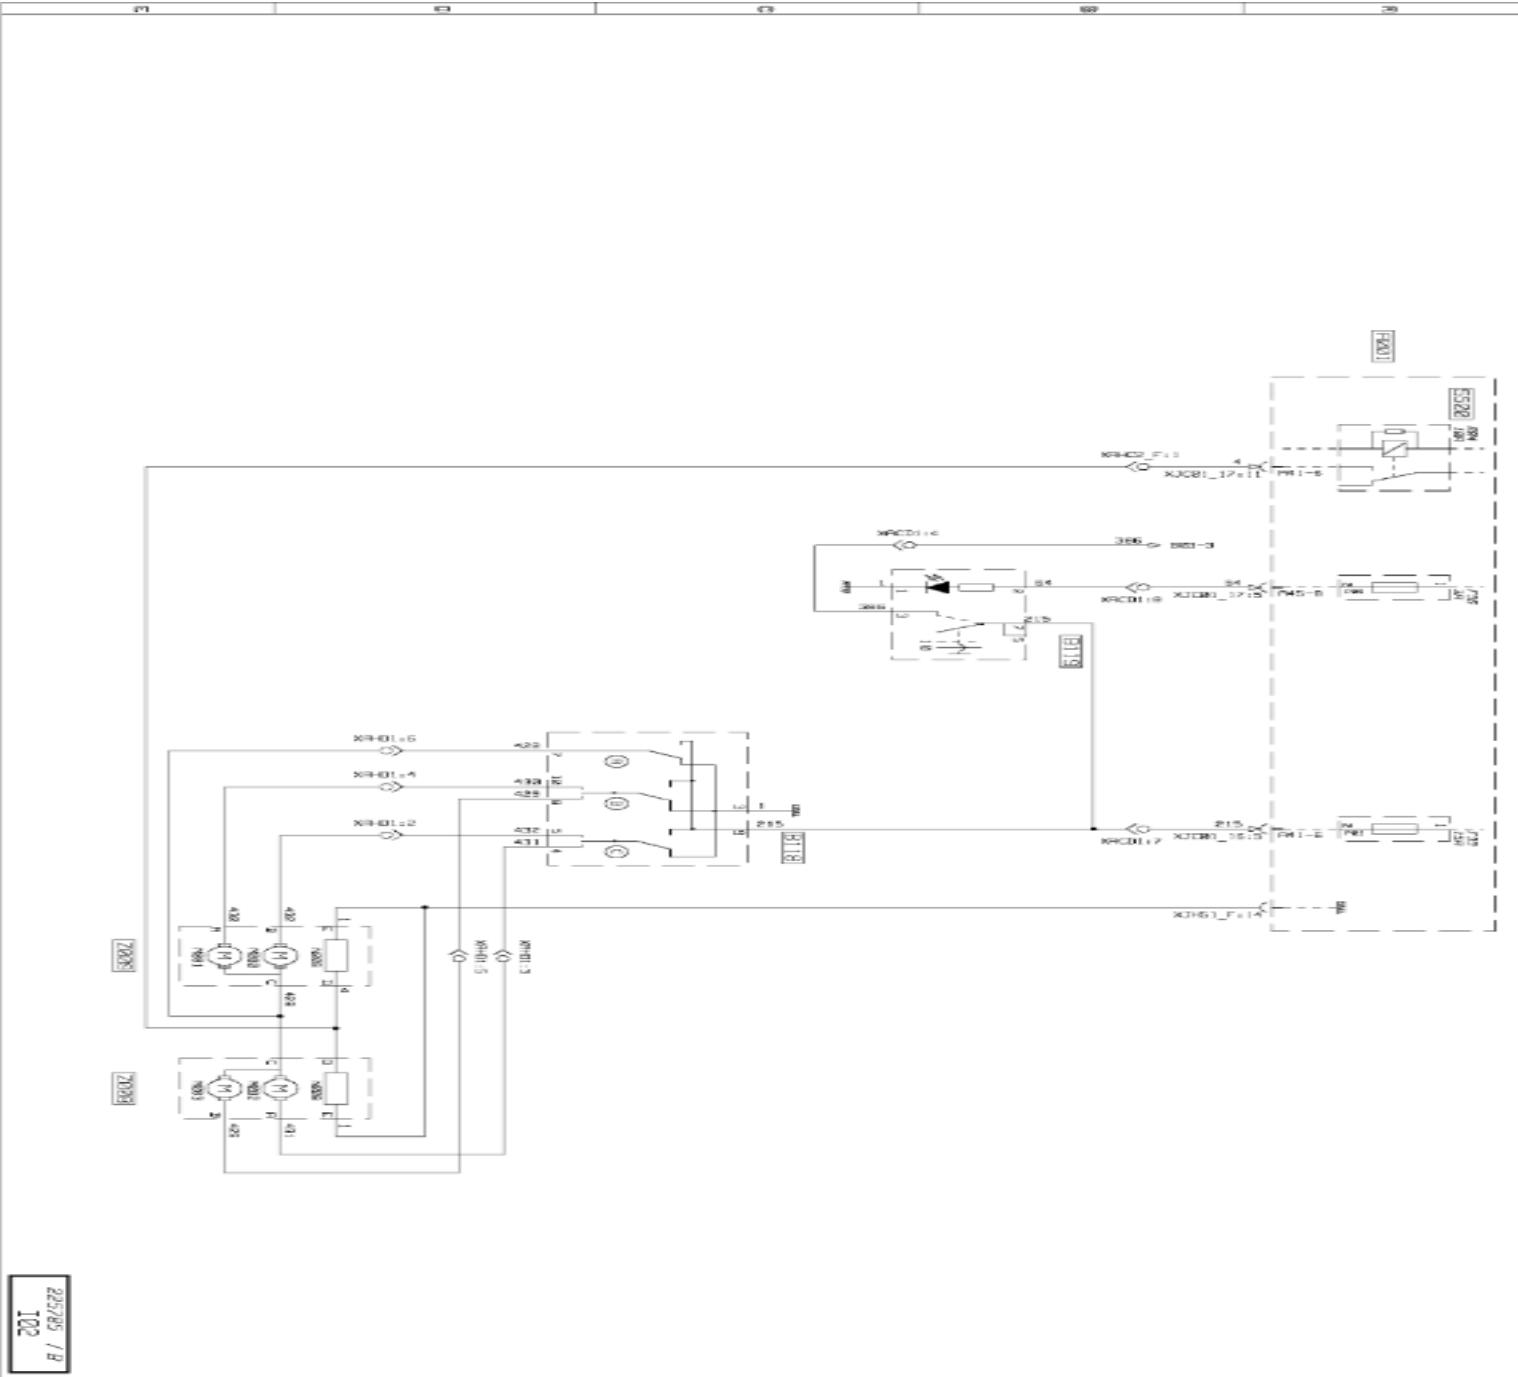

201
22553C / B

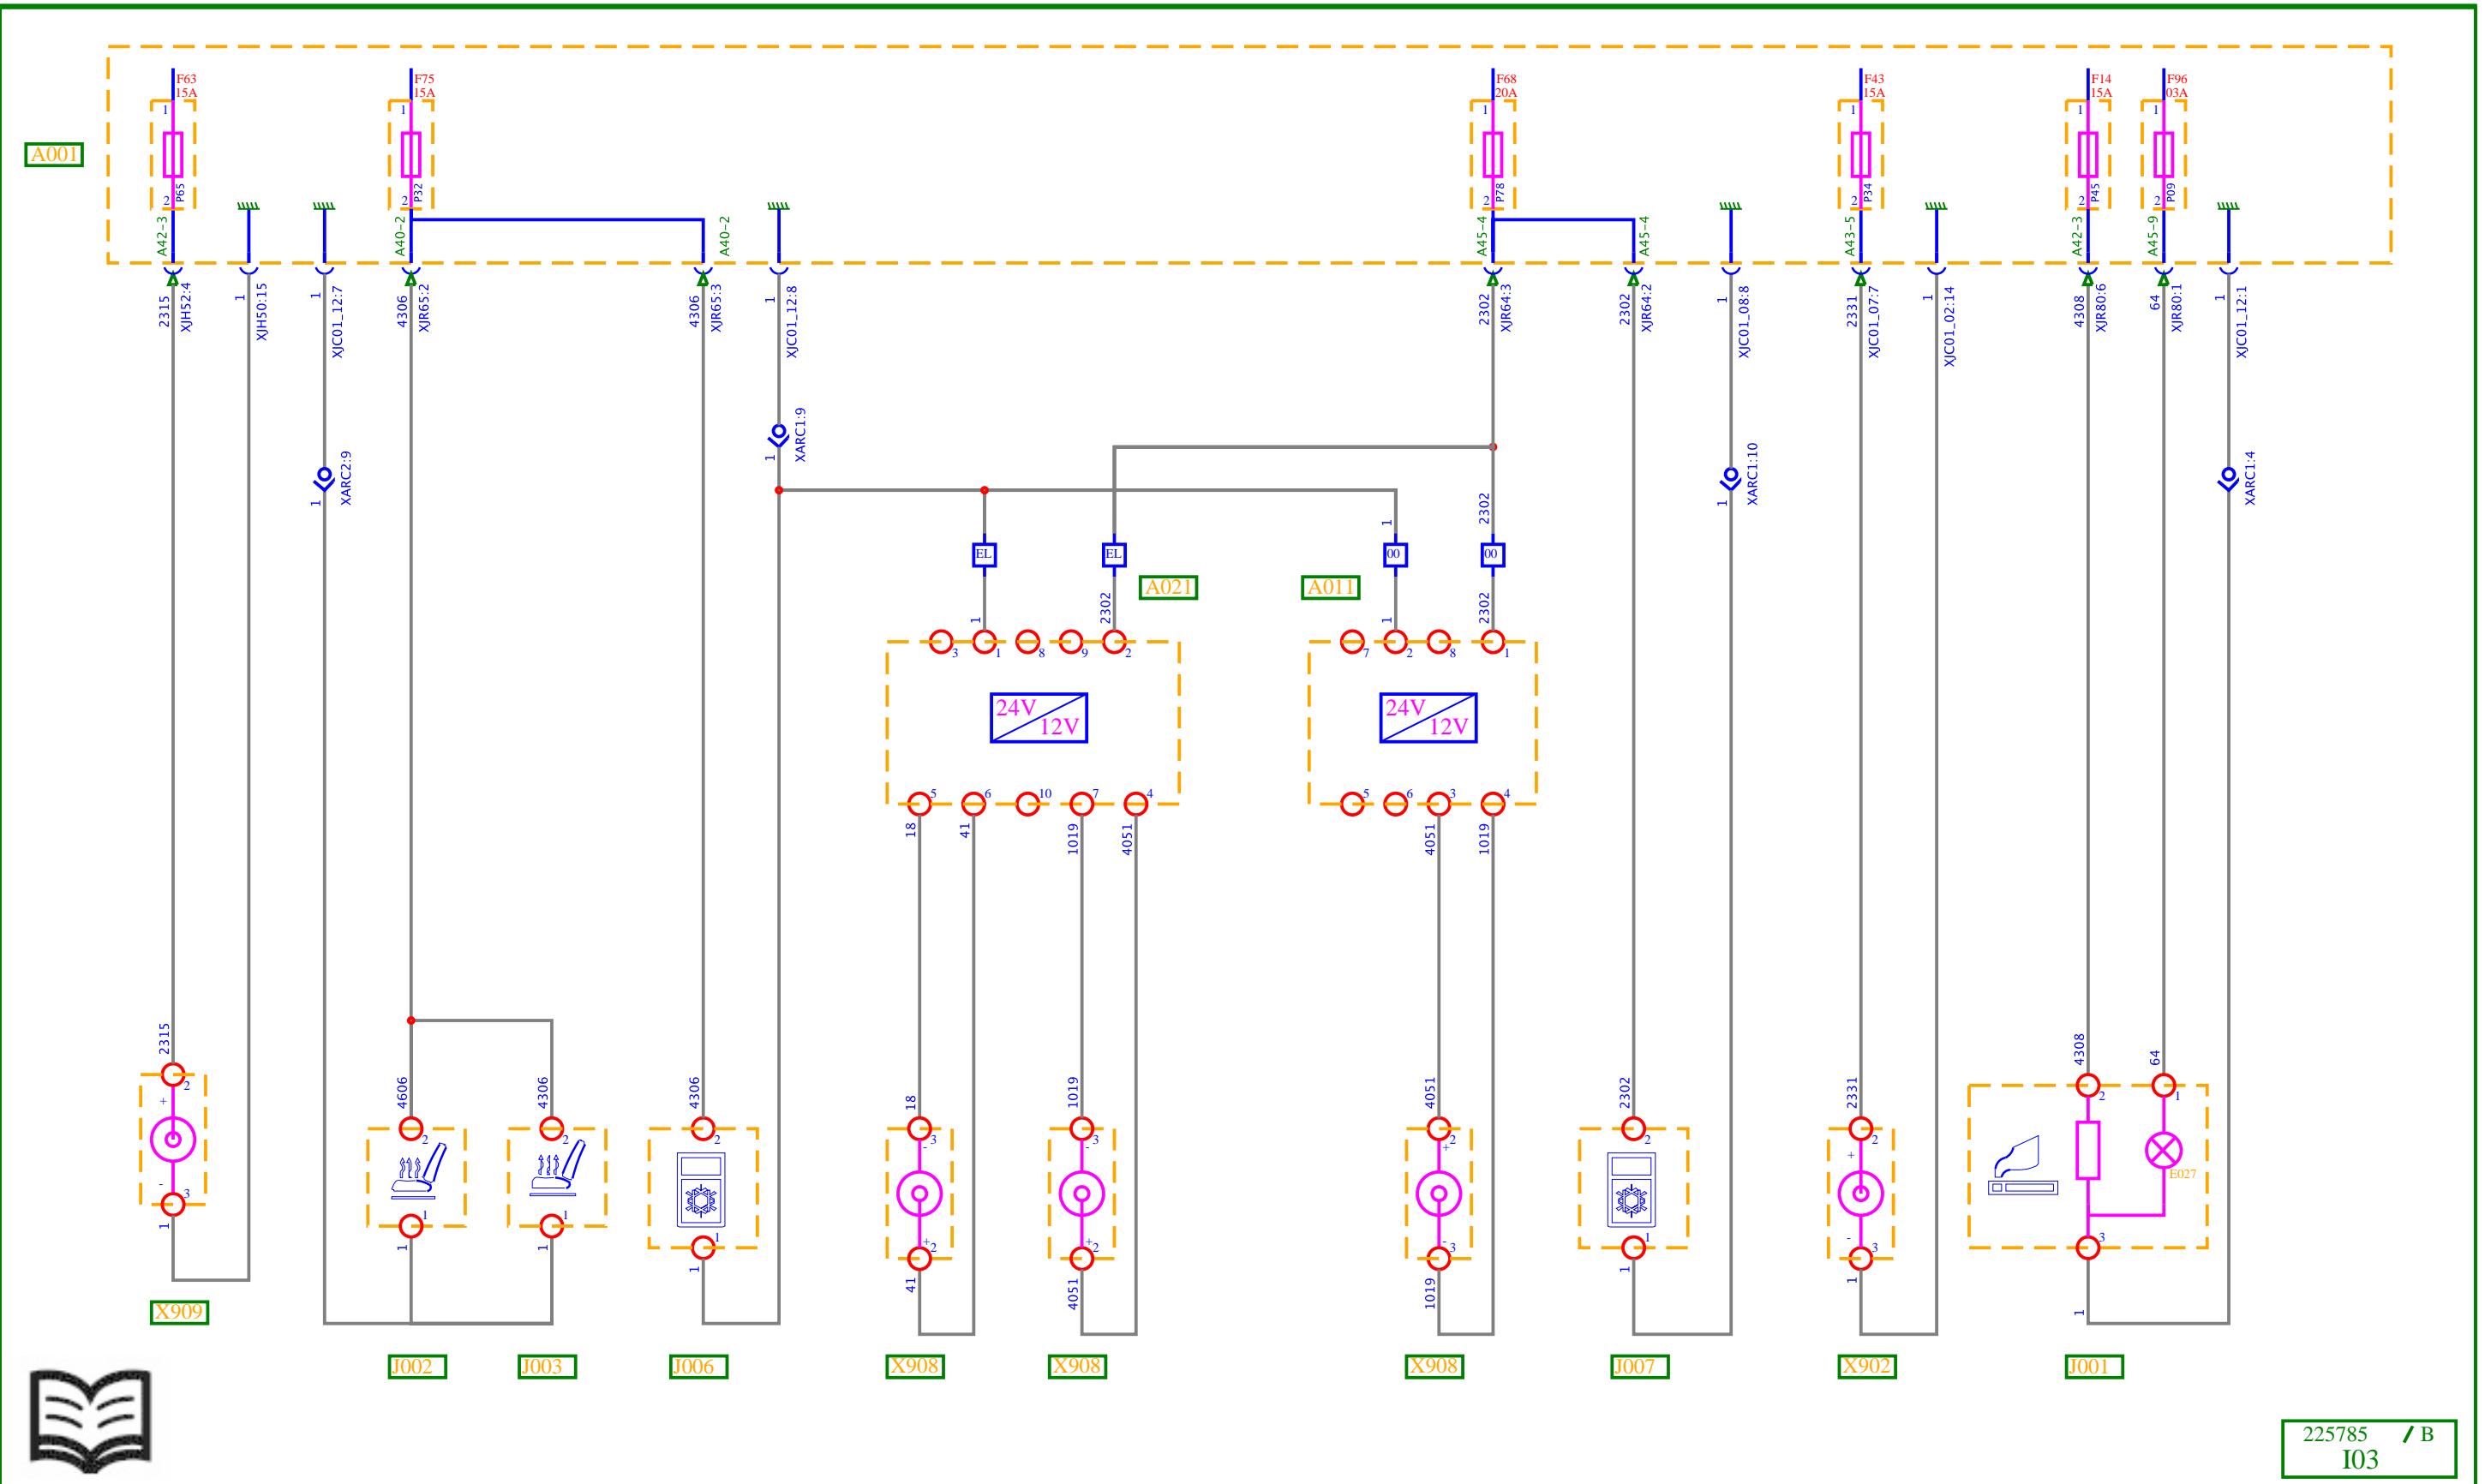

Comfort accessories


Key to appliances


| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| A011 | Voltage converter (24V / 12V) for information technology pack | C4c |
| A021 | Voltage converter (24 / 12V - 15A) | C4c |
| E027 | Cigar lighter light | B2b |
| J001 | Cigar lighter | B2b |
| J002 | RH heated seat unit | A3b |
| J003 | LH heated seat unit | C3b |
| J006 | Refrigerated compartment | B3c |
| J007 | Refrigerator | B3c |
| X902 | 24 Volts power supply socket | B2b |
| X908 | 12 Volts power supply socket | B2b |
| X909 | Extra 24 Volts power supply socket | B2a |

EL: with **MULTIPASS**

00: other cases of use

Comfort accessories

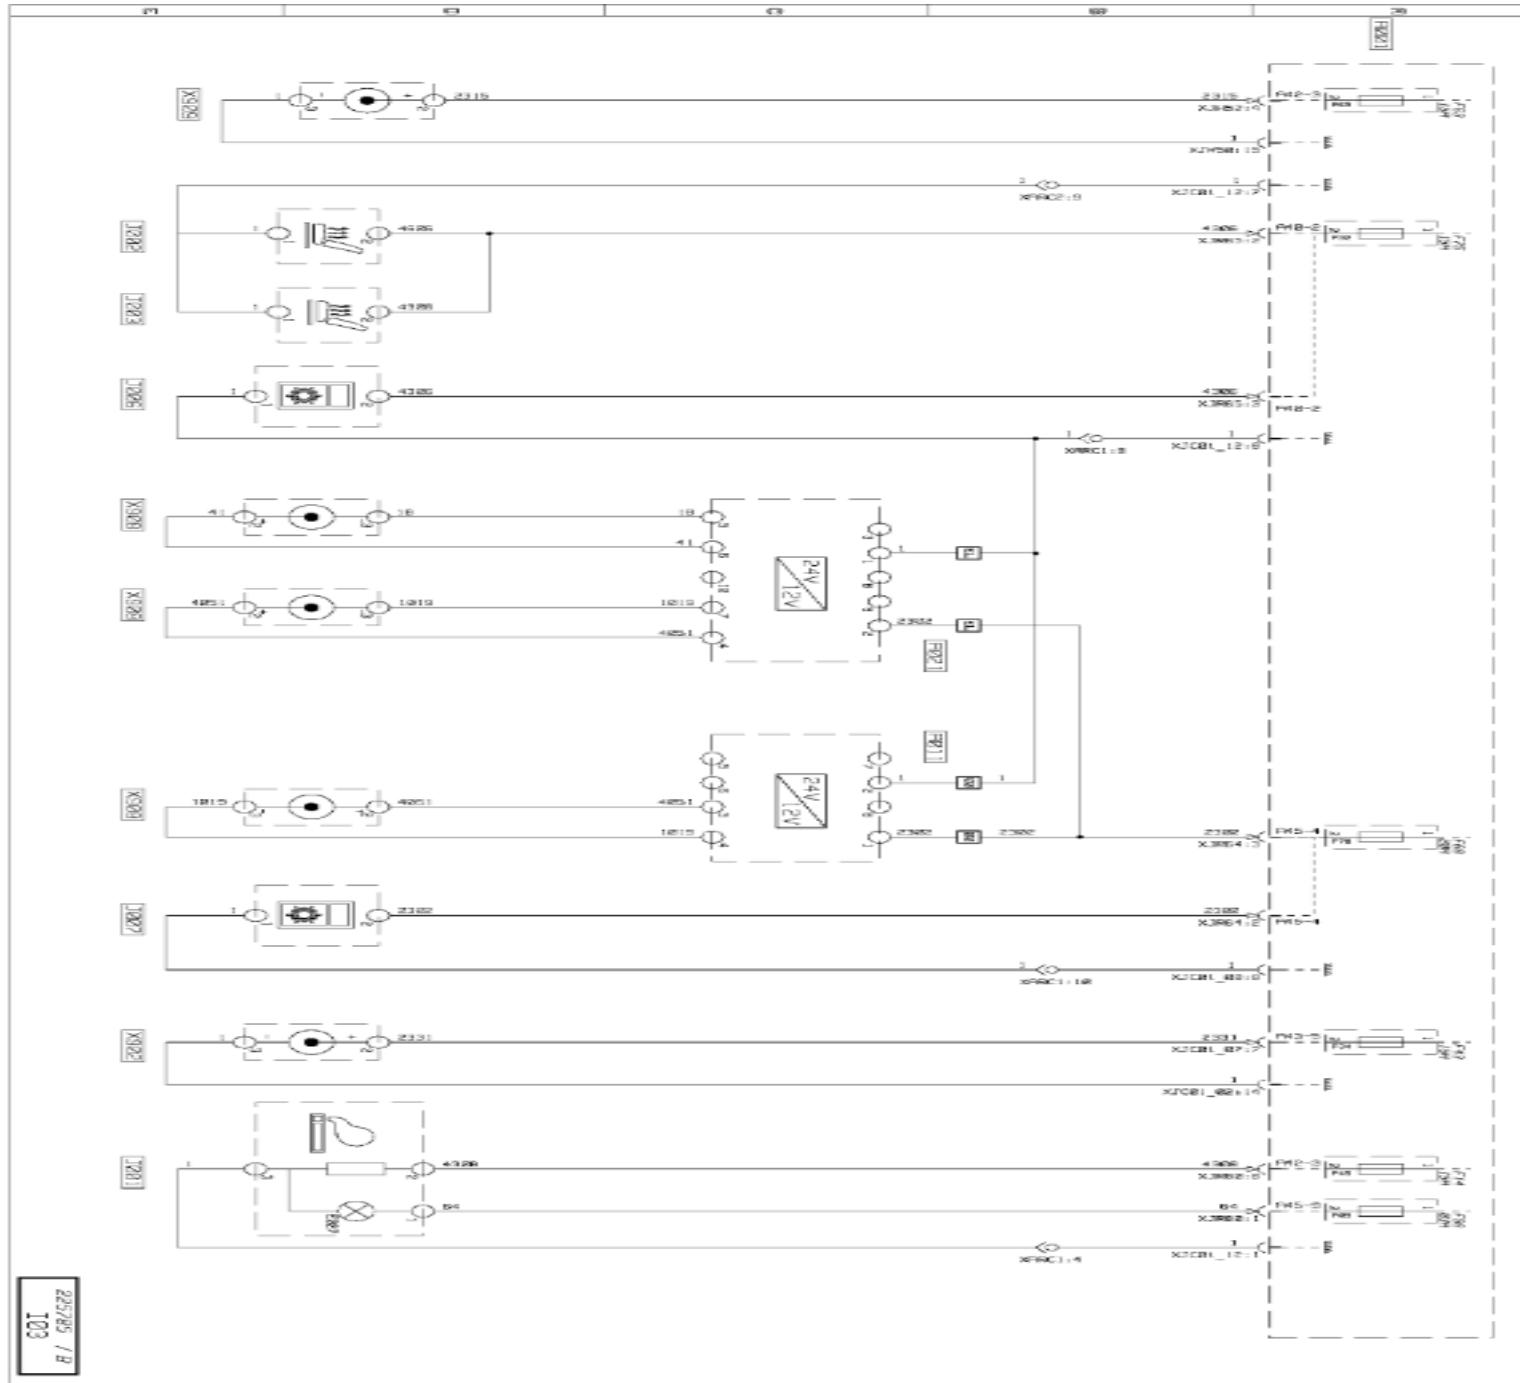

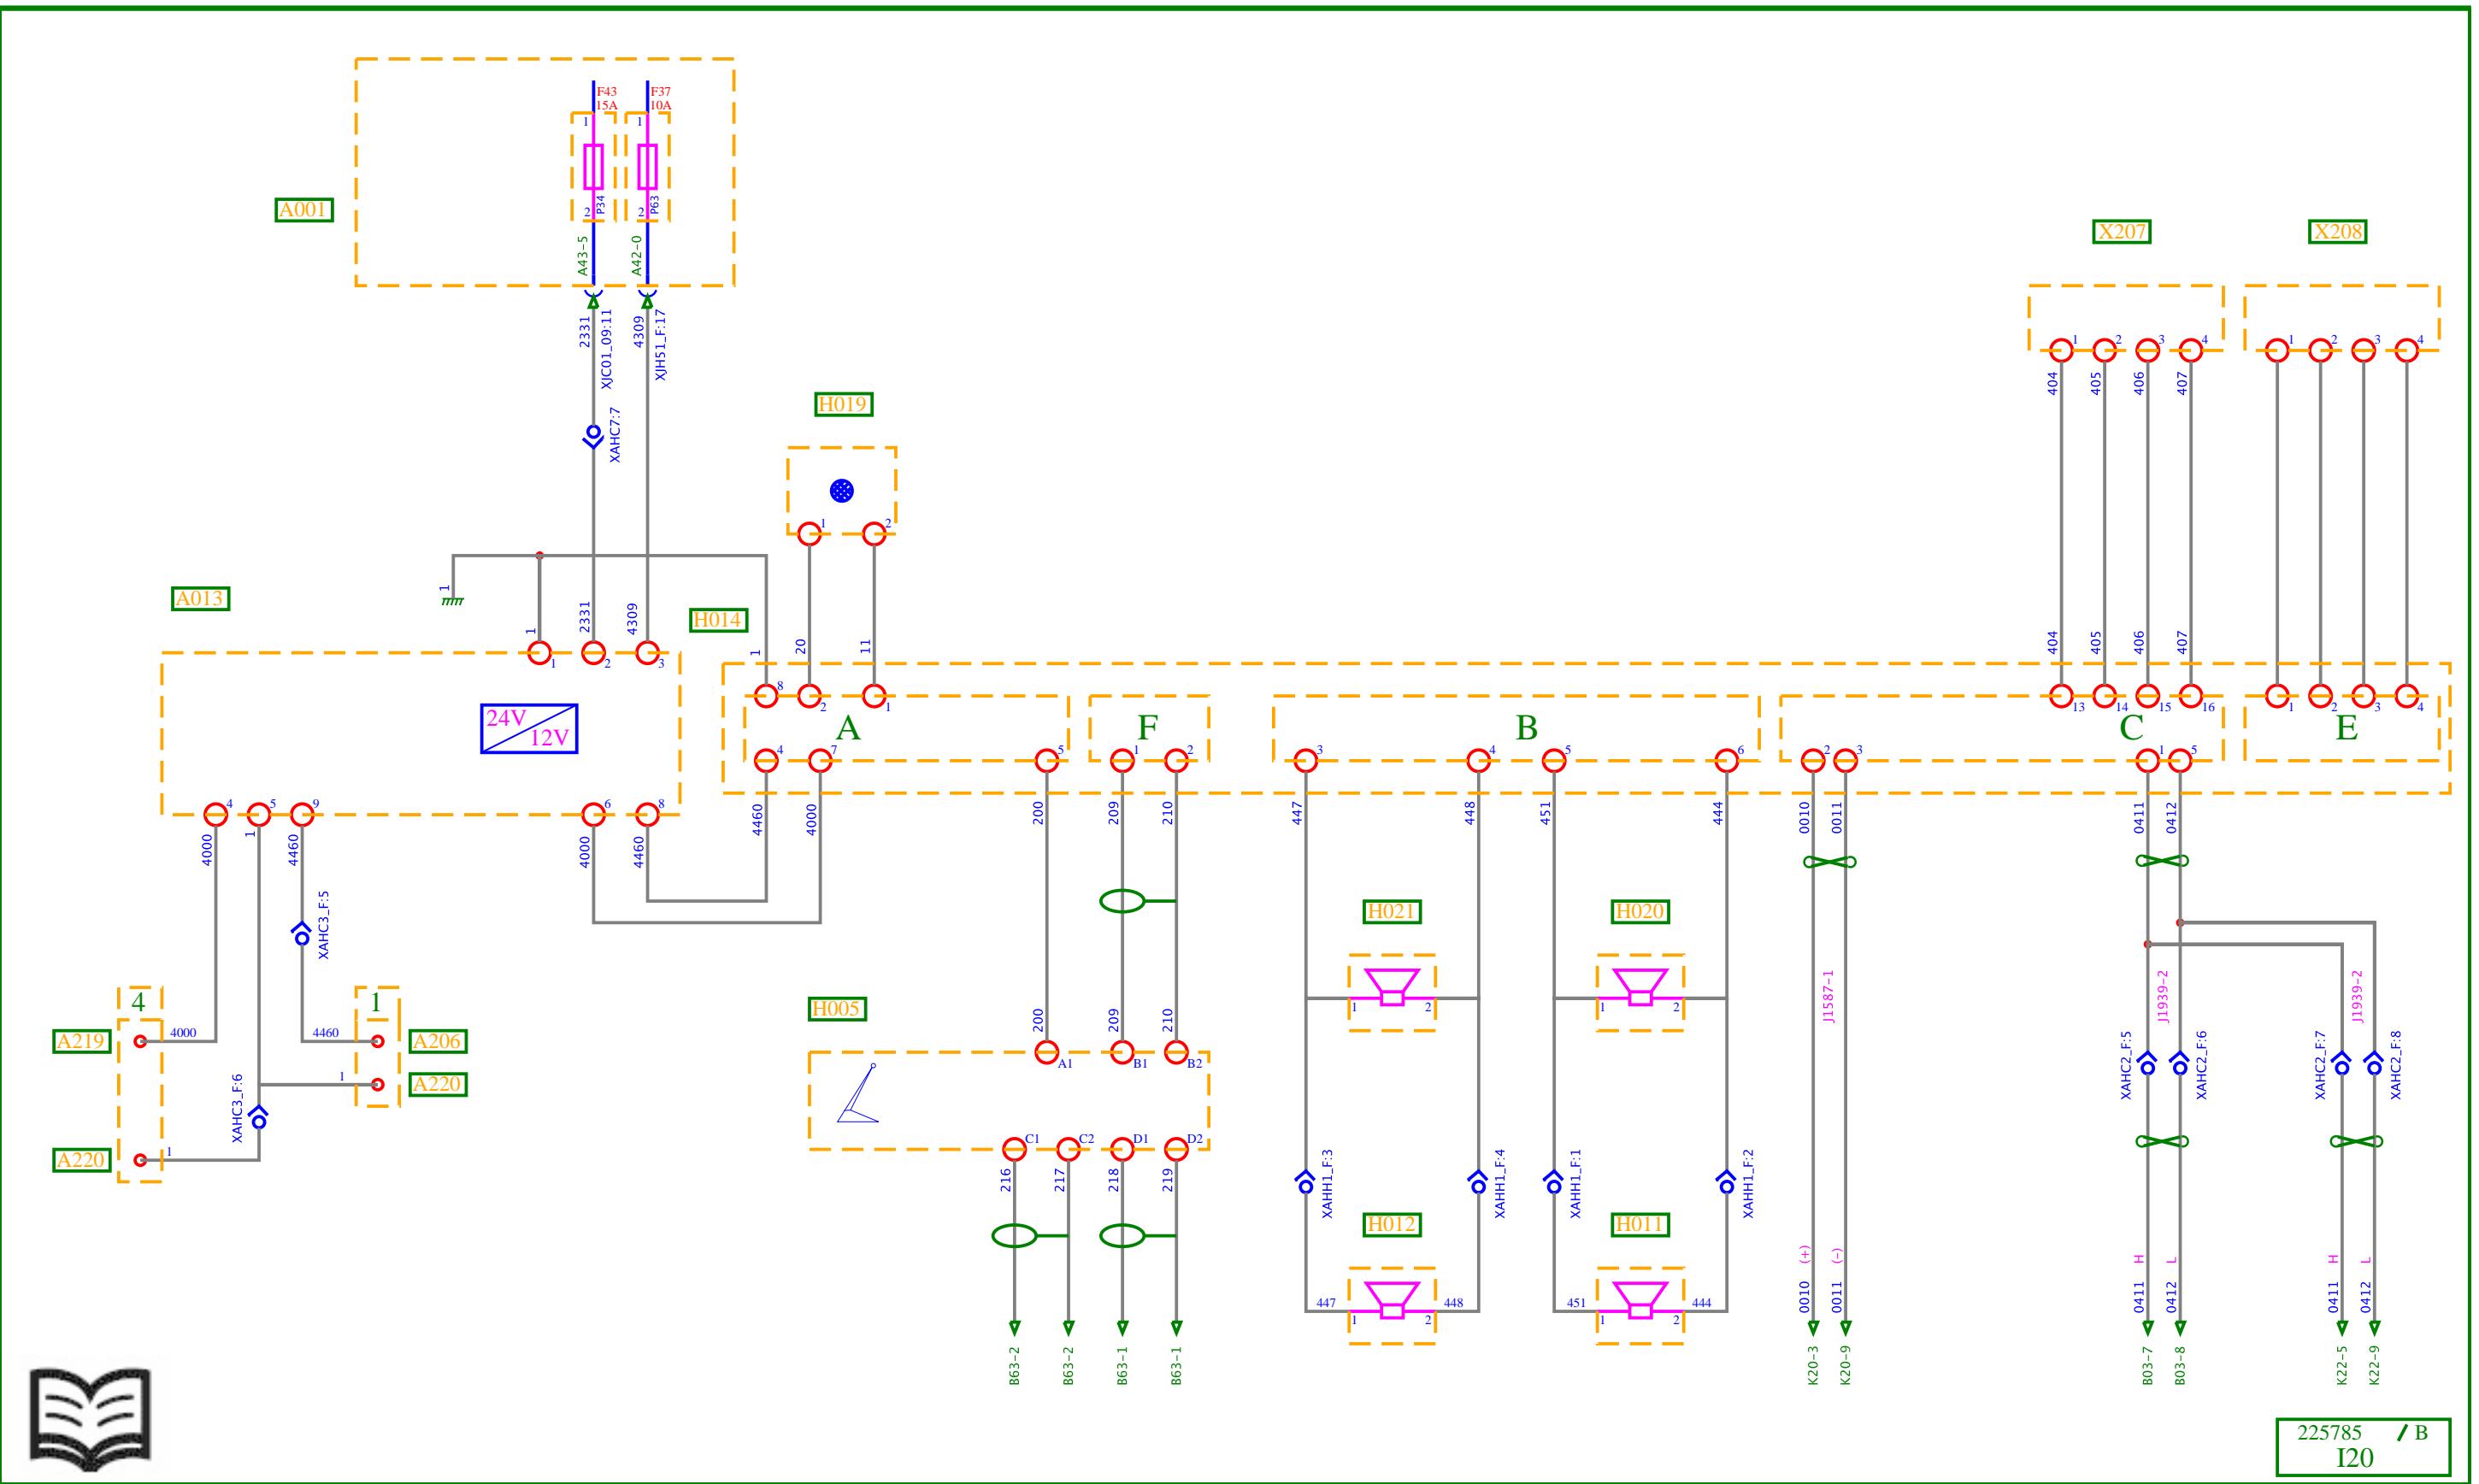



Radio

Key to appliances

| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| A013 | Voltage converter (24V / 12V - 15A) for audio communication system | B2a |
| A206 | Available power supply (CB +) | C2a |
| A219 | Available power supply (radio-telephone +) | B2b |
| A220 | Available power supply (radio-telephone -) | B2b |
| H005 | GPS satellite antenna | C2a |
| H011 | LH front loudspeaker | C2a |
| H012 | RH front loudspeaker | A2a |
| H014 | Radio set | C2a |
| H019 | Microphone | C2a |
| H020 | Sharp loudspeaker, LH side | C2a |
| H021 | Sharp loudspeaker, RH side | A2a |
| X207 | Audio auxiliary connector | C2a |
| X208 | Audio USB connector | C2a |

Radio

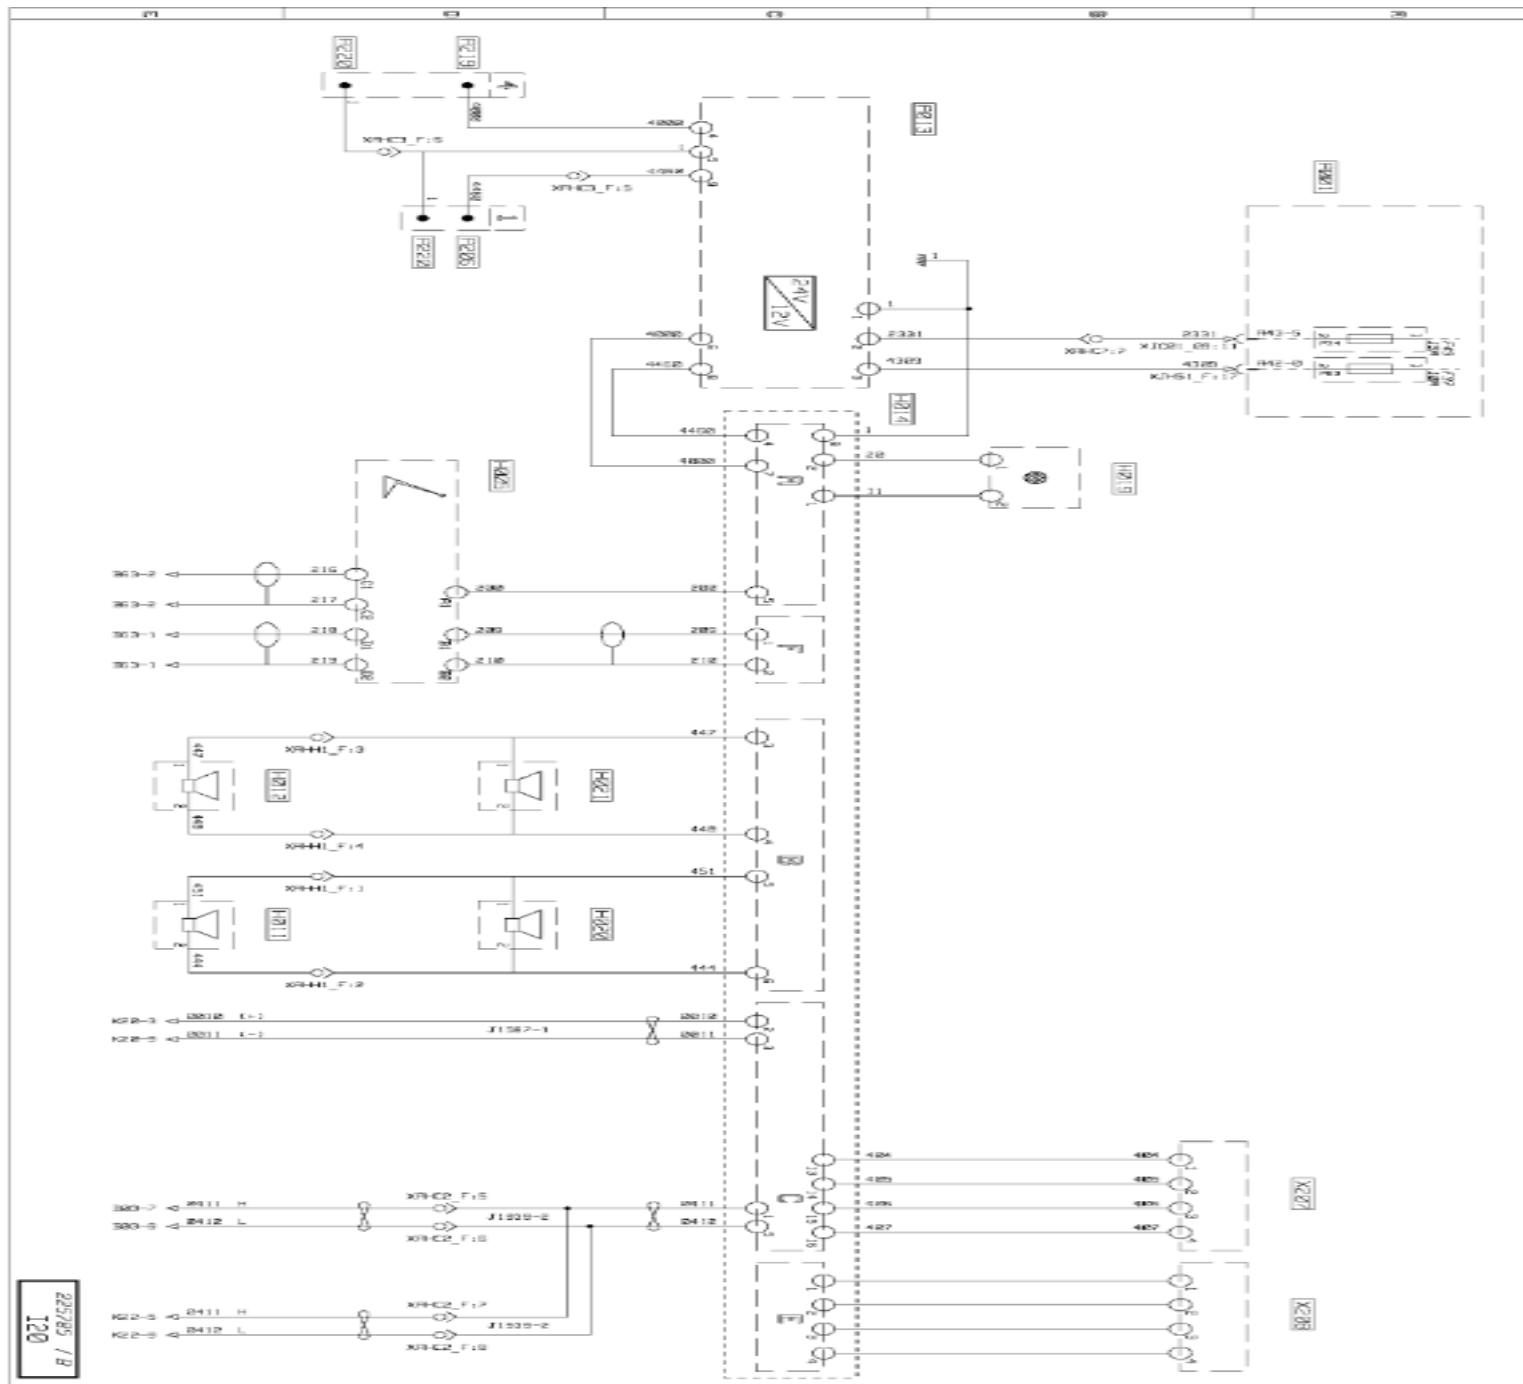

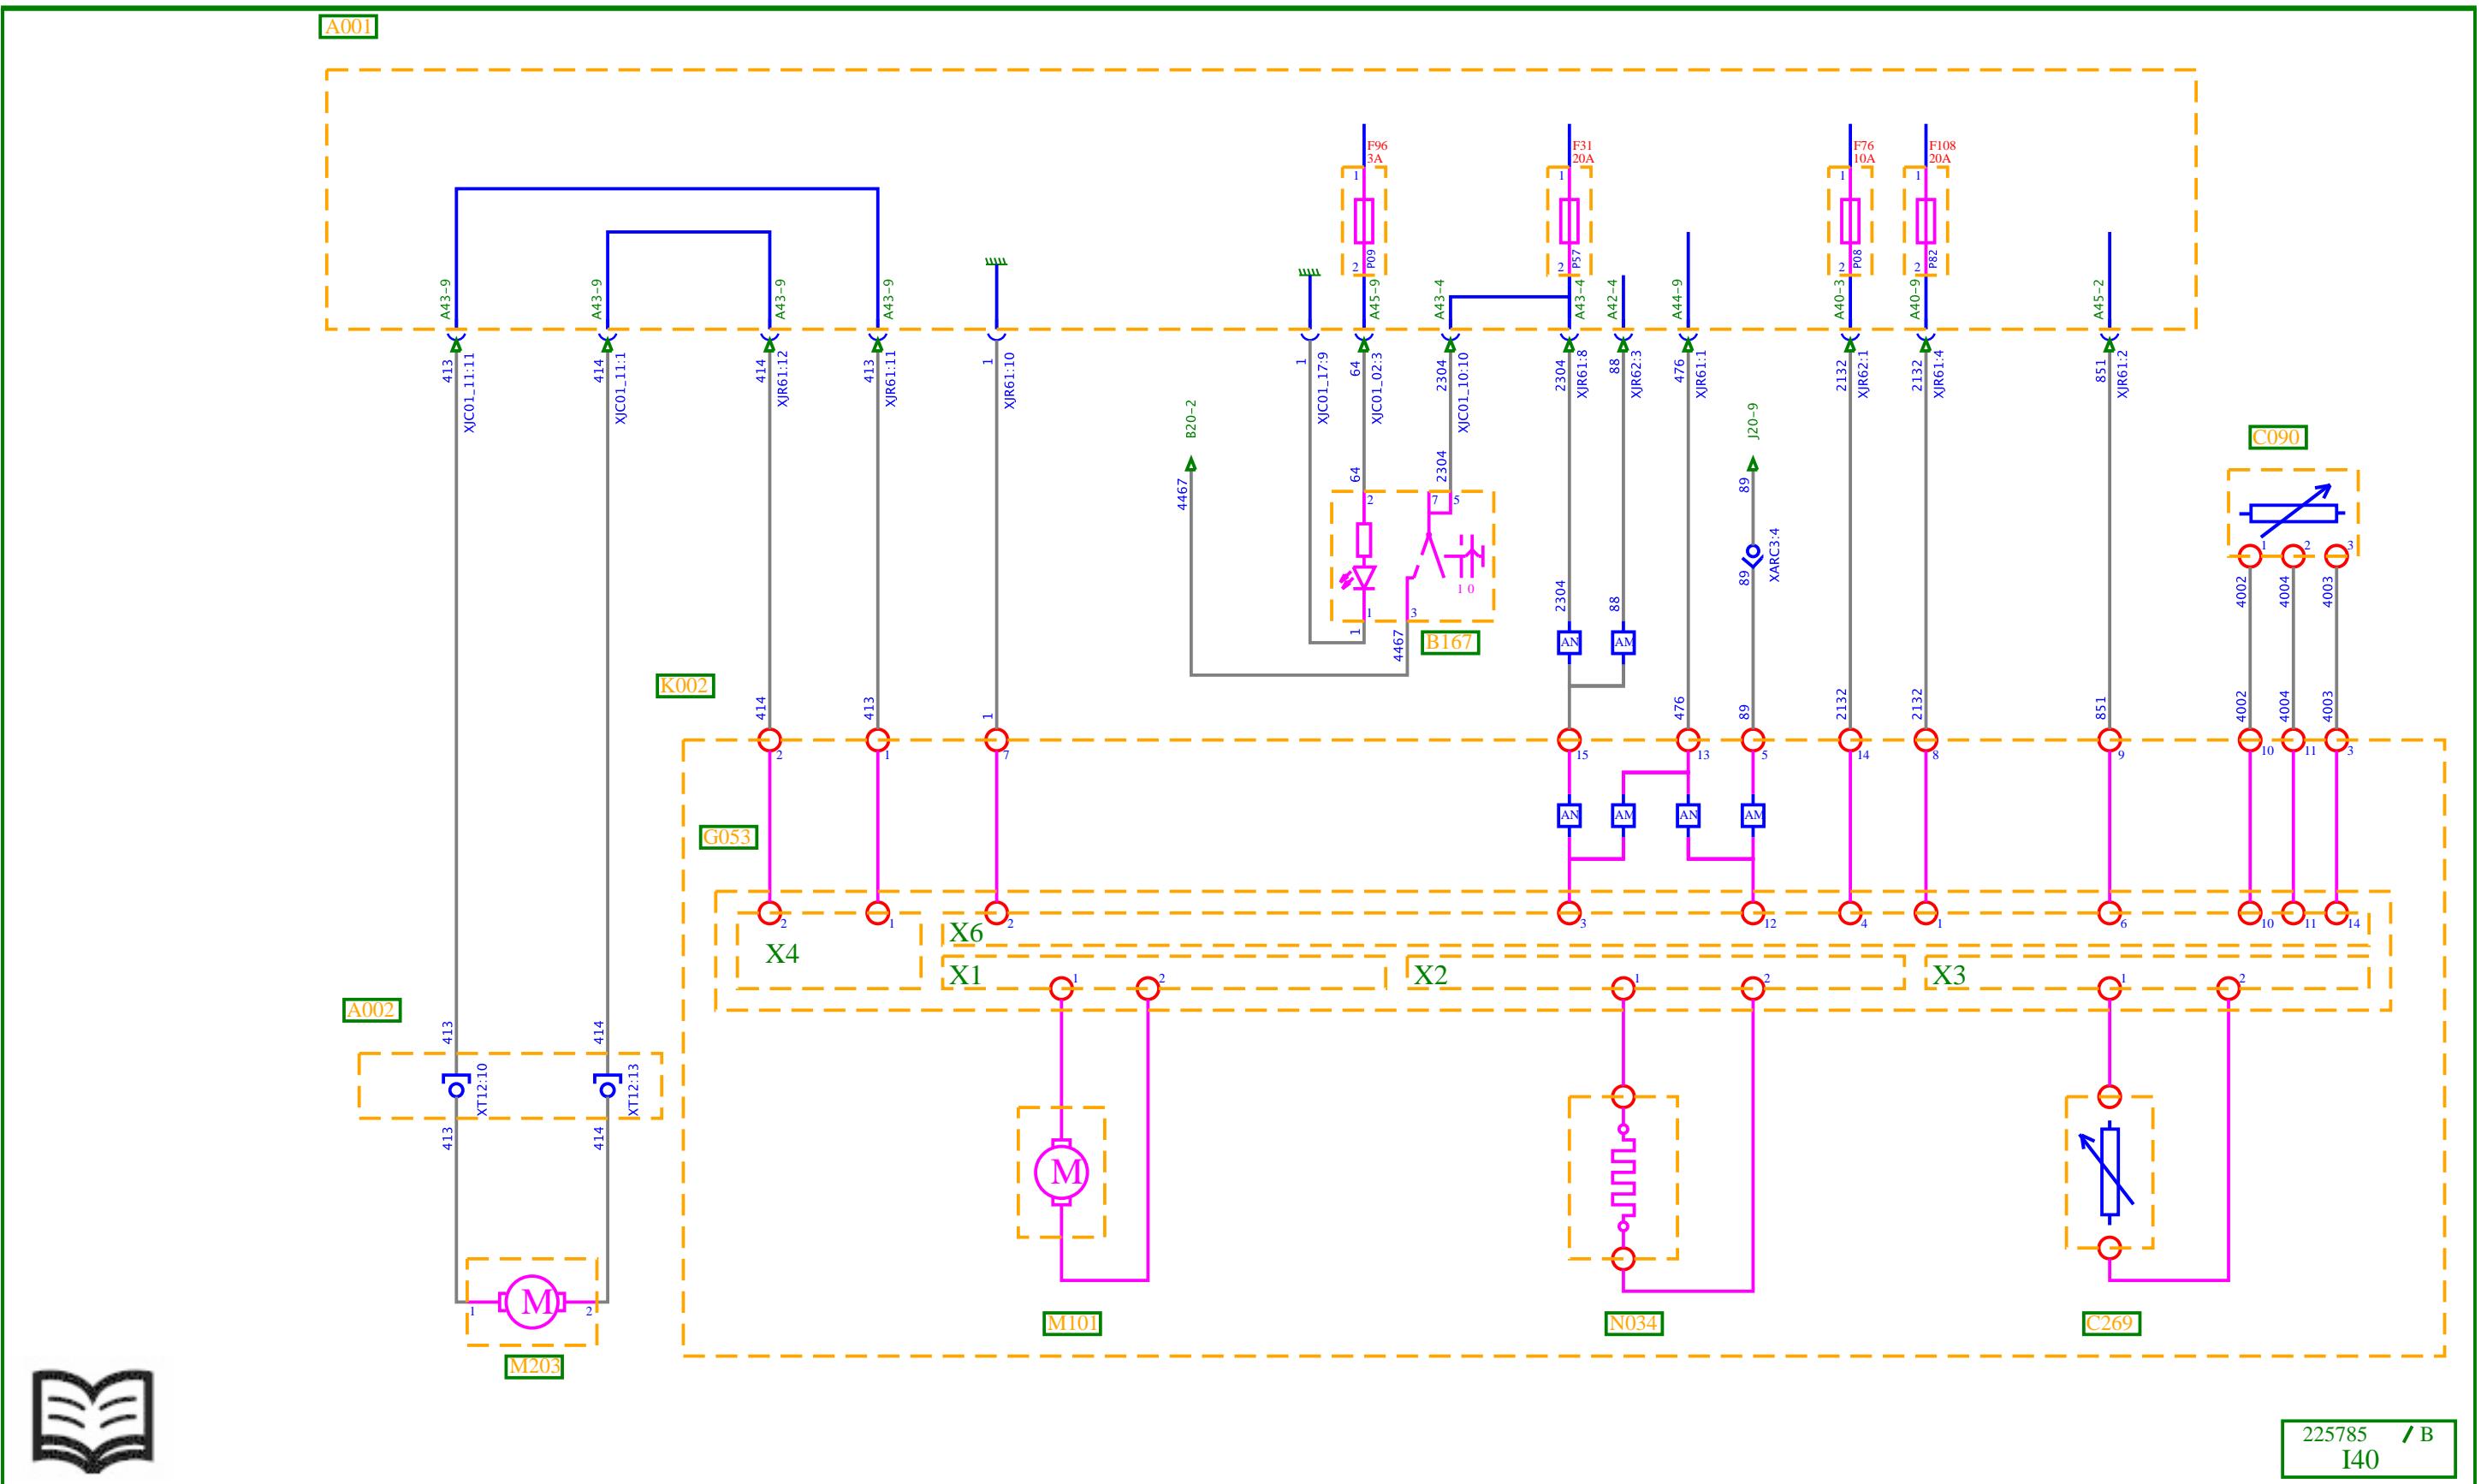

Independent (add-on) heating AT2000 ST


Key to appliances


| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B167 | Cab add-on heater control | C3a |
| C090 | Add-on heater temperature sensor | B4b |
| C269 | Temperature sensor on the autonomous heating system | B2b |
| G053 | Air/air autonomous heating ECU | B2b |
| K002 | Air/air add-on heater | B2b |
| M101 | Add-on heater fan motor | B2b |
| M203 | Add-on heater fuel pump motor | C4d |
| N034 | Autonomous heating system heating element | B2b |

AM: with ADR equipment

AN: without ADR equipment

Independent (add-on) heating AT2000 ST

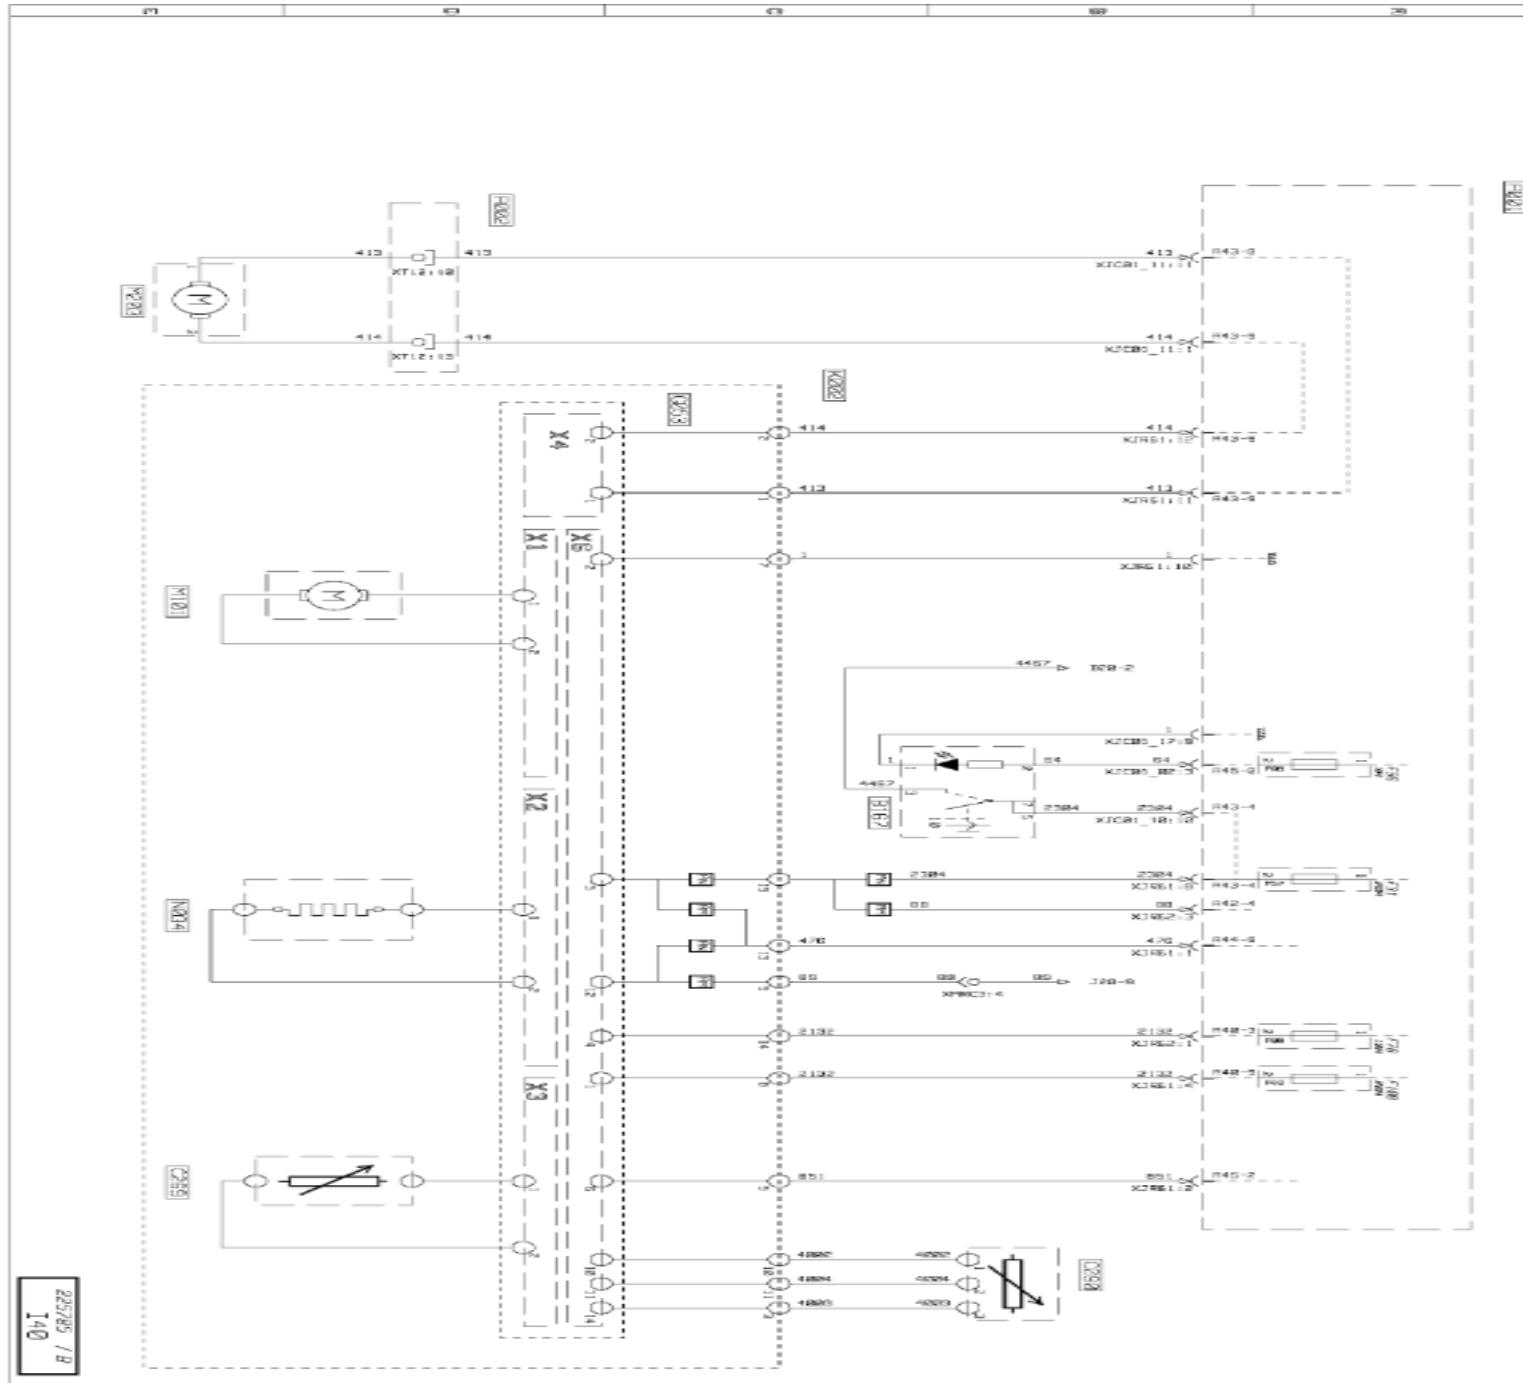

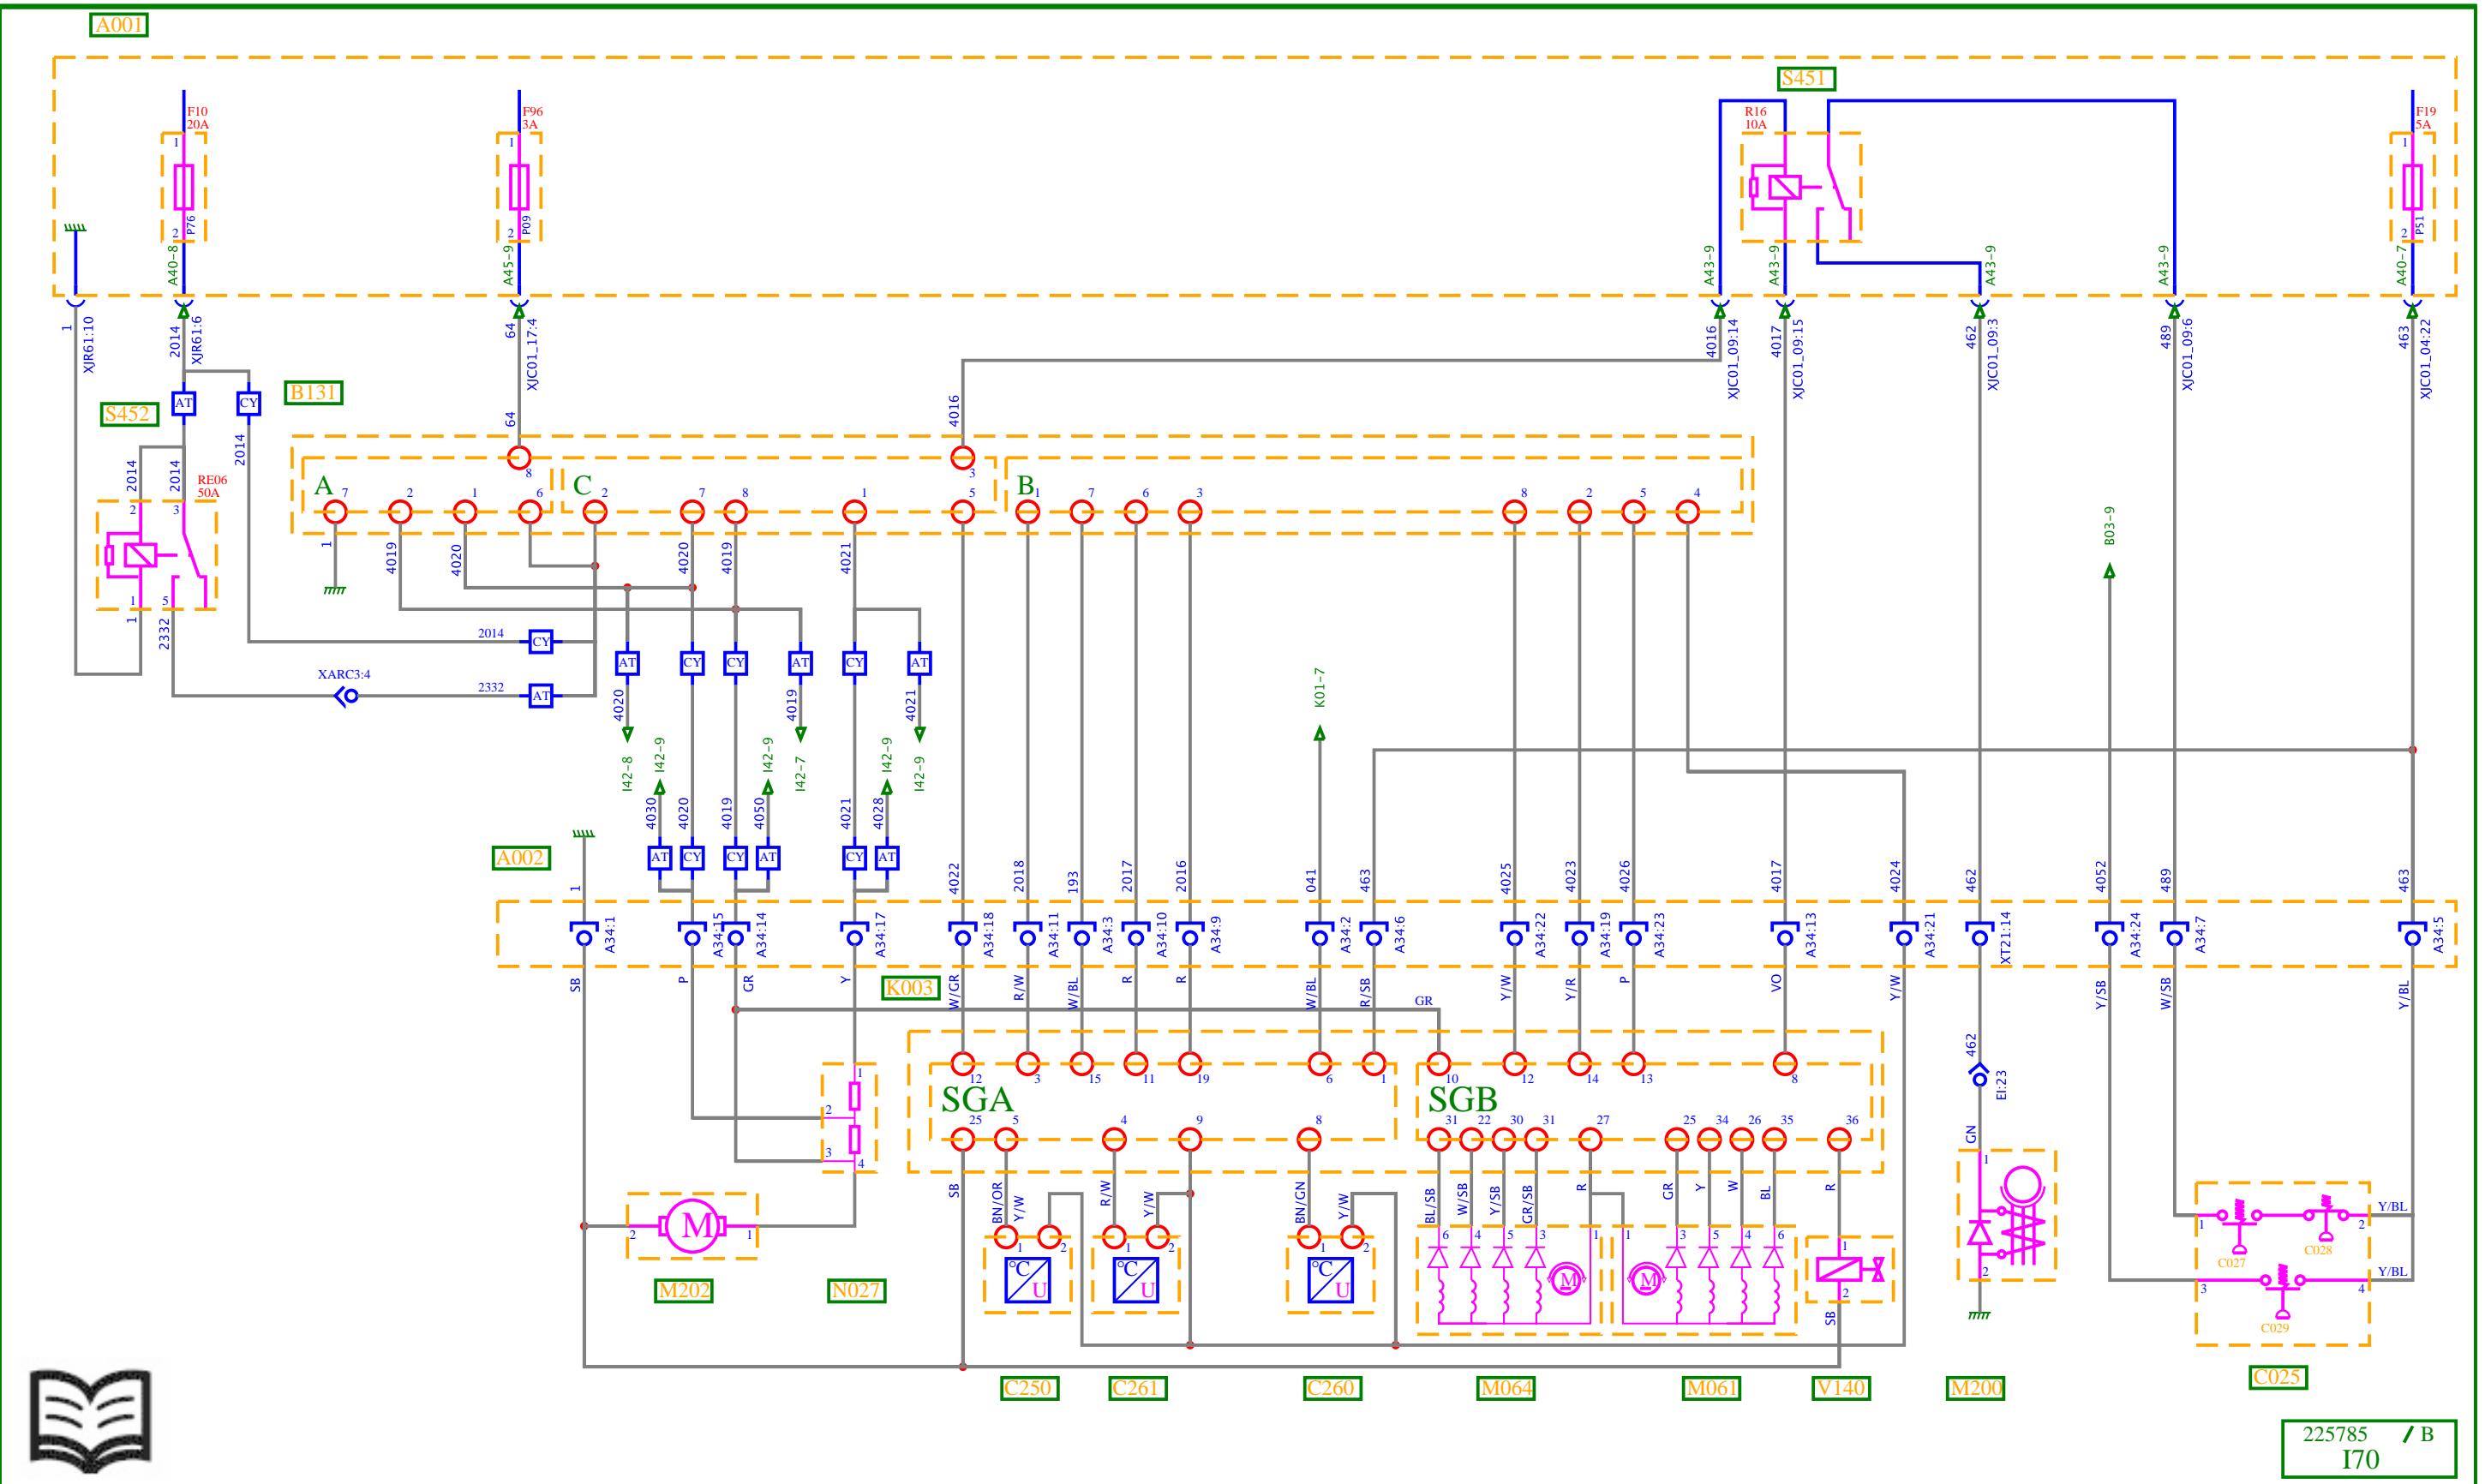

Air conditioning


Key to appliances


| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B131 | Air conditioner control | B2b |
| C025 | 3-level air conditioning pressure sensor | B2b |
| C027 | Low level air conditioning pressure sensor | B2b |
| C028 | High level air conditioning pressure sensor | B2b |
| C029 | Intermediate level air conditioning pressure sensor | B2b |
| C250 | Blown air temperature sensor | B2b |
| C260 | Evaporator temperature sensor | B2b |
| C261 | Air conditioning outside air temperature sensor | B2b |
| K003 | Air conditioning ECU | B2b |
| M061 | Air recycling motor | B2b |
| M064 | Air mixing flap motor | B2b |
| M200 | Air conditioning compressor electric clutch | B3d |
| M202 | Driving position fan-coil heater motor | B2b |
| N027 | Fan/coil heater pilot-control resistors assembly | B2b |
| S451 | Air conditioning compressor clutch power supply relay | B3c |
| S452 | Air conditioning fan piloting relay | B2c |
| V140 | Cab heating engine coolant circuit by-pass solenoid valve | B2b |

AT: With air / water independent heating

CY: Without air / water independent heating

Air conditioning

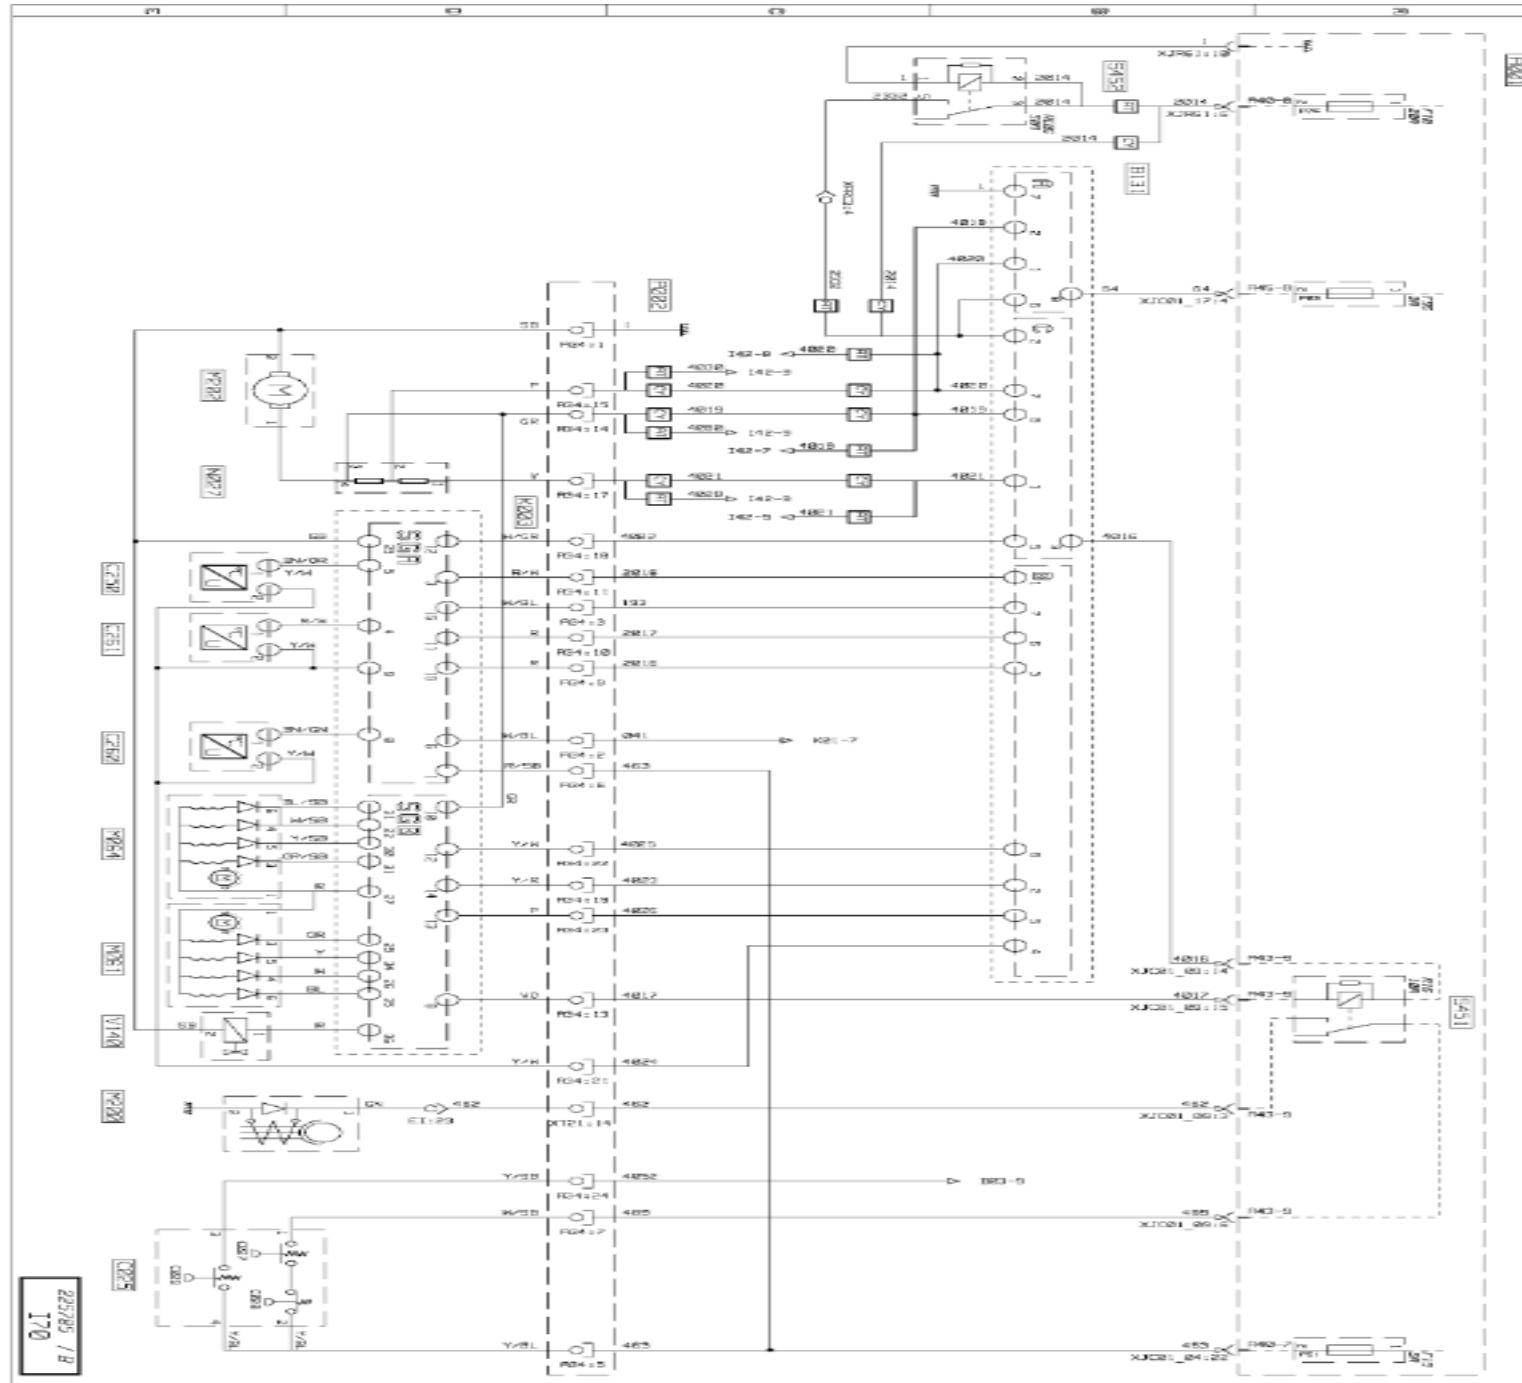

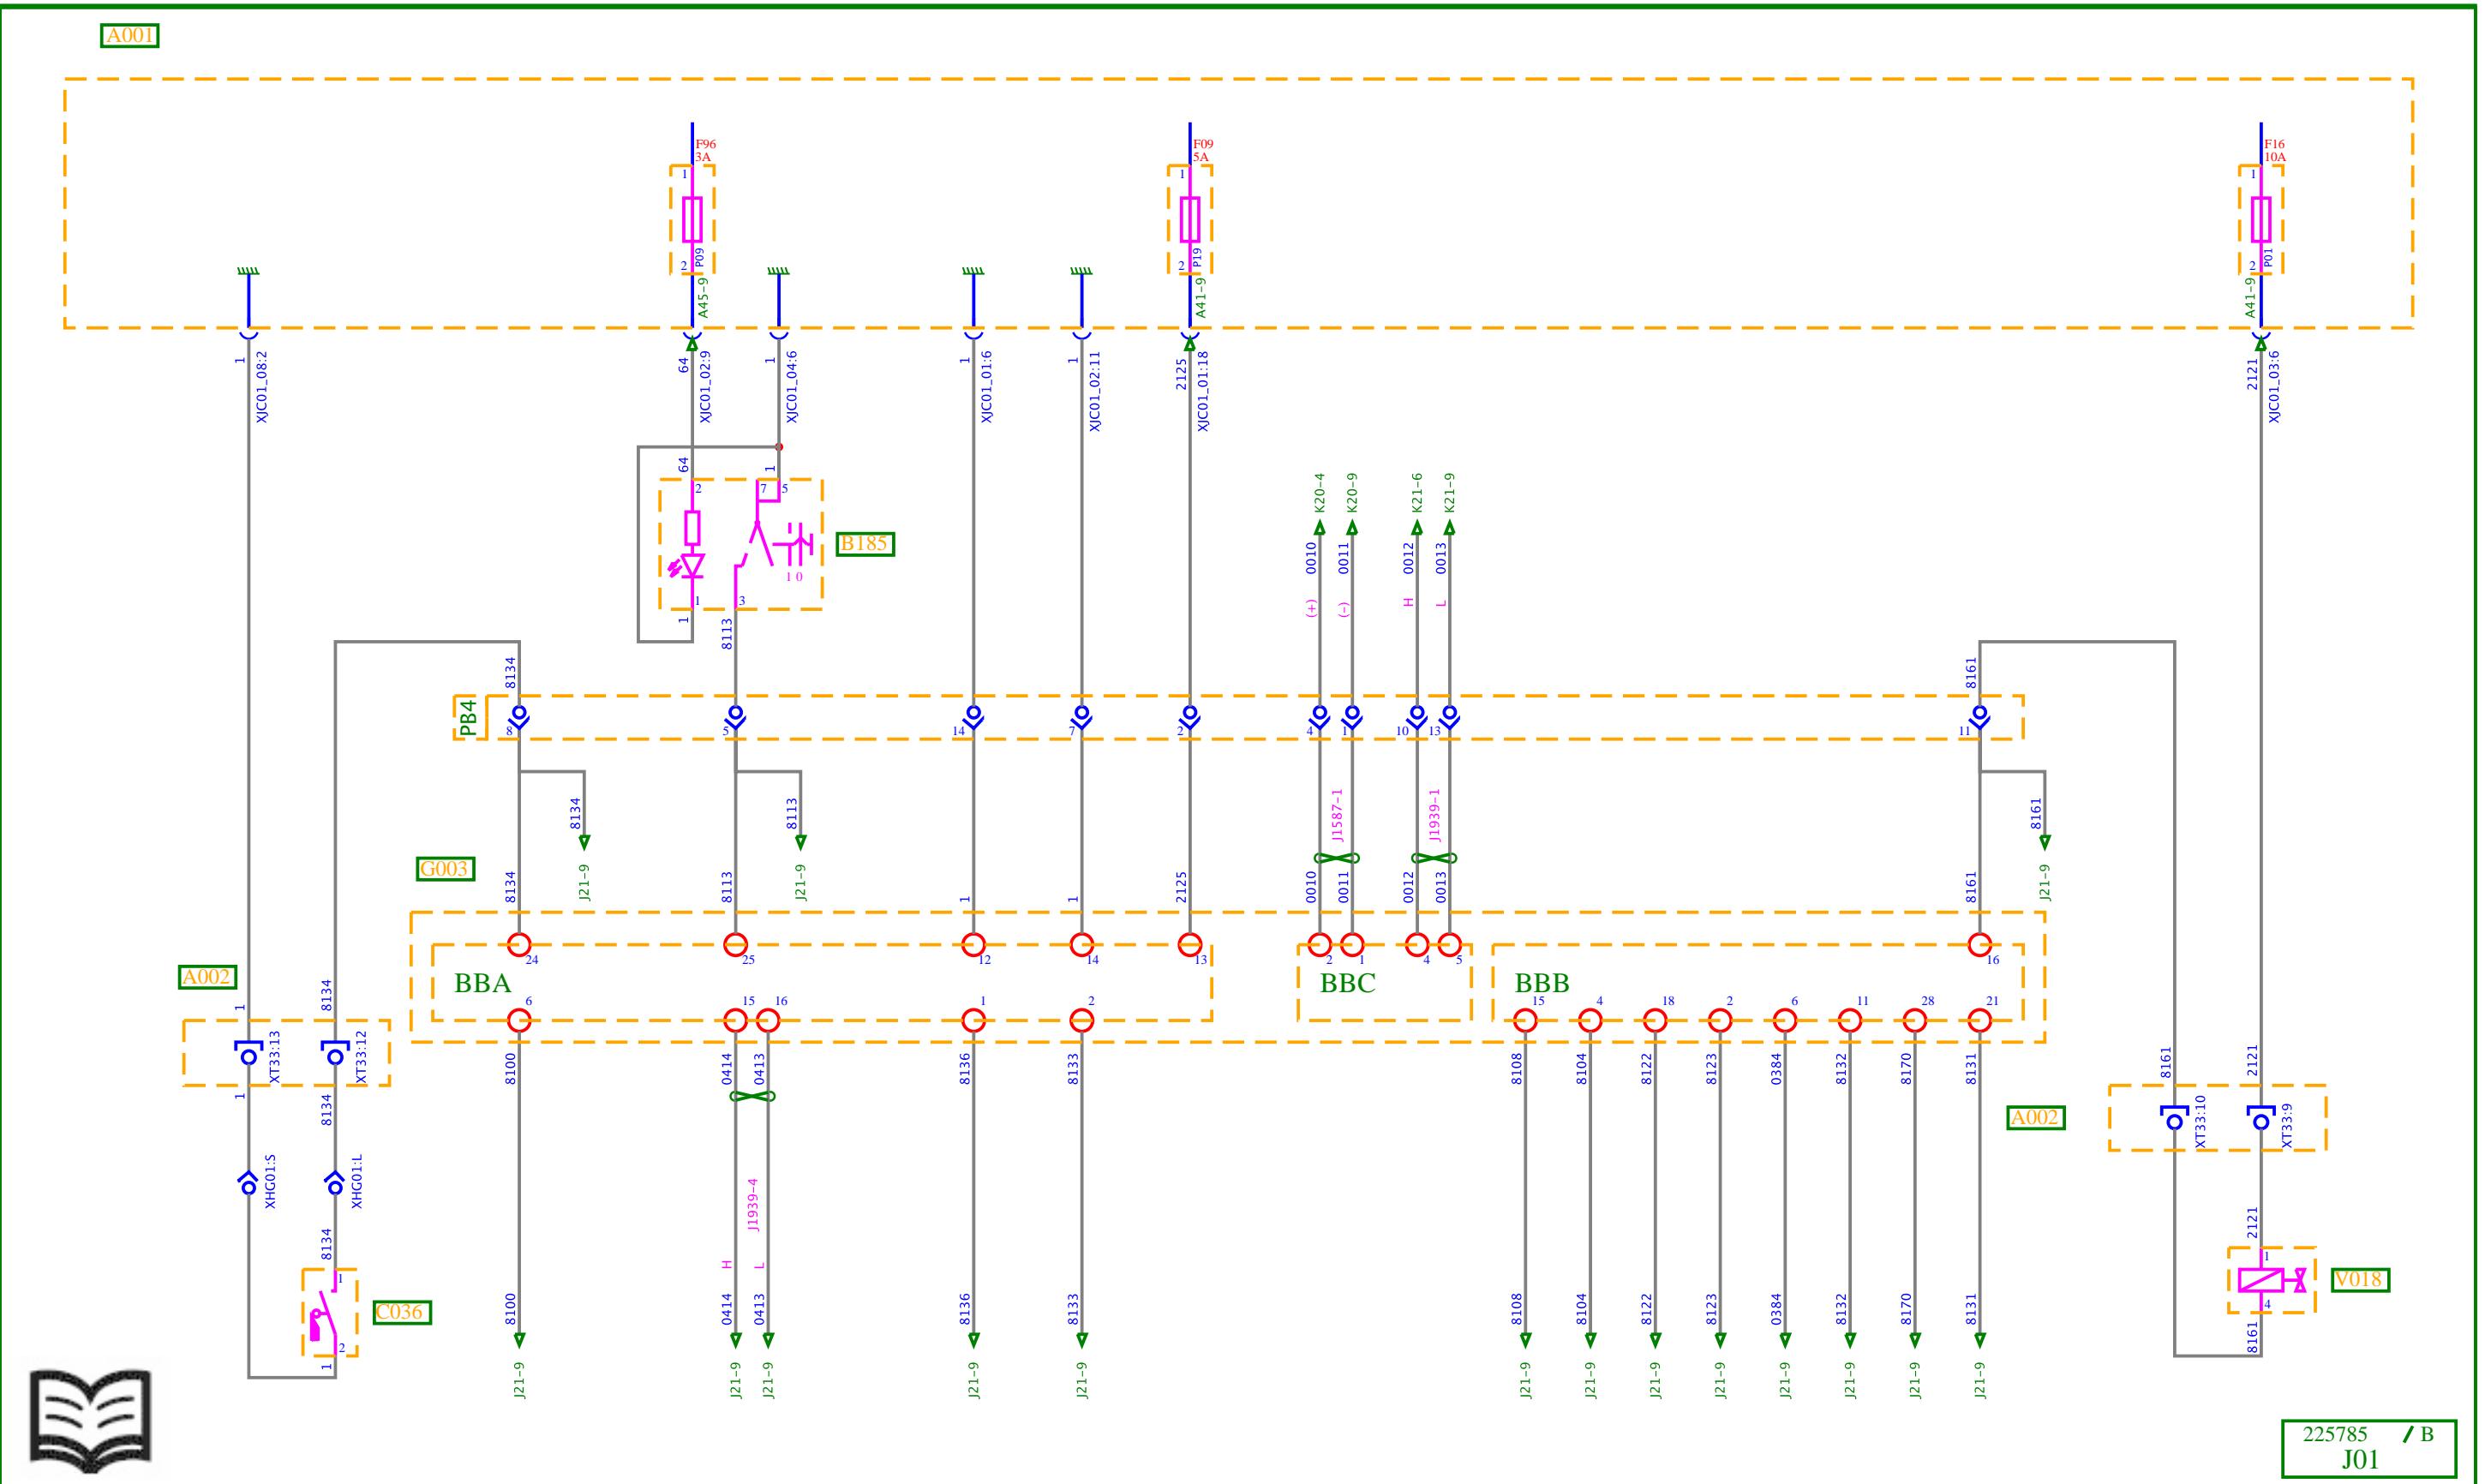


Bodybuilder pre-arrangement management

Key to appliances


| Code | Function | Location |
|-------------|--|-----------------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| B185 | PTO 2 engagement request control (in cab) | C2c |
| C036 | PTO 2 engaged position information sensor | B4d |
| G003 | Bodybuilder pre-arrangement management ECU | B2b |
| V018 | PTO engagement electrovalve N° 2 | B4d |

Bodybuilder pre-arrangement management

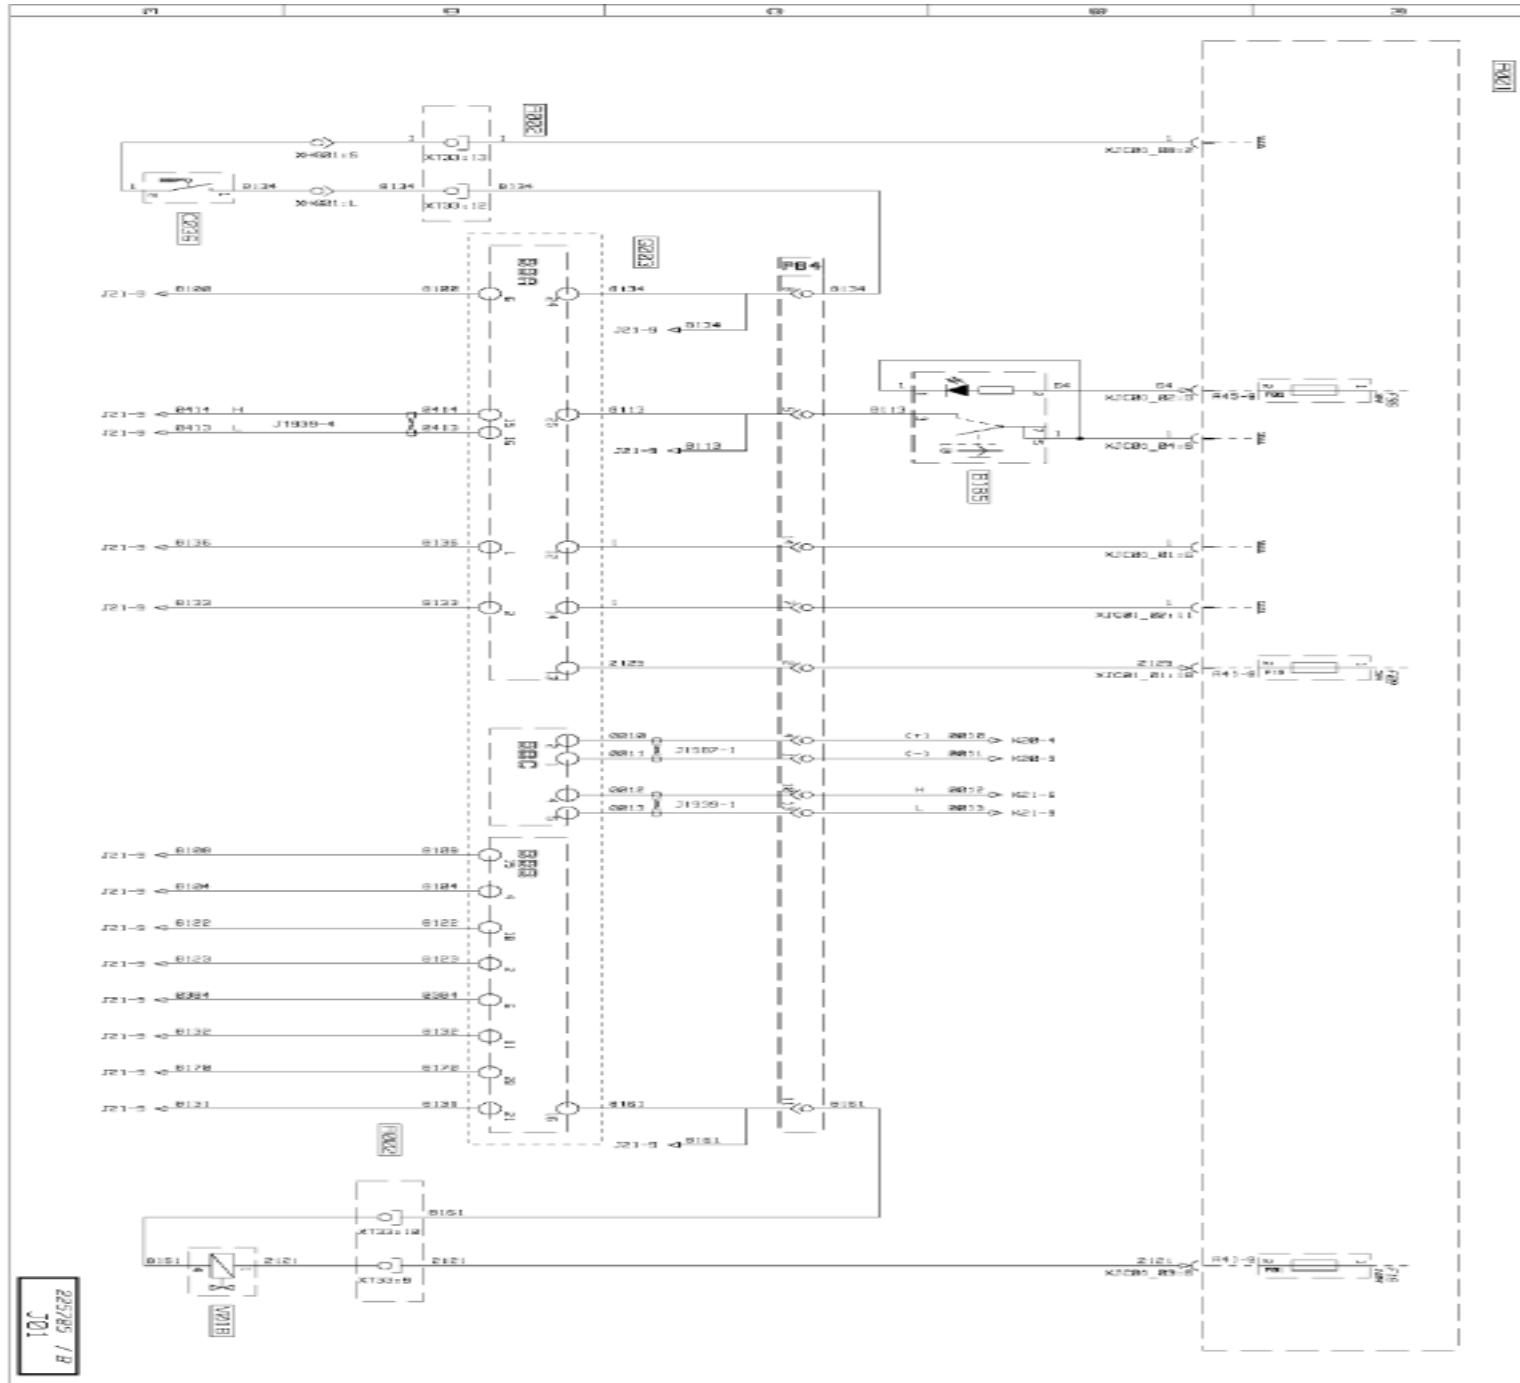

JO1
22523C / B

A001

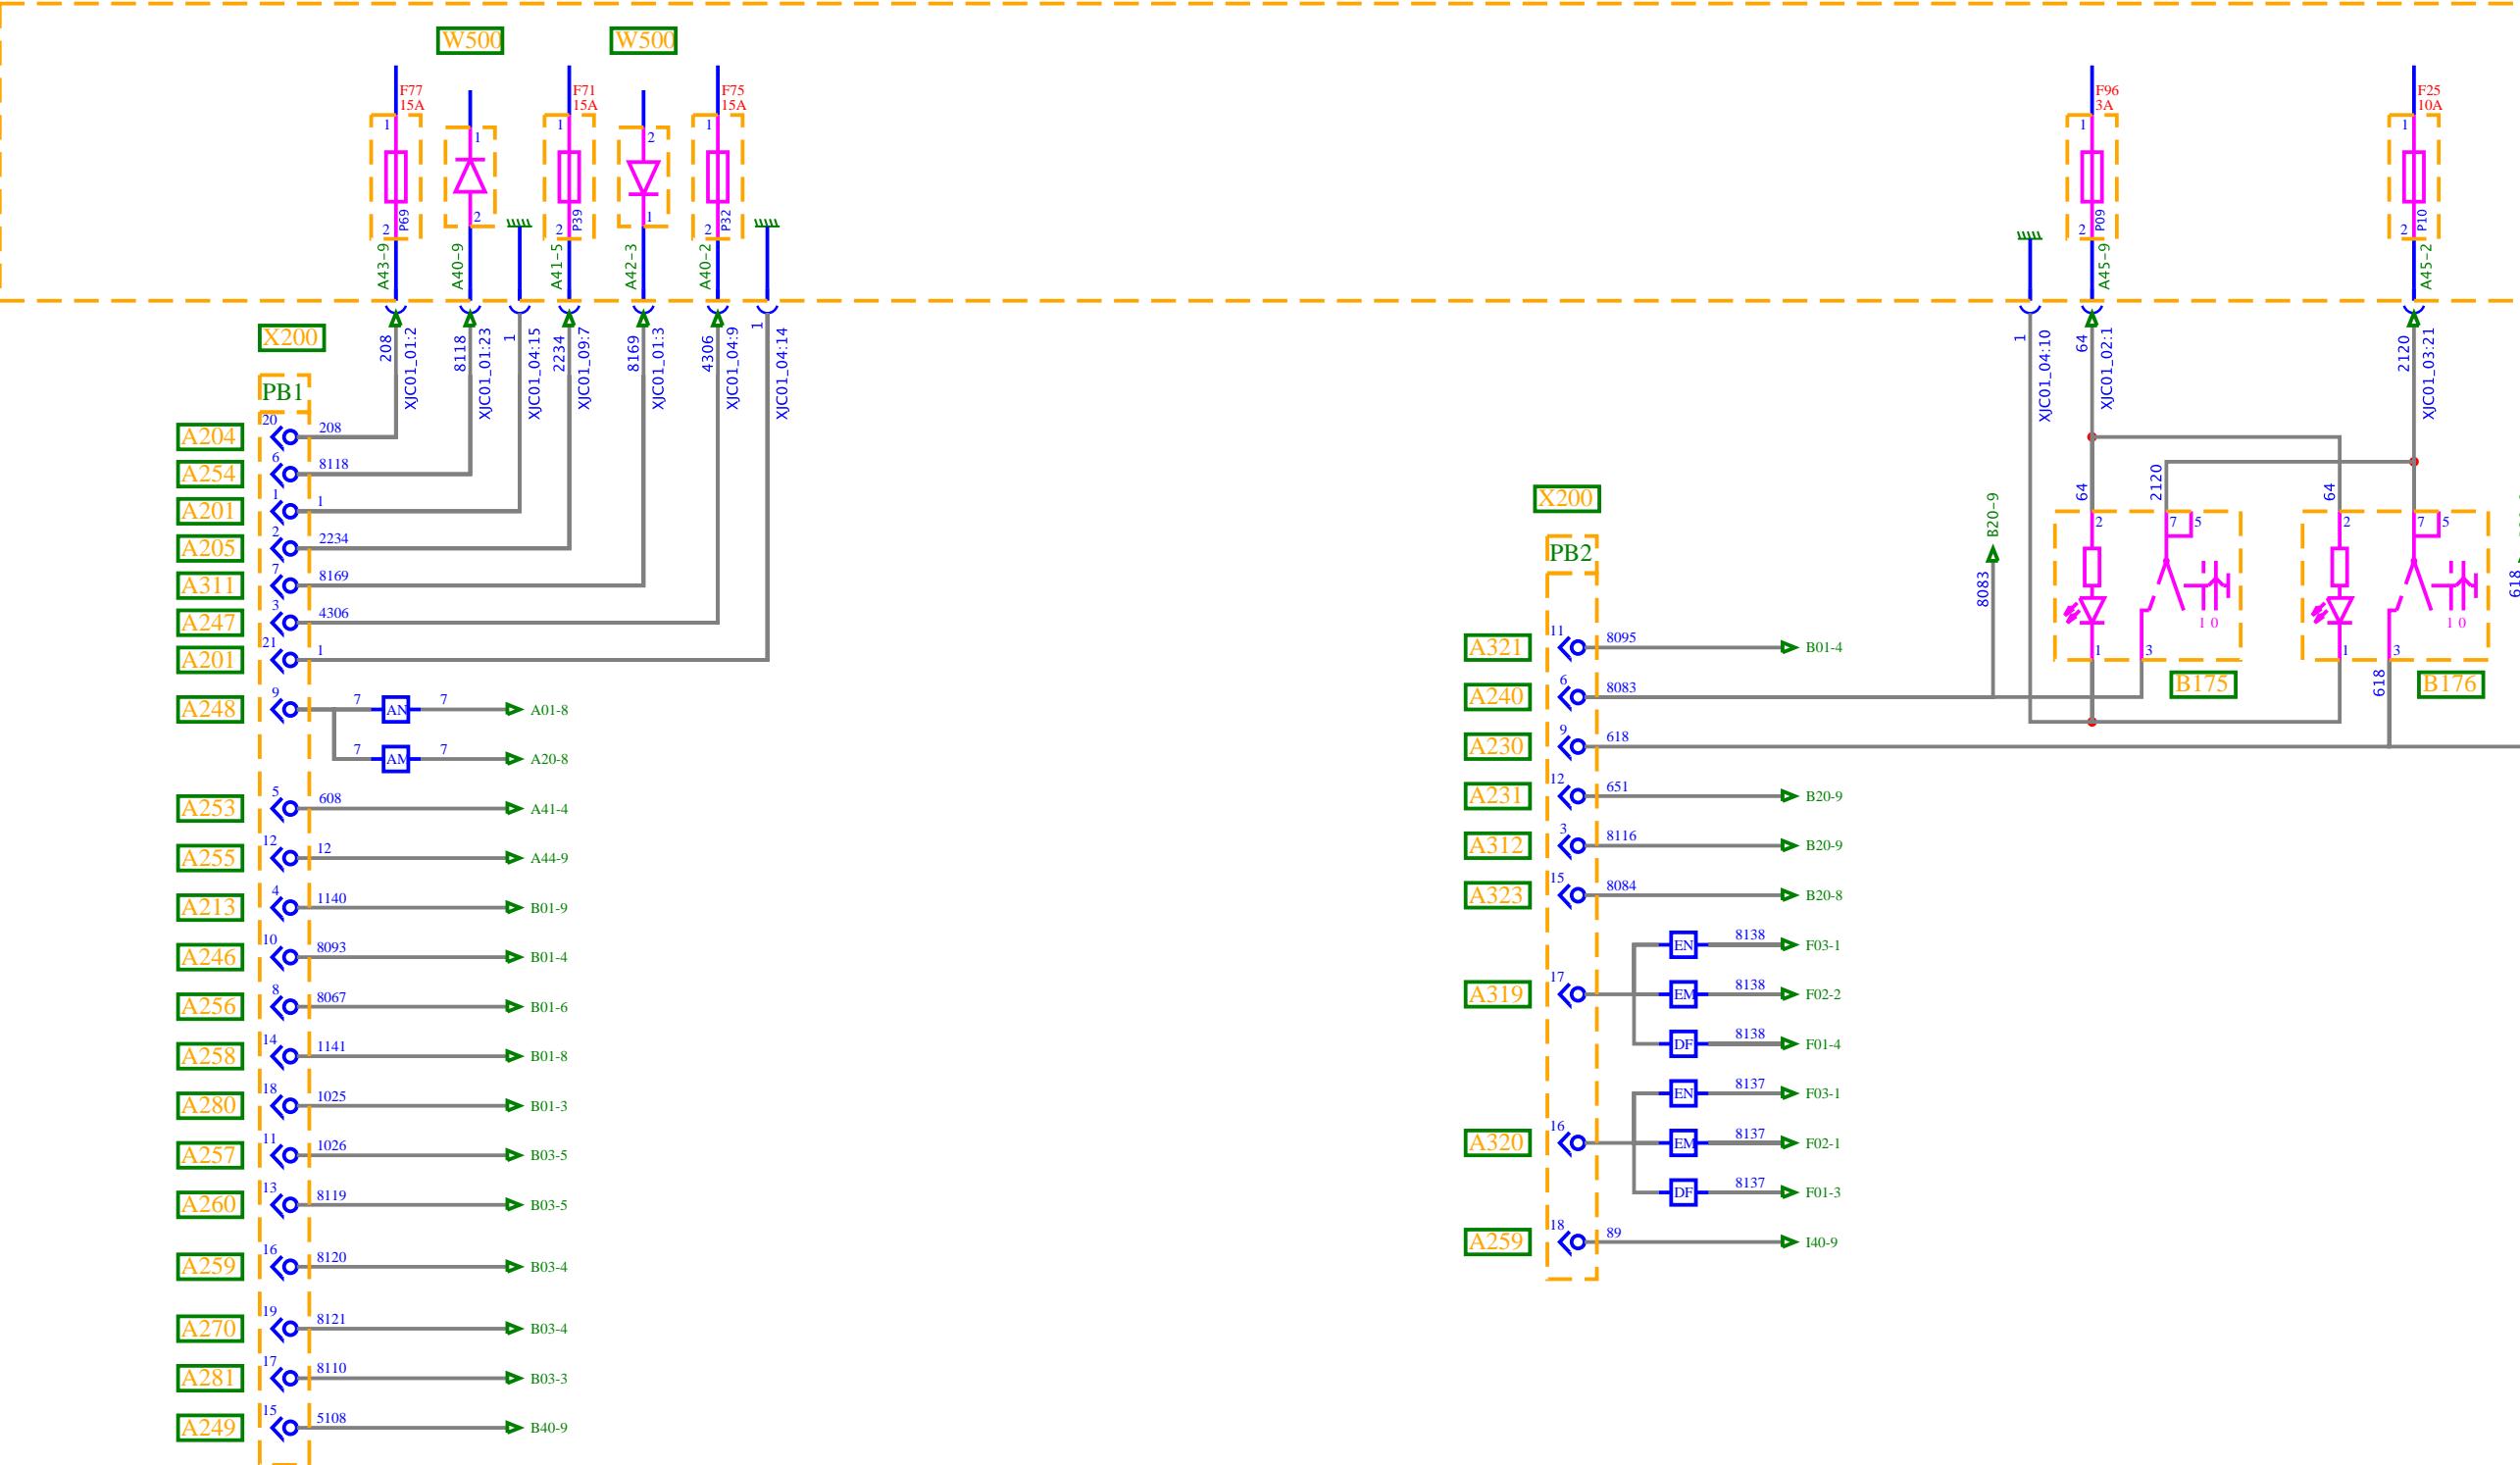

Available power supplies (1/2)

Key to appliances

| Code | Function | Location |
|------|--|-----------|
| A001 | Cab electrical distribution box | B2c |
| A201 | Available power supply (vehicle earth) | B2c / C5d |
| A204 | Available power supply (after master switch) | B2c / C5d |
| A205 | Available power supply (after ignition) | C5d |
| A213 | Available power supply (PTO N°1) | B2c |
| A230 | Available power supply (equipment in "road" position warning pictogram) | B2c |
| A231 | Available power supply (equipment in "working" position warning pictogram) | B2c |
| A240 | Available power supply (lighting) | B2c |
| A246 | Available power supply (PTO N°1 control) | B2c |
| A247 | Available power supply (alternator information, engine running) | B2c |
| A248 | Available power supply (alternator information, engine speed) | B2c |
| A249 | Available power supply (tachograph corrected speed information) | B2c |
| A253 | Available power supply (reversing information) | B2c |
| A254 | Available power supply (parking brake information) | B2c |
| A255 | Available power supply (gearbox neutral information) | B2c |
| A256 | Available power supply (chassis-mounted engine speed control actuation demand) | B2c |
| A257 | Available power supply (selection of engine speed N°1) | B2c |
| A258 | Available power supply (selection of engine speed N°2) | B2c |
| A259 | Available power supply (engine speed acceleration demand) | B2c |
| A260 | Available power supply (engine speed deceleration demand) | B2c |
| A270 | Available power supply (main engine speed automatic return) | B2c |
| A280 | Available power supply (low speed) | B2c |
| A281 | Available power supply (engine stop control) | B2c |
| A311 | Available power supply (PTO 1 engaged information) | B2c |
| A312 | Available power supply (equipment in dangerous position) | B2c |
| A319 | Available power supply (suspension level control) | B2c |
| A320 | Available power supply (suspension level actuation control) | B2c |
| A321 | Available power supply (6 km/h limitation) | B2c |
| A323 | Available power supply (alarm stop) | B2c |

| | | |
|------|---|-----|
| B175 | Pre-arrangement for bodybuilder N° 1 control | C2b |
| B176 | Pre-arrangement for bodybuilder N° 2 control | C2b |
| W500 | Diode(s) | B2c |
| X200 | Available power supplies connector | B2c |

AM: with ADR equipment


AN: without ADR equipment


DF: with electronic air suspension tractor vehicle **4x2**

EM: with **4x2 - 6x2** vehicle rear electronic air suspension

EN: with **4x2 - 6x2** vehicle integral electronic air suspension

Available power supplies (1/2)

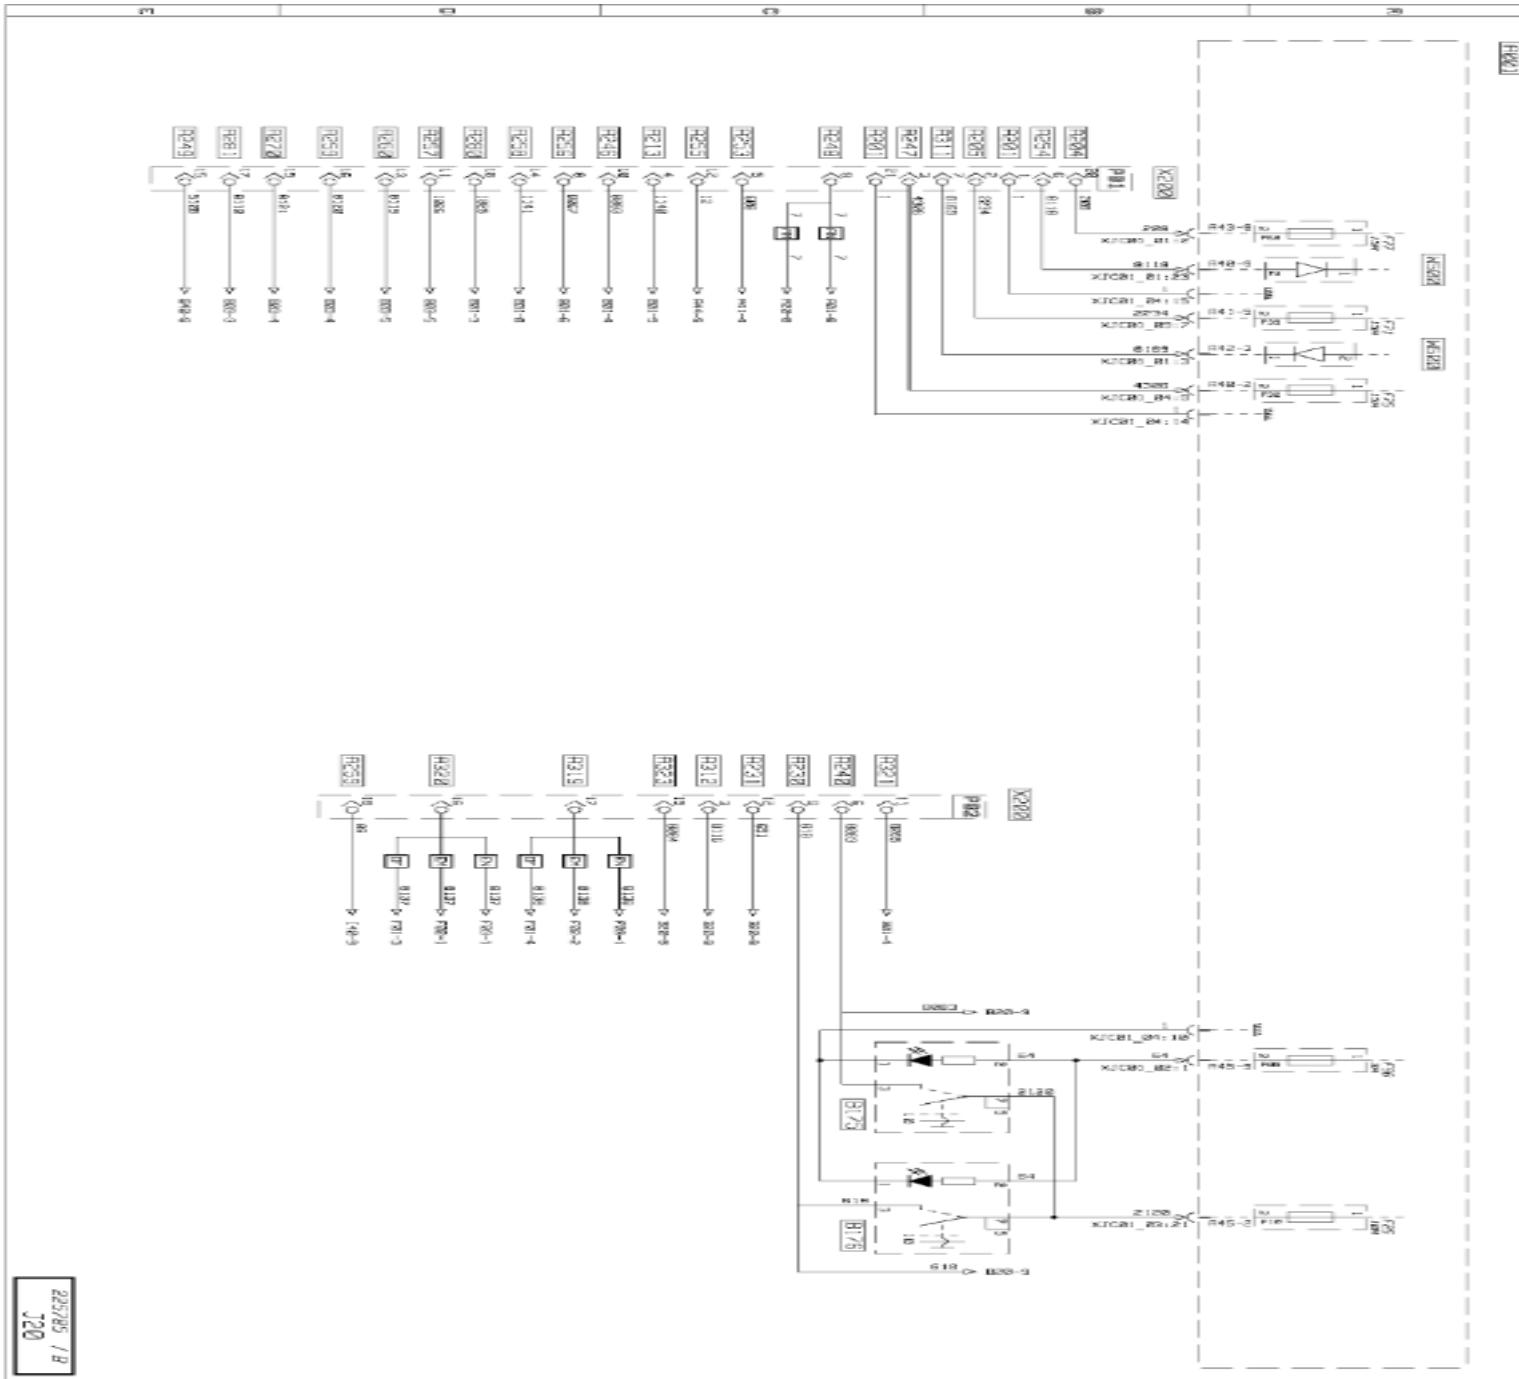

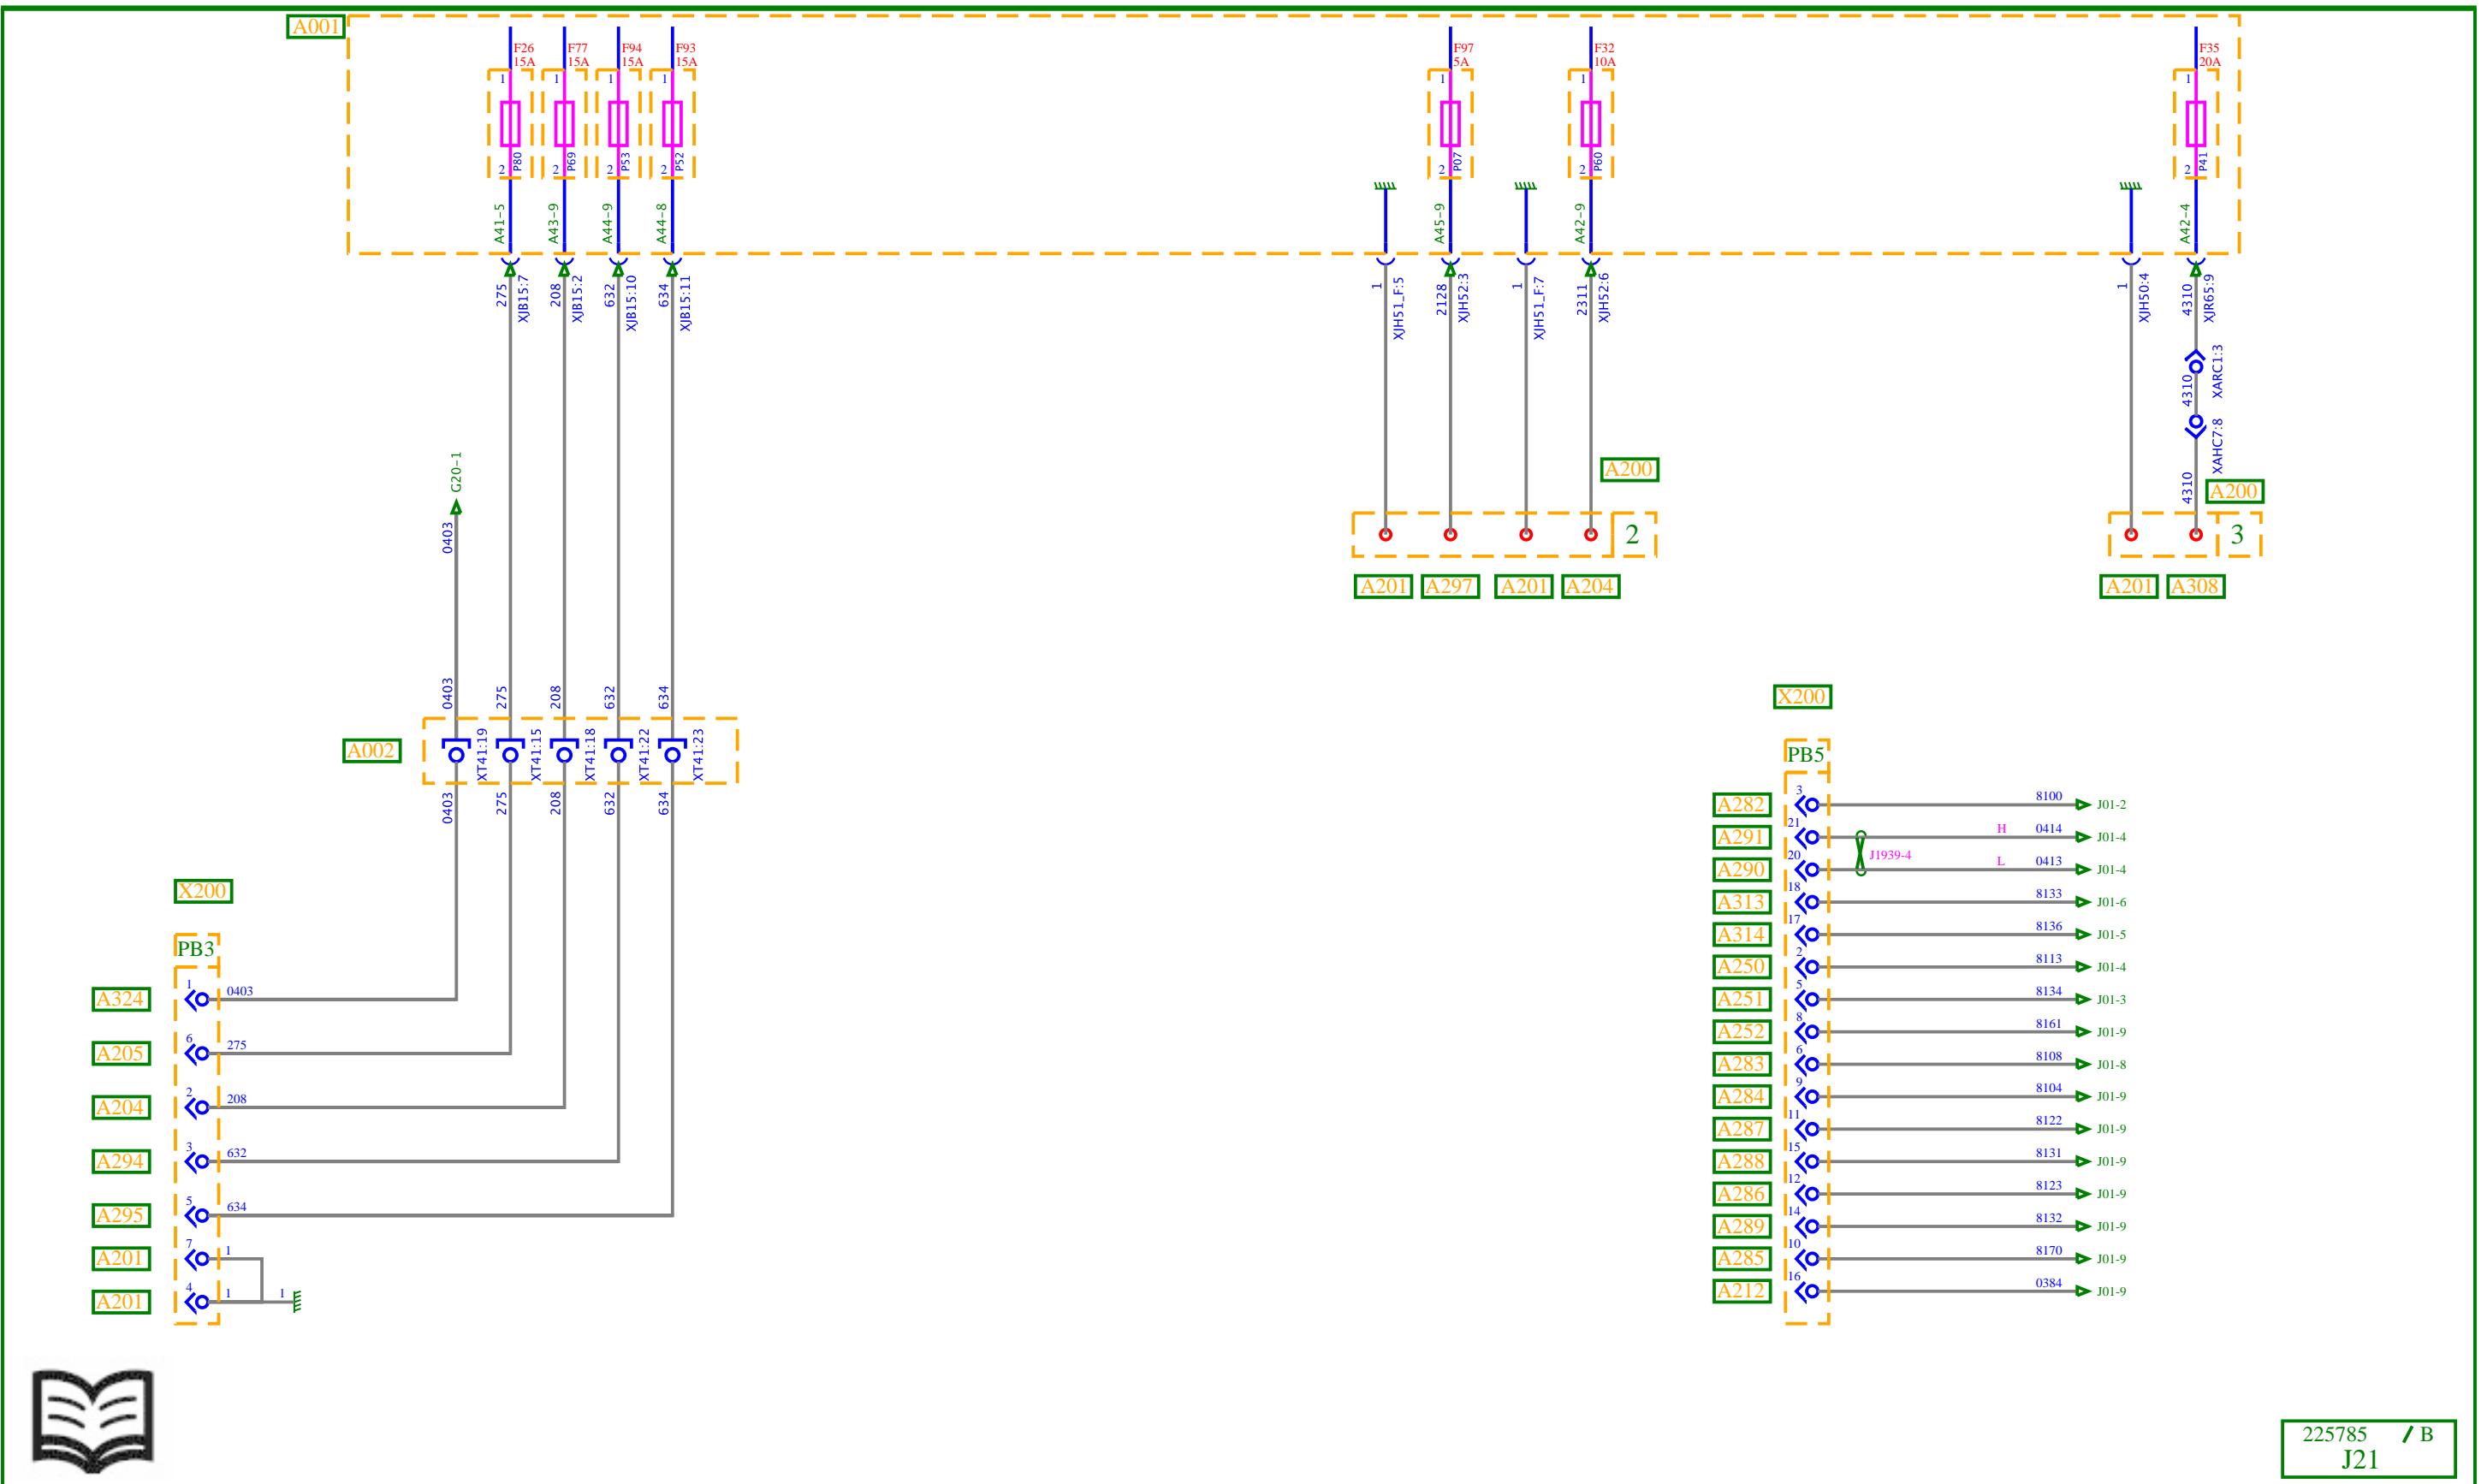



Available power supplies (2/2)

Key to appliances

| Code | Function | Location |
|------|---|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| A200 | Available power supply (insulated cut wires) | B2c |
| A201 | Available power supply (vehicle earth) | B2c |
| A204 | Available power supply (after master switch) | B2c |
| A205 | Available power supply (after ignition) | C5d |
| A212 | Available power supply (engine speed) | B2c |
| A250 | Available power supply (PTO 2 control) | B2c |
| A251 | Available power supply (PTO 2 warning light) | B2c |
| A252 | Available power supply (PTO 2 solenoid valve piloting) | B2c |
| A282 | Available power supply (engine start control) | B2c |
| A283 | Available power supply (engine starting information) | B2c |
| A284 | Available power supply (engine alert) | B2c |
| A285 | Available power supply (parameter definable frequency-related output) | B2c |
| A286 | Available power supply (PLC 2 min. output) | B2c |
| A287 | Available power supply (PLC 1 min. output) | B2c |
| A288 | Available power supply (PLC 1 min. input) | B2c |
| A289 | Available power supply (PLC 2 min. input) | B2c |
| A290 | Available power supply (high level CAN bus J1939) | B2c |
| A291 | Available power supply (low level CAN bus J1939) | B2c |
| A294 | Available power supply (LH rear marker light(s)) | C5d |
| A295 | Available power supply (RH rear marker light(s)) | C5d |
| A297 | Available power supply (night lighting) | B2c |
| A308 | Pre-arrangement for onboard management (screen and keyboard) | C2a |
| A313 | Available power supply (CAN bus disabling) | B2c |
| A314 | Available power supply (engine speed set-point validation) | B2c |
| A324 | Available power supply (rigid perimetric protection module) | C5d |
| X200 | Available power supplies connector | B2c |

Available power supplies (2/2)

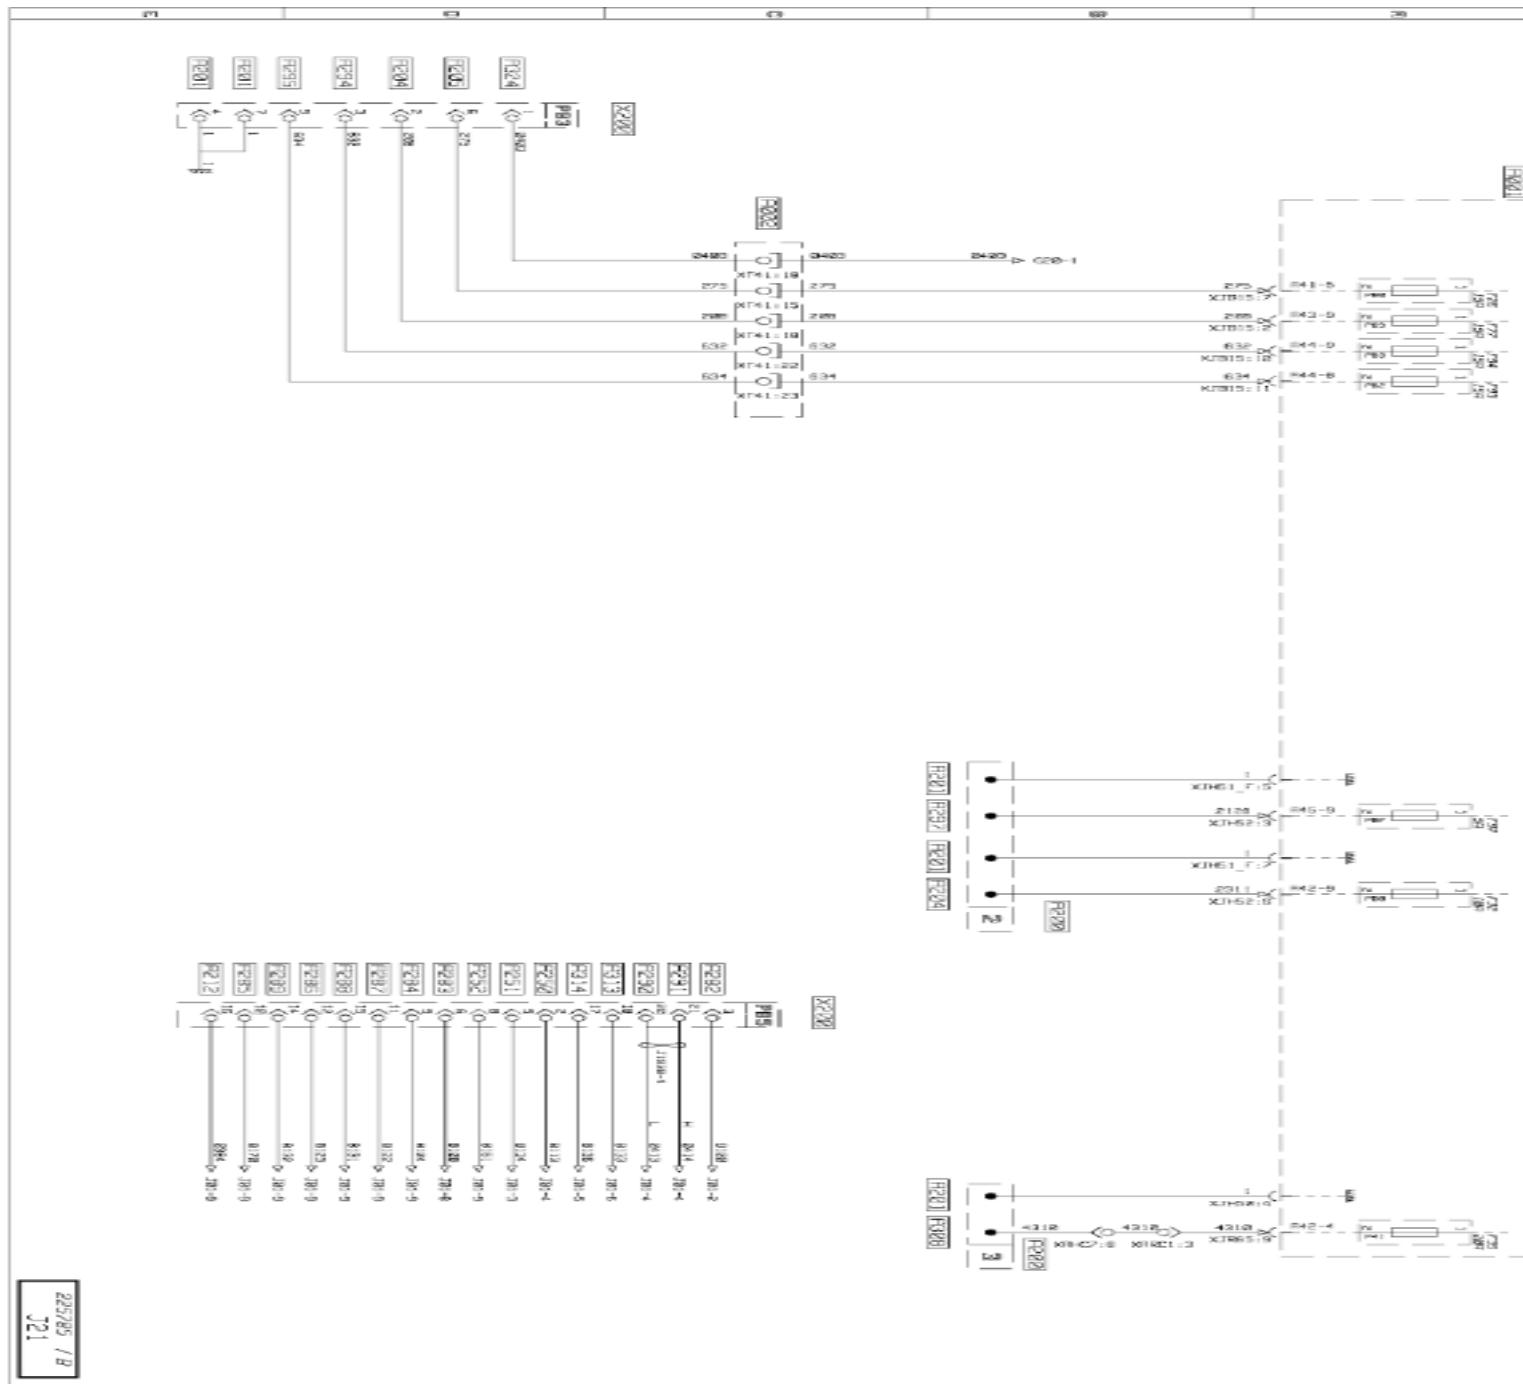

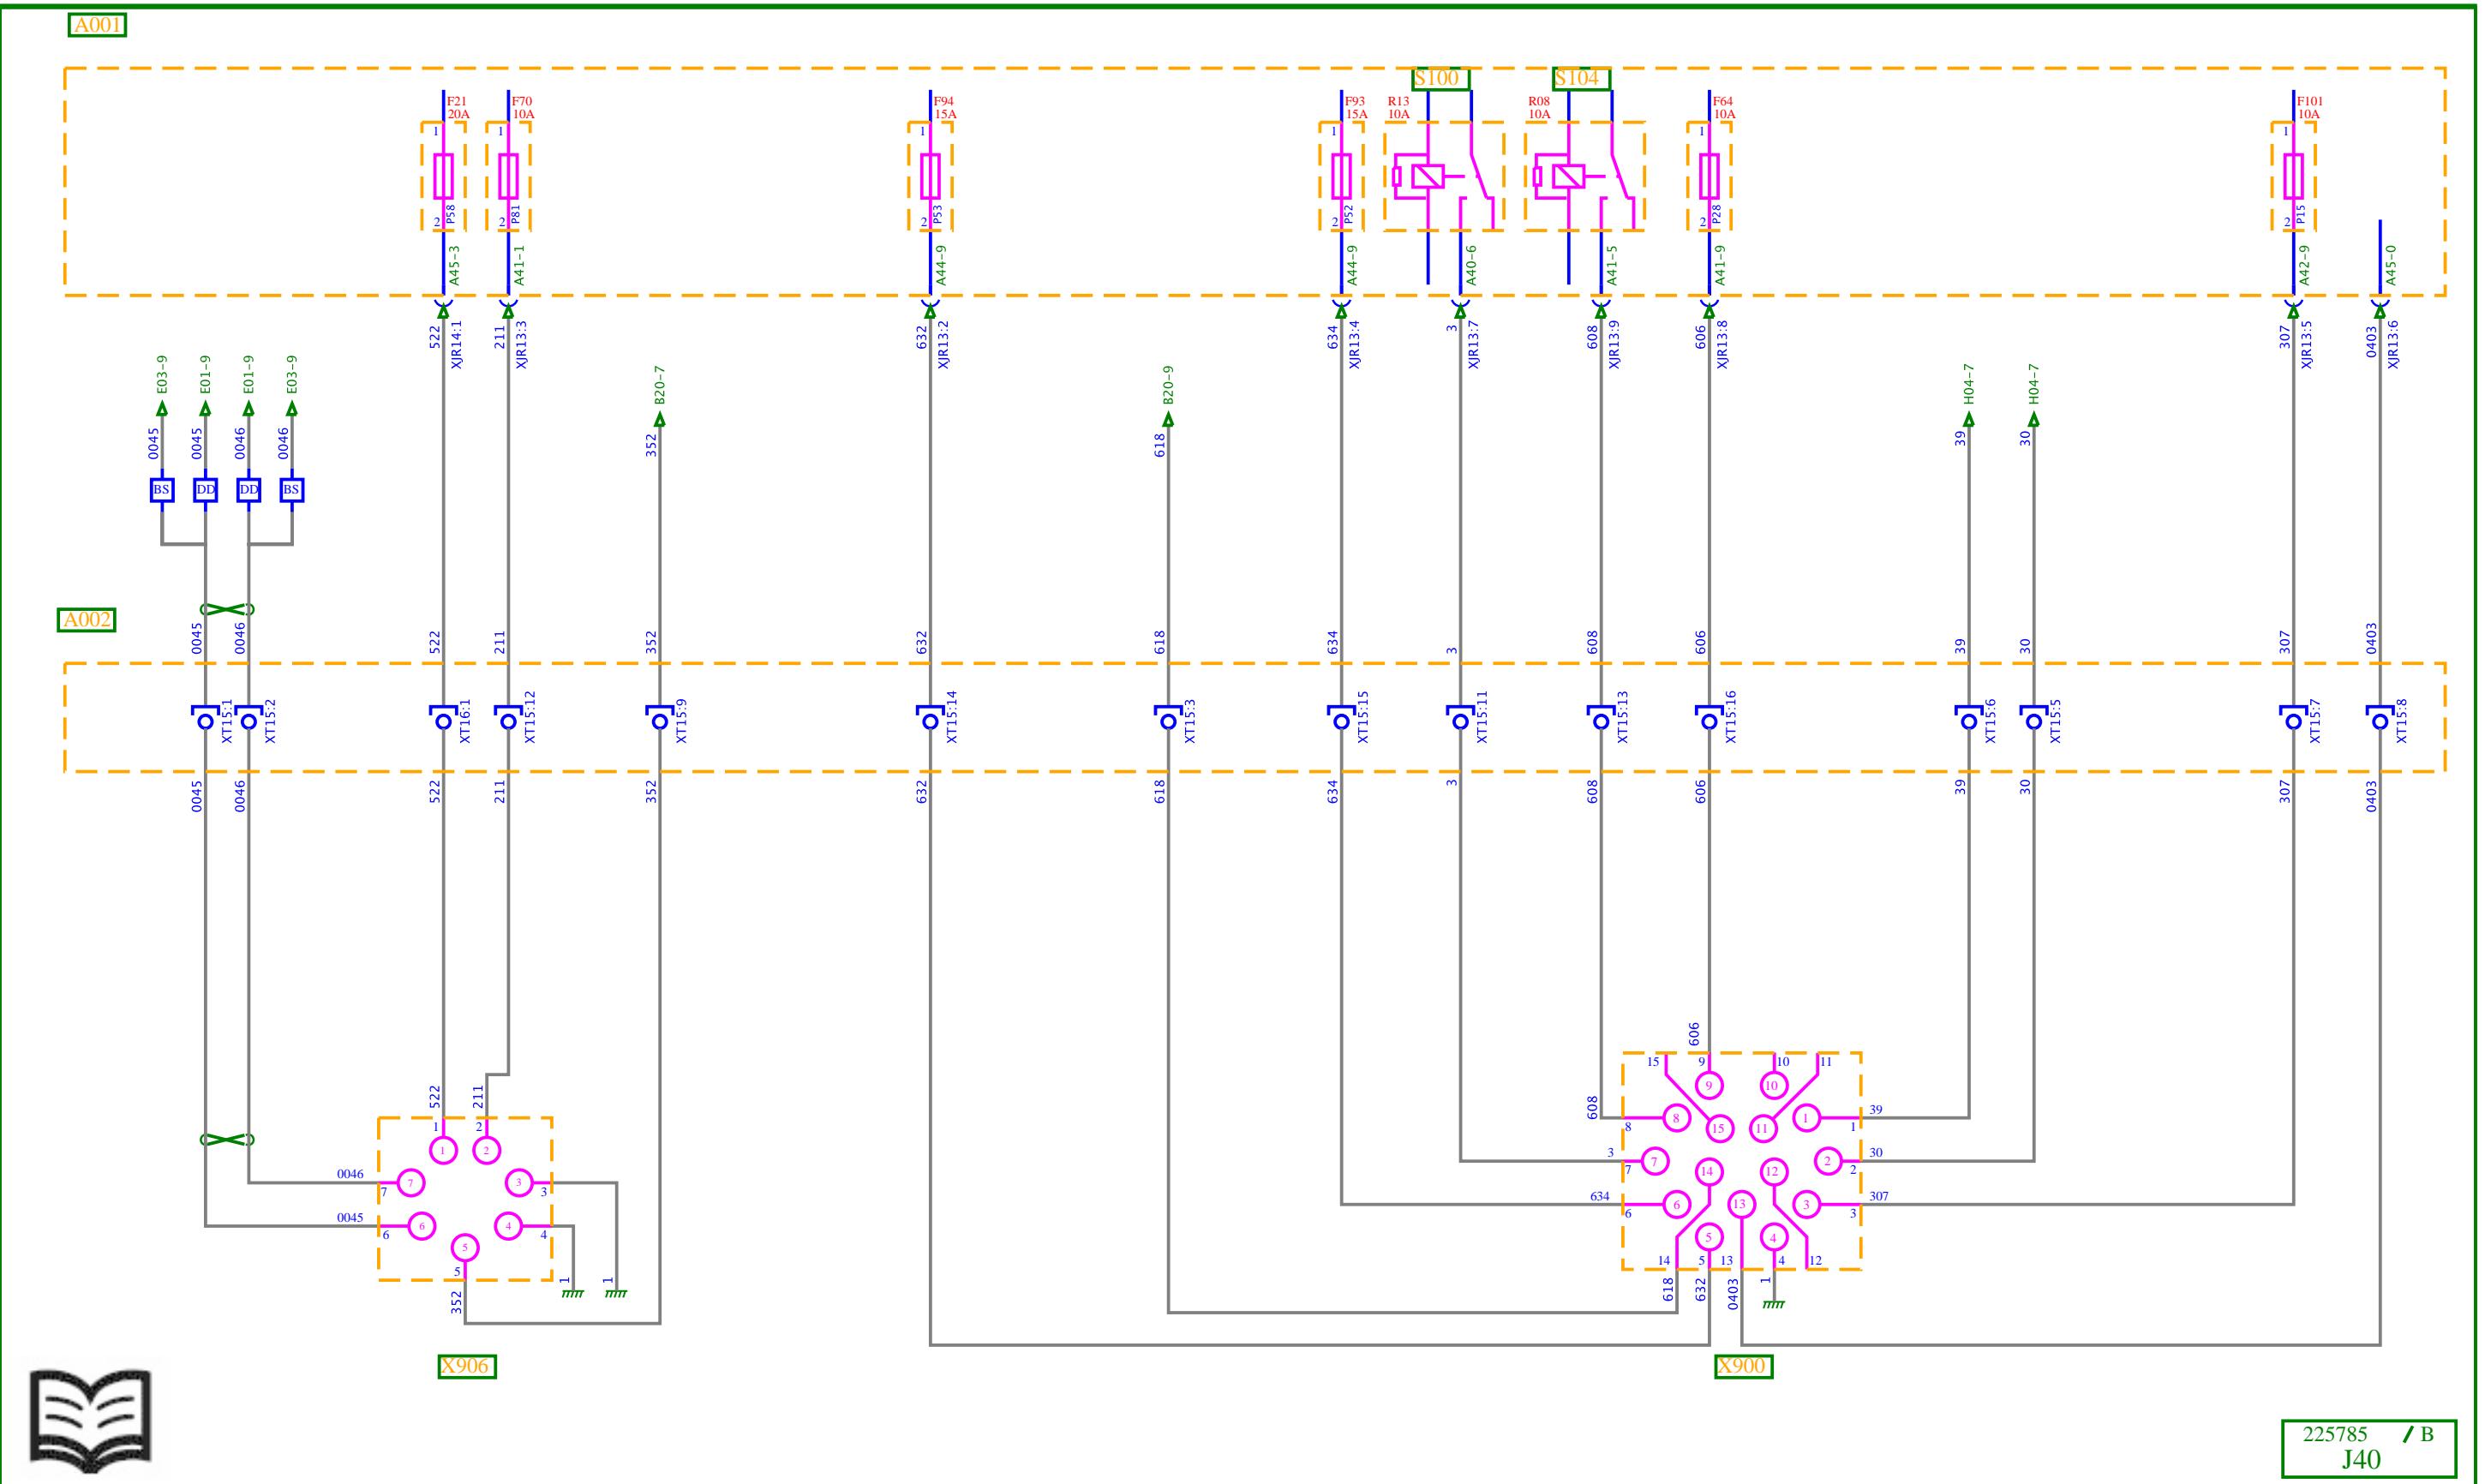

225785 / B
J40

Trailer sockets


Key to appliances


| Code | Function | Location |
|------|-------------------------------------|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| S100 | Stop lights power supply relay | B2c |
| S104 | Reversing lights power supply relay | B2c |
| X900 | 15-pin trailer socket | B4b |
| X906 | ABS/EBS trailer socket | B4b |

BS: 4x2 vehicles

DD: 6x2 vehicles

Trailer sockets

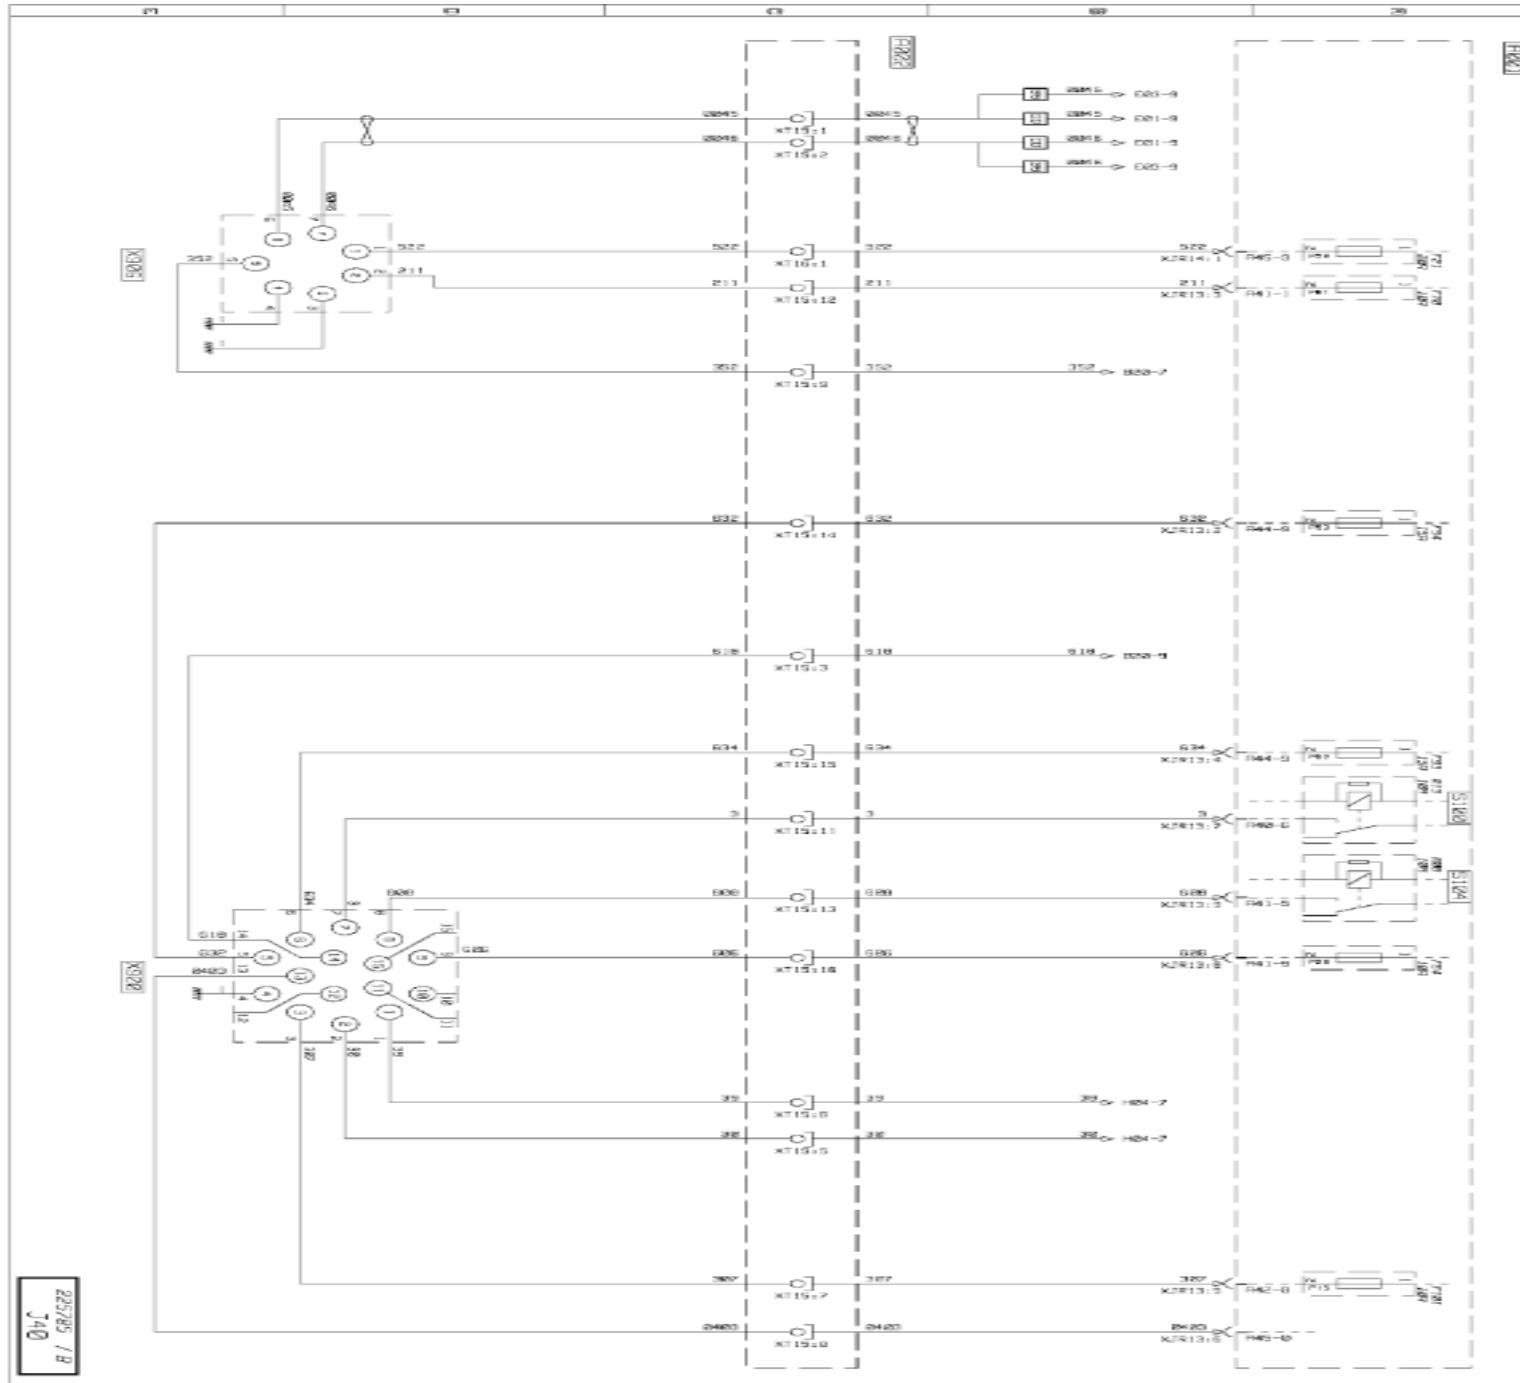

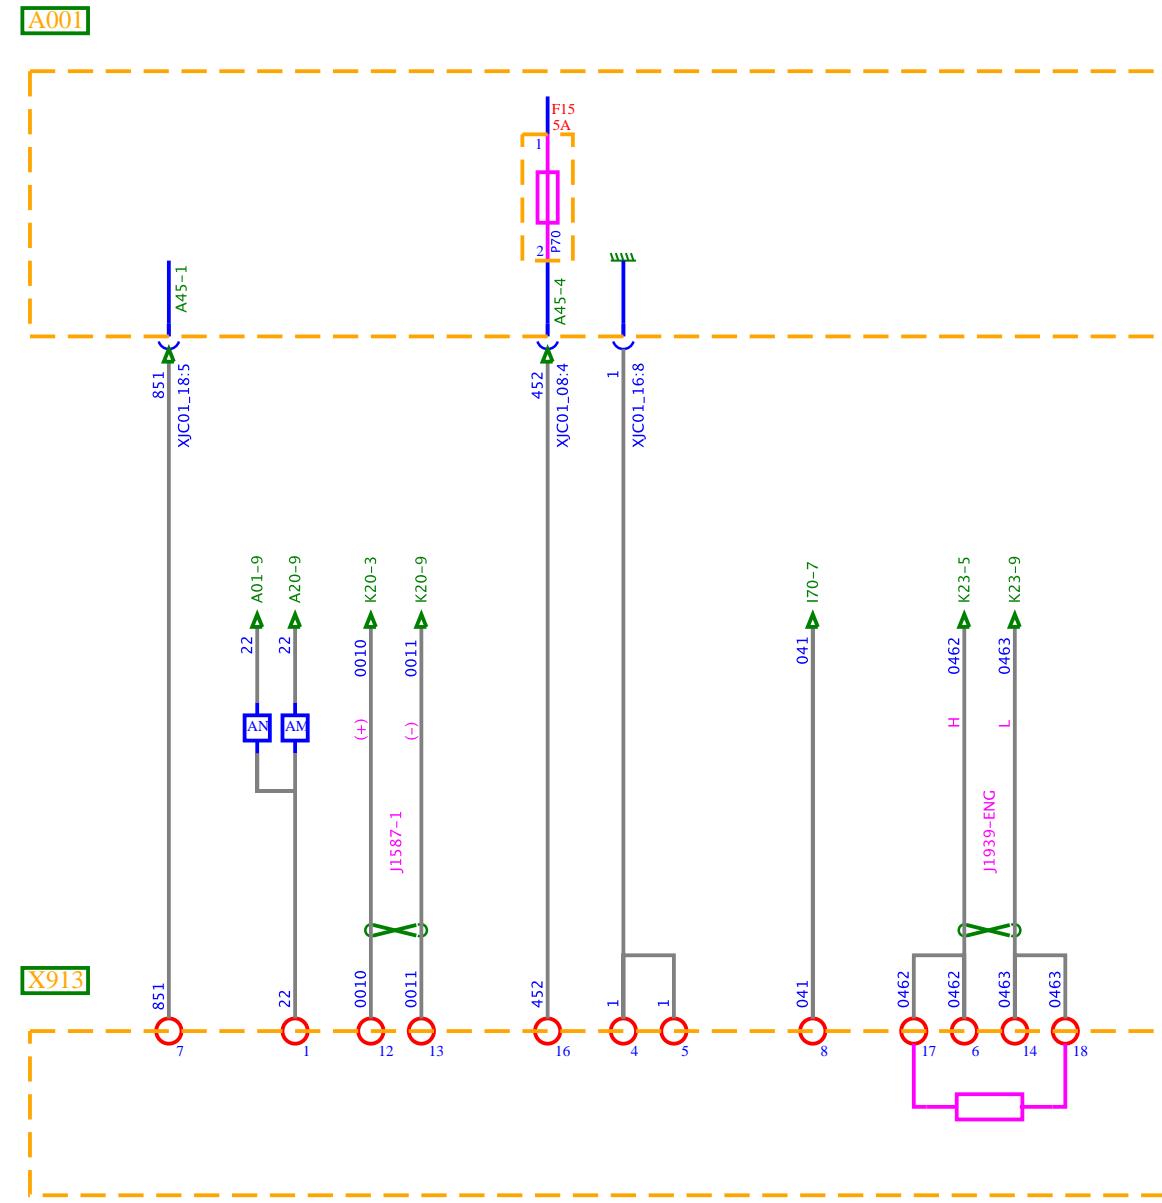

225785 / B
K01

Diagnostic socket


Key to appliances

| Code | Function | Location |
|------|---------------------------------|----------|
| A001 | Cab electrical distribution box | B2c |
| X913 | Vehicle diagnostic socket | C3c |

AM: with ADR equipment

AN: without ADR equipment


Diagnostic socket

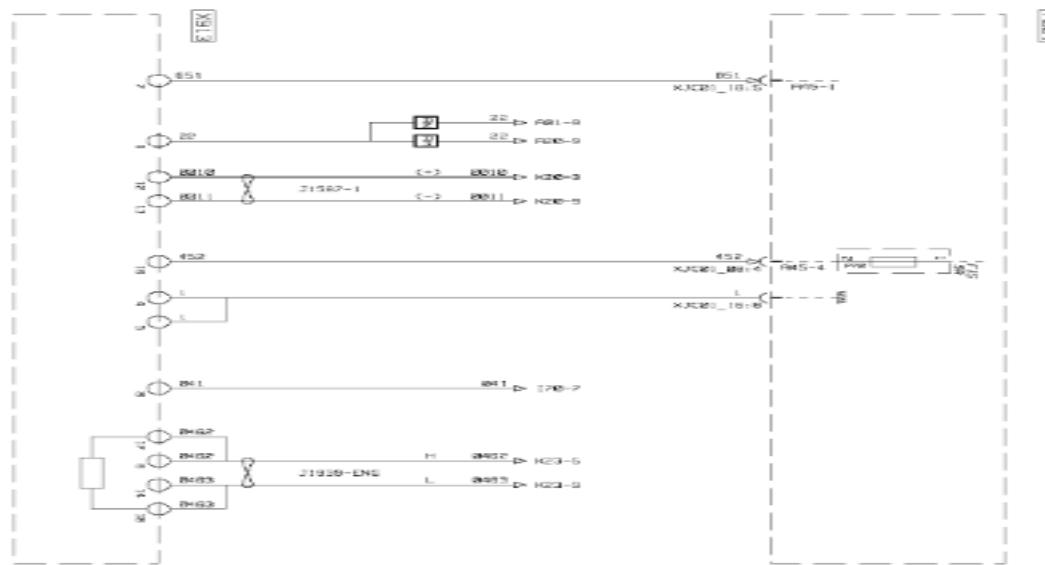


225785 / B
K01

J1587-1

(+)

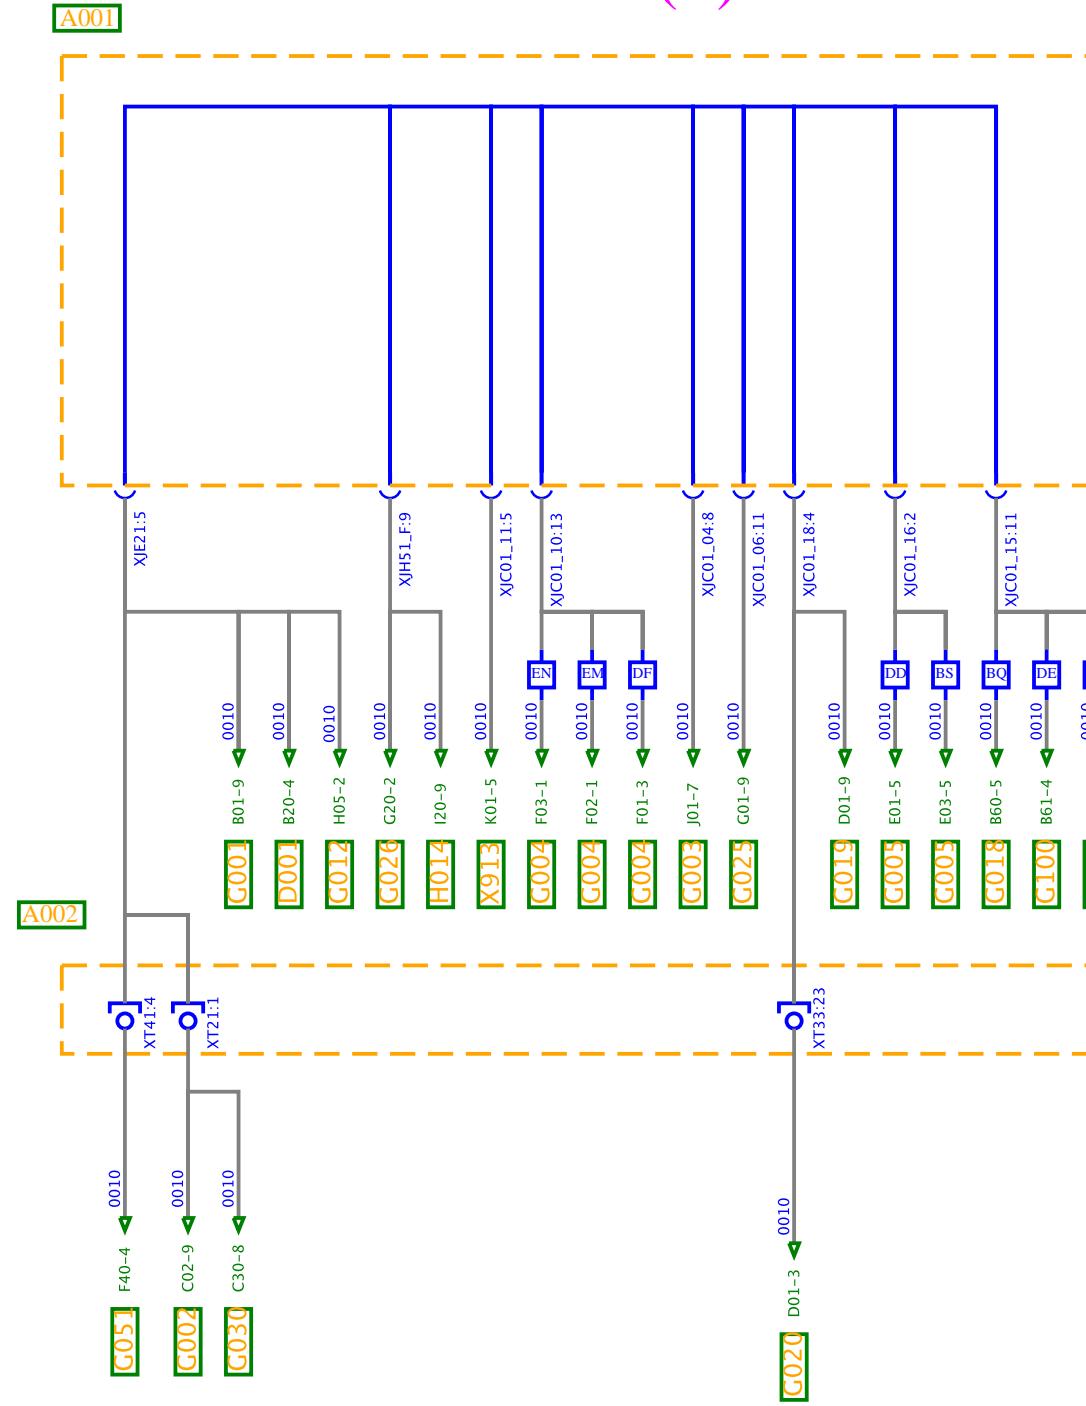

(-)

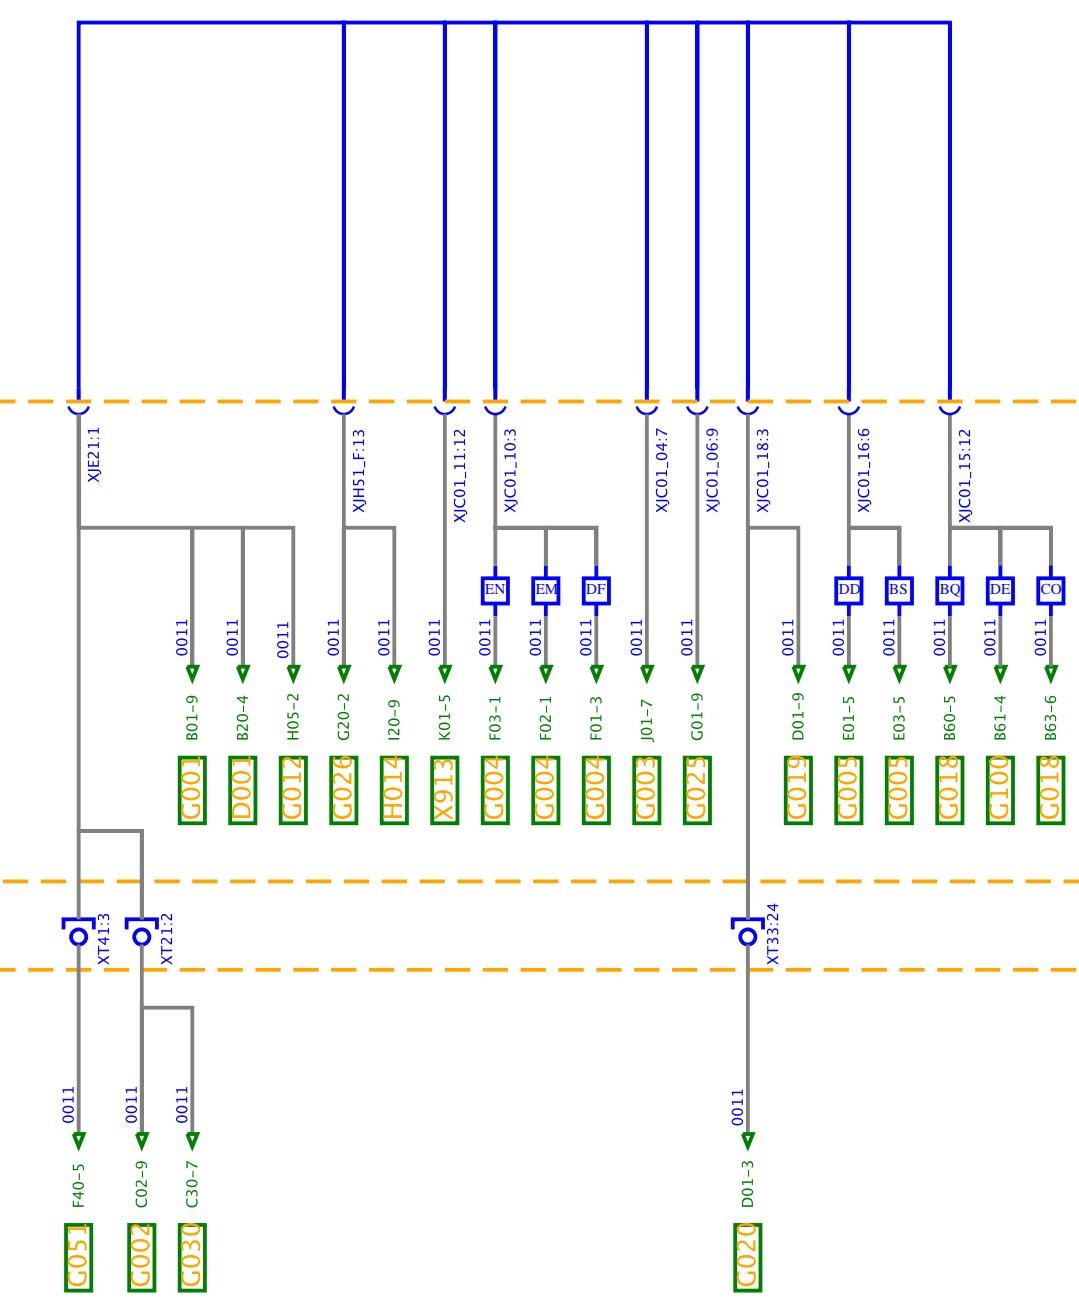

CAN BUS transfer zone J1587-1

Key to appliances

| Code | Function | Location |
|------|--|----------|
| A001 | Cab electrical distribution box | B2c |
| A002 | Chassis-cab connection box | B2c |
| D001 | Principal information display | C2b |
| G001 | Vehicle management ECU | B2c |
| G002 | Engine management ECU | B3c |
| G003 | Bodybuilder pre-arrangement management ECU | B2c |
| G004 | Air suspension ECU | B2b |
| G005 | EBS braking management ECU | B2b |
| G012 | Lighting and signalling management ECU | B2c |
| G018 | Onboard management interface ECU | B2b |
| G019 | Gear selector ECU | C2b |
| G020 | Automatic transmission ECU | C4d |
| G025 | Engine immobilizer ECU | C2c |
| G026 | Alarm ECU | C1a |
| G030 | AdBlue supply management pump module | C4d |
| G051 | Air production management ECU | C4d |
| G100 | Datamax gateway ECU | C2b |
| H014 | Radio set | C2a |
| X913 | Vehicle diagnostic socket | C2c |

BQ: with **FMS** equipment

CO: with **OPTIFLEET** equipment

DE: with **DATAMAX** equipment

BS: 4x2 vehicles


DD: 6x2 vehicles

DF: with electronic air suspension tractor vehicle **4x2**

EM: with **4x2 - 6x2** vehicle rear electronic air suspension


EN: with **4x2 - 6x2** vehicle integral electronic air suspension

CAN BUS transfer zone J1587-1

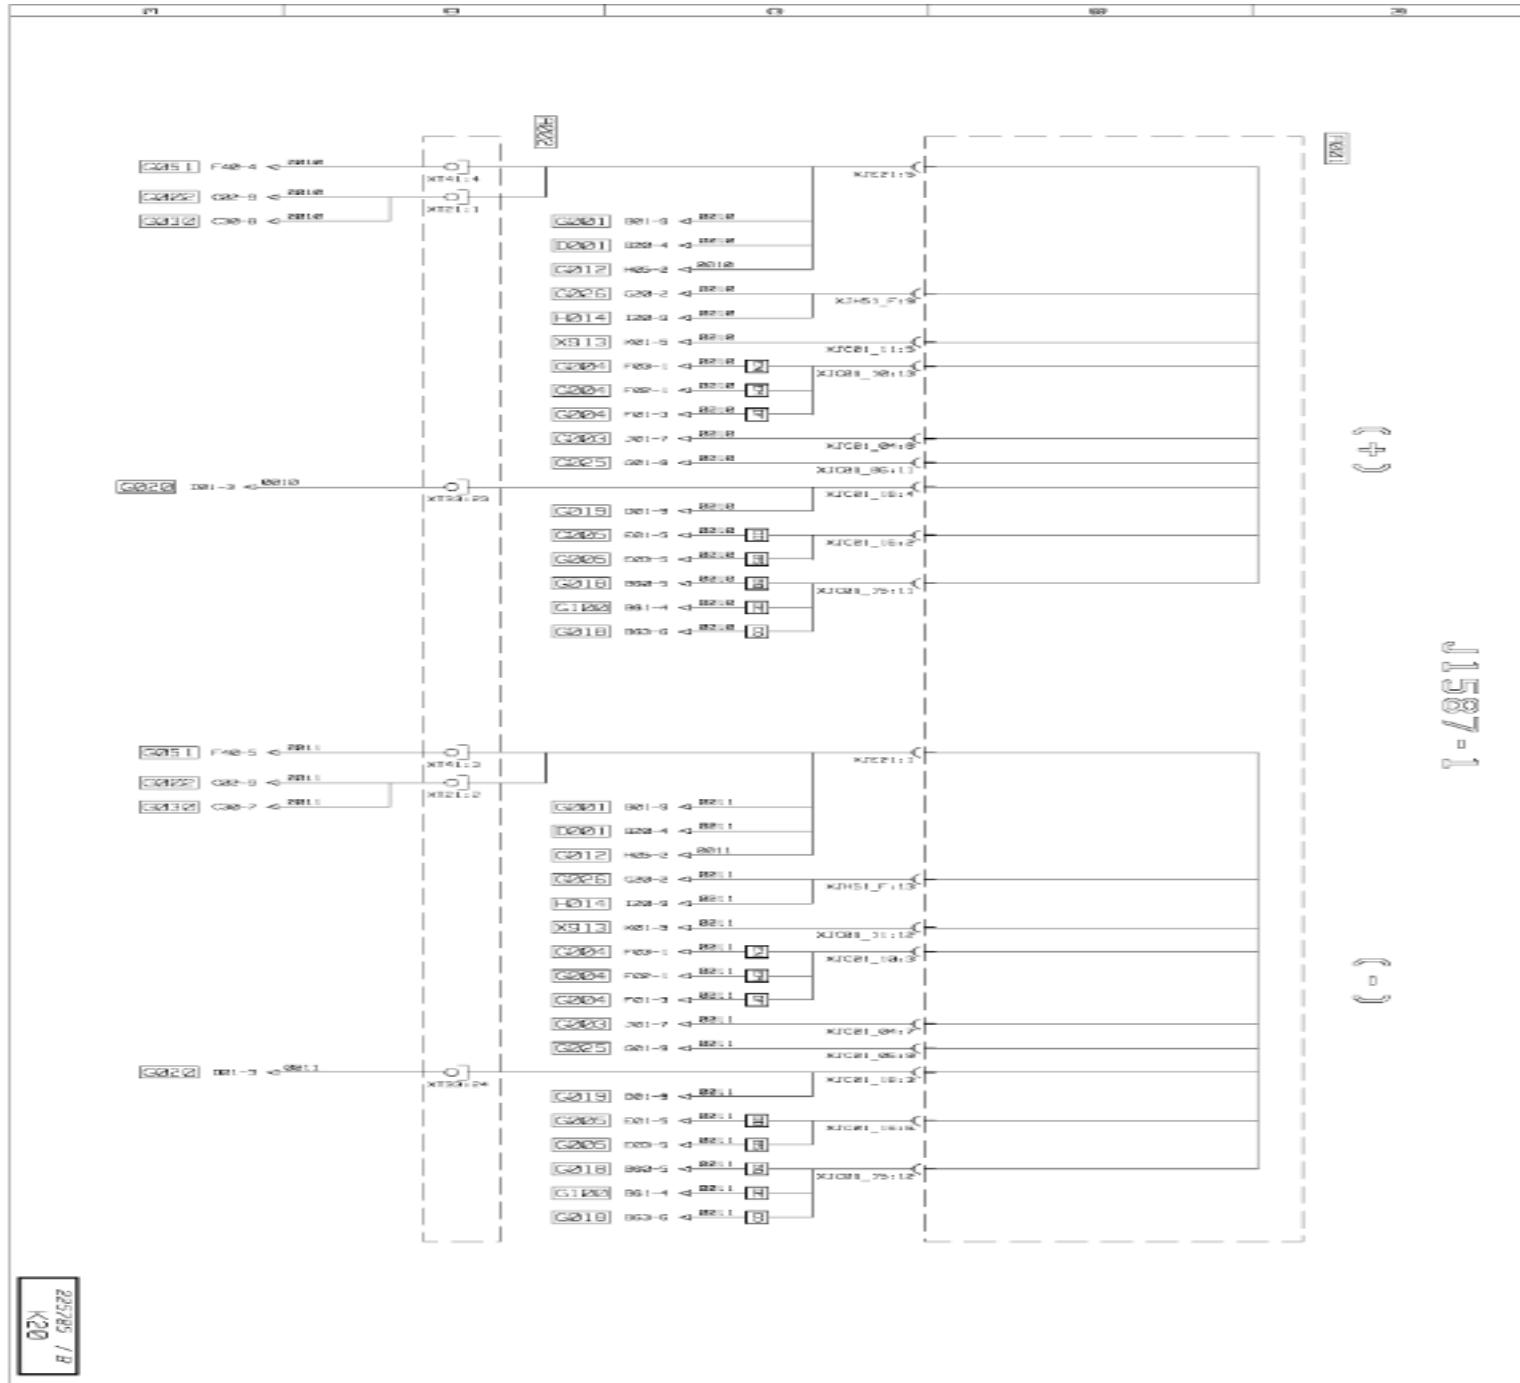


CAN J1939-1

H

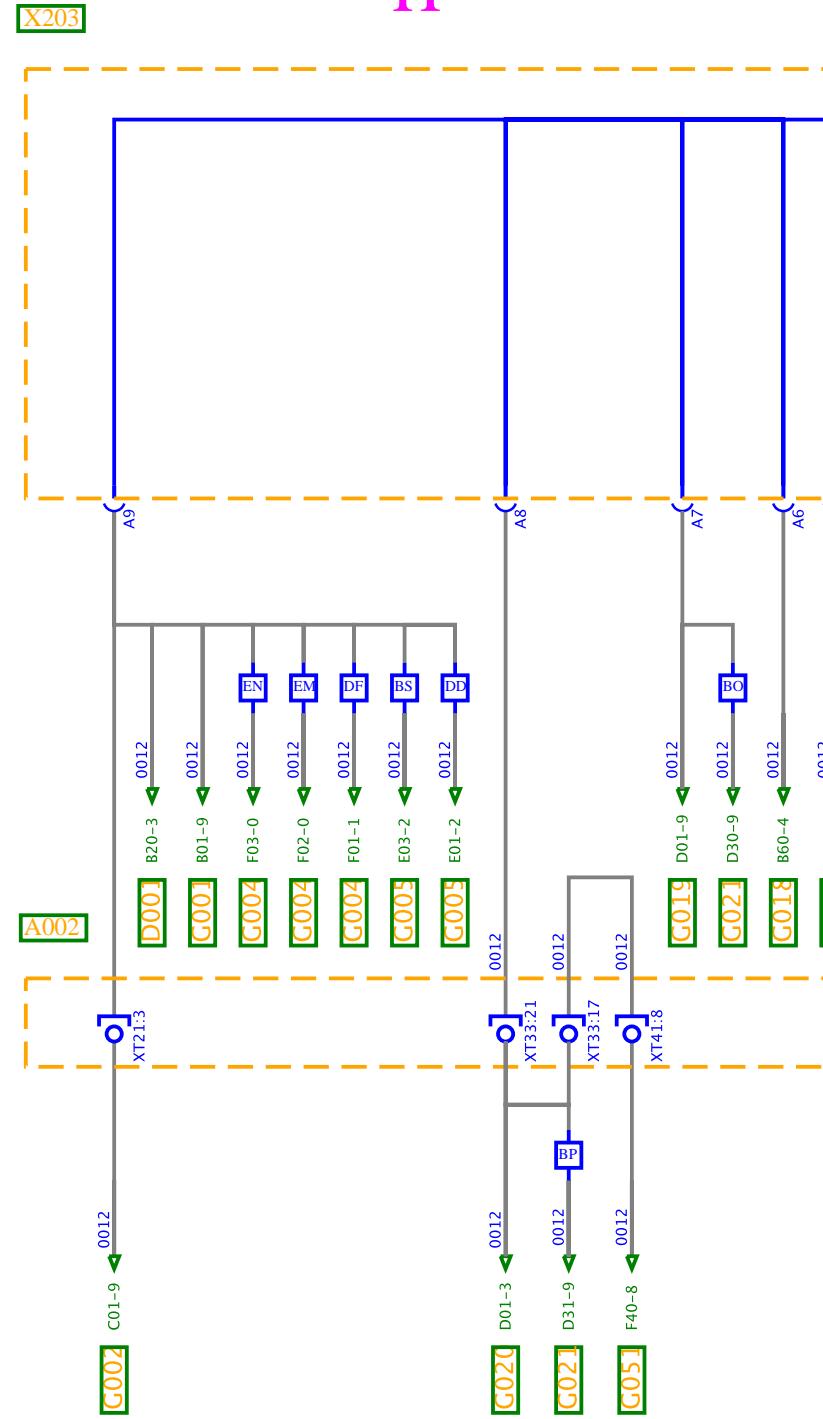

L

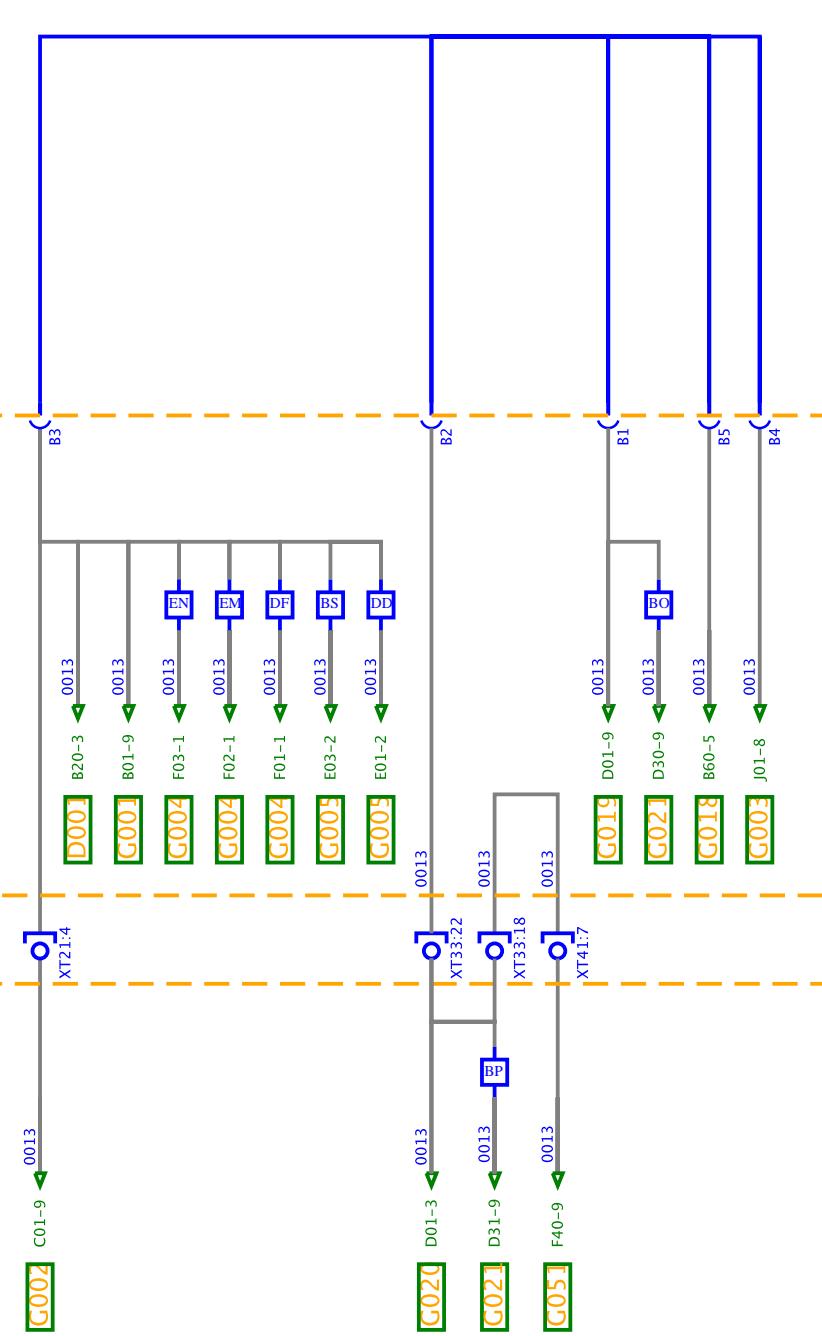

CAN BUS transfer zone J1939-1

Key to appliances

| Code | Function | Location |
|------|--|----------|
| A002 | Chassis-cab connection box | B2c |
| D001 | Principal information display | C2b |
| G001 | Vehicle management ECU | B2c |
| G002 | Engine management ECU | B3c |
| G003 | Bodybuilder pre-arrangement management ECU | B2c |
| G004 | Air suspension ECU | B2b |
| G005 | EBS braking management ECU | B2b |
| G018 | Onboard management interface ECU | B2b |
| G019 | Gear selector ECU | C2b |
| G020 | Automatic transmission ECU | C4d |
| G021 | Hydraulic retarder ECU | B2c |
| G051 | Air production management ECU | C4d |
| X203 | CAN bus grouping connector | B2c |

BO: with **ECOSPLIT 2** hydraulic retarder

BP: with **ECOSPLIT 4** hydraulic retarder

BS: **4x2** vehicles


DD: **6x2** vehicles

DF: with electronic air suspension tractor vehicle **4x2**

EM: with **4x2 - 6x2** vehicle rear electronic air suspension

EN: with **4x2 - 6x2** vehicle integral electronic air suspension


CAN BUS transfer zone J1939-1

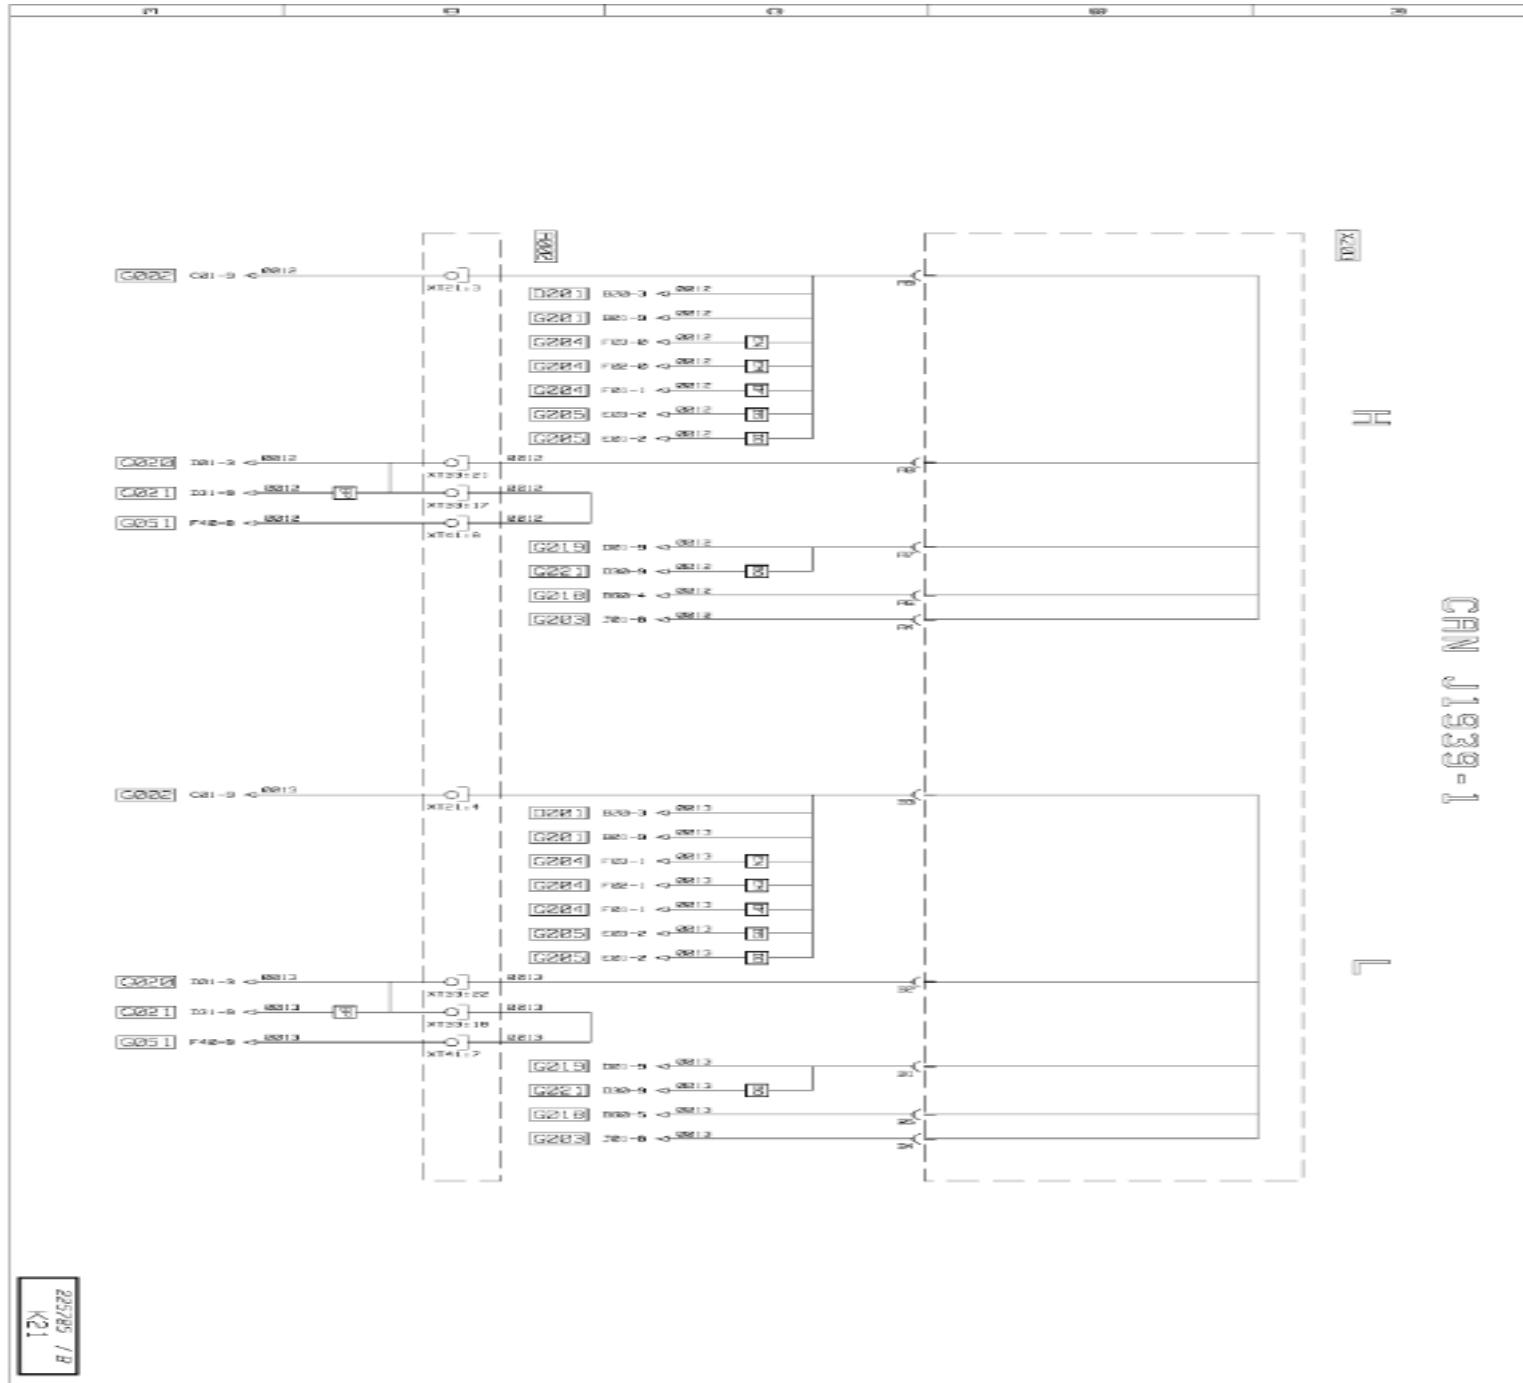


CAN J1939-1

CAN J1939-2

H

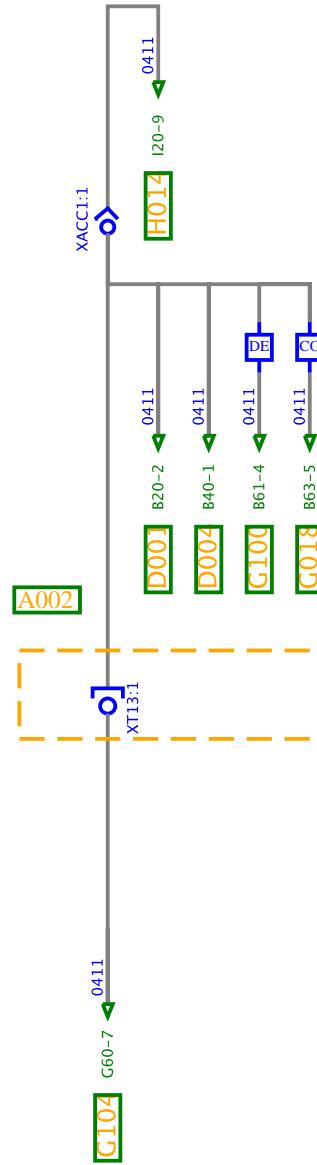

L

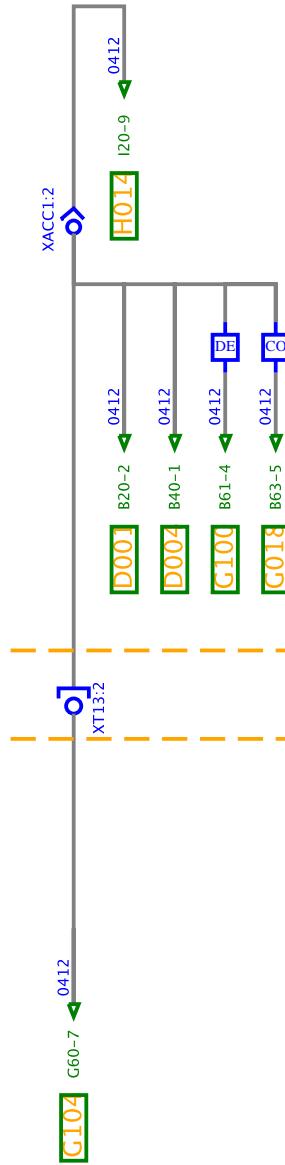

CAN BUS transfer zone J1939-2

Key to appliances


| Code | Function | Location |
|------|----------------------------------|----------|
| A002 | Chassis-cab connection box | B2c |
| D001 | Principal information display | C2b |
| D004 | Tachograph | C2b |
| G018 | Onboard management interface ECU | B2b |
| G100 | Datamax gateway ECU | C2b |
| G104 | Tyre pressures monitoring ECU | B7d |
| H014 | Radio set | C2a |

CO: with **OPTIFLEET** equipment

DE: with **DATAMAX** equipment

CAN BUS transfer zone J1939-2


CIN 11939-2

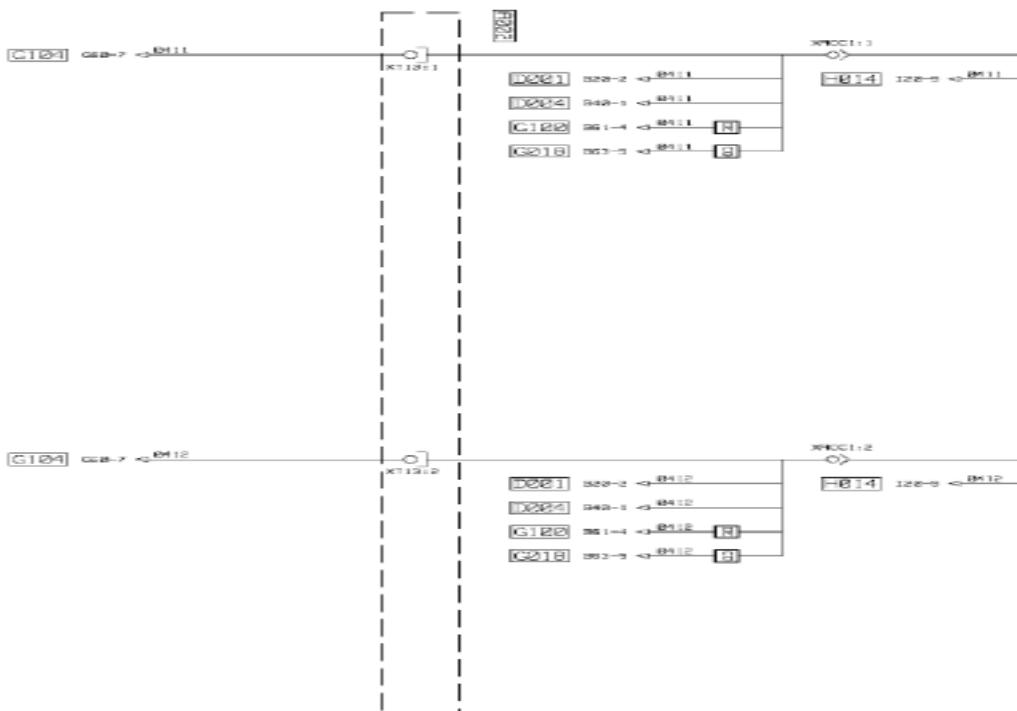


222
R / K
25523C

CAN J1939-ENG

H

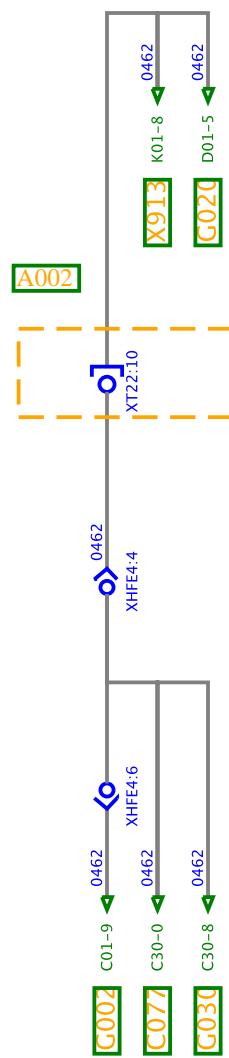

L

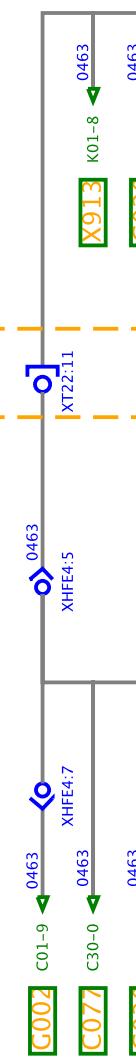

CAN BUS transfer zone J1939-ENG

Key to appliances


| Code | Function | Location |
|------|--|----------|
| A002 | Chassis-cab connection box | B2c |
| C077 | Nitrogen oxides gases concentration sensor | C4d |
| G002 | Engine management ECU | B3c |
| G020 | Automatic transmission ECU | B3d |
| G030 | AdBlue supply management pump module | C4d |
| X913 | Vehicle diagnostic socket | C2c |

CAN BUS transfer zone J1939-ENG

CAN J1939-ENG

H

L

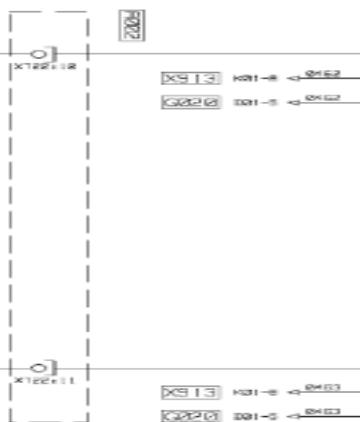

A / 2252
C2K